Nella Surface Mounted Downlight Installation Instructions

Nella S	Surface M	ounted Do	ownlight l	nstall	atior	n Instructio	ons		BANT HAVIT	
			Pro	oduct Sp	ecifica	tions				
Model No.	HV5841S-BLK-12V	HV5841S-WHT-12V	HV5842S-BLK-12V	HV58425-W	/HT-12V	HV5843S-BLK-12V	HV5843S-WHT-12V	HV58445-BLK-12V	HV5844S-WHT-12V	
	HV5841S-BLK-EXT-12V	HV5841S-WHT-EXT-12V	HV5842S-BLK-EXT-12V	HV5842S-BLK-EXT-12V HV5842S-WHT-EXT-12V						
Name	Nella Baffled									
Material		Aluminium								
Colour	Black	White	Black	Whit		Black	White	Black	White	
Installation Type	Ceiling - Surface Mounted									
IP Rating Input Voltage	IP54									
Protection Class	12v DC - Constant Voltage 3 (Low Voltage - No Earth Required)									
Lamp Base	3 (LOW Voltage - No Earth Required)									
Lamp Wattage	1x	7w	1x 1	2w		1x 18	W	1	x 24w	
Colour Temp			5-Colour - 2700k, 3000	k , 4000k, 5000k	, 5700k	5-Colour - 2700k, 3000k , 4000k, 5000k, 5700k		5-Colour - 2700k, 3000k , 4000k, 5000k, 5700k		
Lumens	499lm, 512lm, 558lm, 593lm, 601lm		688lm, 840lm, 916lm, 931lm, 1004lm		lm	1371lm, 1410lm, 1518lm, 1600lm ,1617lm		1554lm, 1638lm, 1796lm, 1893lm, 1968lm		
CRI		> 90								
Wiring	Parallel									
Dimmable	No									
Warranty	3 Years Replacement*									
HV5841 Dim	ensions HV5	841-EXT Dimensions	HV5842 Dime	ensions	HV58	42-EXT Dimensions	HV5843 Dime	nsions H	V5844 Dimensions	
Ø75 —	100	200 	Ø90 —	120		240	Ø113	140	0135	
HV5841 Mou	Inting Base Dimensio	ons HV5842	Mounting Base Dime	ensions	HV	5843 Mounting Base D	imensions	HV5844 Mounting	g Base Dimensions	
[] 8			8	8			e <u>i</u>		ei[
2828- 		- 0.						<u>3x (4x10</u> - <u>x x 4x</u> - <u>x x 4x}</u>		
Important Safety	y Issues:	,					J			
 Ensure all el Modificatio Havit Lighti Aluminium All o-rings a 	lectrical mains are disco n of this product will vo ng does not take respo and 304SS fittings mus ind seals must be in pla iay be updated at any t	nsibility for wrong instal t not be installed within ice correctly to maintain	allation. ation, incorrect use, or (5km of any salt water e warranty	use of installa nvironments.		al that does not belong n for most current version				

- Make sure that the electrical circuit is free of voltage (master switch off) 1
- 2. Remove base plate by twisting anti clockwise.
- 3. Unplug fitting from driver and set fitting aside
- 4. Install base plate in desired location using appropriate screws for application. If fitting is installed in an outdoor environment, Seal must stay in place to keep fittings IP Rating.
- 5. Using an appropriate 12v DC LED Driver - DO NOT CONNECT LIGHT FITTING DIRECTLY TO 240V
- Connect the cable If more than one fitting installed, wiring must be done in parallel.
- 6. 7. Reconnect plug from fitting to driver.
- 8. Fitting is preset to 3000k, To change slide switch inside fitting to desired colour temperature
- 9. Reattach fitting to base plate by twisting clockwise
- All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit. 10.

Steps for Installation of inserts:

- Inserts are held in by magnets, To remove pull on inside of insert and remove. 1.
- 2. Insert honey comb into new insert.
- 3. Push new insert into fitting allowing magnets to stick to fitting.

Must be installed by a licensed electrician

Contact Details:		Warranty Terms & Conditions*	Additional Information
143 Beauchamp Road Matraville NSW 2036 Australia	Tel: 02 9381 8300 Fax: 02 9666 8881 Email: sales@havit.com.au Web: www.havit.com.au		