Tivah Pendant Installation Instructions



" На√іт

- Aluminium and 30455 littings must not be installed within 5km of any salt water el All o-rings and seals must be in place correctly to maintain warranty
- All offings and sears must be in place conjectly to maintain warranty
 This form may be updated at any time due to product improvements, please check online installation form for most current version.
- Steps for Installation:
- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Loosen allen screws on side of base and separate mounting bracket from fitting.
- 3. Install the backing plate securely using appropriate screws for application.
- 4. Adjust cable and chain to desired length and remove excess.
- 5. Connect the cable:
 - 240v Models: Use wire with earth for 240v Models connect earth first then positive and then neutral
 - 12v DC Models: 12v DC LED Driver DO NOT CONNECT LIGHT FITTING DIRECTLY TO 240V, If more than one fitting installed, wiring must be done in parallel.
- 6. Colour temperature is preset to 3000k, to change remove cover from fitting by twisting anti clockwise and set aside. Remove globe and select desired colour temperature by moving switch on side of globe and then reinsert globe back into lampholder.
- Reattach cover by turning clockwise making sure the seals are still in place and cover is tight to avoid any water penetration
- 8. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Steps for Changing Globe:

- 1. Remove the cover by twisting anti-clockwise and set aside, remove globe by also twisting anti-clockwise.
- 2. Re-insert the appropriate globe by inserting the 2 circular pins into the lampholder and twisting clockwise.
- (Make sure not to exceed max wattage, see product label for correct info)
- 3. Reattach cover by turning clockwise making sure the seals are still in place and caps are tight to avoid any water penetration.

Must be installed by a licensed electrician

Contact Details:		Warranty Terms & Conditions*	www.havit.com.au
143 Beauchamp Road Matraville NSW 2036 Australia	Tel: 02 9381 8300 Fax: 02 9666 8881 Email: sales@havit.com.au Web: www.havit.com.au		