HV8026C, HV8026W Installation Instructions



PRODUCT SPECIFICATIONS		DIMENSIONS	IMAGE
Model No.	HV8026C, HV8026W		
Name	Arc		
Material	Plaster & Aluminium		
Colour	White		
IP Rating	IP20	150mm 120mm	
Input Voltage	240V		
Lamp Base	E14	200mm	
Lamp Wattage	3w		
CRI:	>80		
Wiring	Parallel		
Dimmable	No		
Warranty	2 Years Replacement		

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Do not exceed maximum wattage restrictions for globes: 240V GU10 = 35w / 12V MR16 = 20w
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- When installing low voltage fittings, Voltage to fitting must be within +or- 5% of voltage required, if not within this allowance warranty will be voided.
- Aluminium and 304SS fittings must not be installed within 2km of any salt water environments.
 When installing copper fittings, gloves must be worn to avoid any oils transferring to fitting.
- All 316 stainless steel fittings must have regular cleaning maintenance to avoid any tea staining from forming on fitting.
- (Warranty does not cover Tea Staining)
- All o-rings and seals must be in place correctly to maintain warranty.

Steps for Installation:

- 1. Make sure that the electrical circuit is free of voltage (master switch off).
- 2. Remove the fitting from backing plate by undoing the screws.
- 3. Install backing plate securely.
- 4. Connect the cable using wire with earth. Connect earth first, then live and neutral wires.
- 5. Affix the face of the fitting to the backing plate, making sure screws are tight.
- 6. Insert globe provided.
- 7. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.
- 8. Fitting can be easily painted to match decor.

Steps for Changing Globe:

- 1. Ensure light is switched off.
- 2. Remove the globe from the lampholder by twisting anti-clockwise.
- 3. Insert the new globe by holding at the base and twisting clockwise until firmly in place.
- 4. Make sure not to exceed max wattage, see product label for correct info.

Must be Installed by a Licensed Electrician

For More Information Contact Havit Lighting

143 Beauchamp Road Matraville NSW 2036 Australia Tel: 02 9381 8300 Fax: 02 9666 8881 Email: sales@havit.com.au Web: www.havit.com.au