

REMOVE AND OPEN DRL FRAME



Remove the three (3x) screws holding in the DRL freame

Then remove the DRL Frame from the housing of the headlight



Remove the five (5x) screws on the DRL Frame, 2 on top and 3 on the bottom side

INSTALL DRL BOARDS

Set your new ORACLE DRL boards into their respective places on the DRL Frame

Drill out the billets holding the old DRL boards in place - there are four on both top and bottom

©2018 ORACLE LIGHTING TECHNOLOGIES. ALL RIGHTS RESERVED

© 2018 ORACLE Lighting. All Rights Reserved

CONTINUED



©2018 ORACLE LIGHTING TECHNOLOGIES. ALL RIGHTS RESERVED

© 2018 ORACLE Lighting. All Rights Reserved