

Quick Start Guide

My Pillar



Voice-Activation Skill for Amazon Alexa

Next

IMPORTANT

Before you can use Voice-Activation, you
MUST...

1. Have your lockbox set up and the LockedBrands app downloaded.
2. Connect to WiFi.
3. Download the Amazon Alexa App.
4. Have a voice profile on your Alexa device.

This Guide will walk you through all of the
steps. Let's get started!

Table of Contents

Getting Started.....	4
Setting up with Amazon Alexa.....	5
Set up a voice profile.....	6
Downloading the Skill.....	9
Linking your lockbox.....	11

Functions and Uses

Voice-activation Functions with Ask Alexa.....	13
Support.....	15
Common Questions.....	16


Getting Started

Download The Amazon Alexa App to control your Pillar




Setting up with Amazon Alexa

1. Login or Create an account with Amazon.
2. Open the app on your device and follow the on screen instructions.

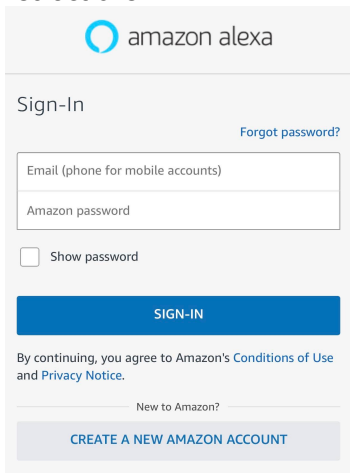

The screenshot shows the 'Sign-In' screen of the Amazon Alexa app. At the top, there is the Amazon Alexa logo. Below it, the text 'Sign-In' is displayed, with a link for 'Forgot password?' to the right. There are two input fields: 'Email (phone for mobile accounts)' and 'Amazon password'. Below the password field is a checkbox labeled 'Show password'. A large blue button labeled 'SIGN-IN' is positioned below the input fields. At the bottom, there is a link for 'CREATE A NEW AMAZON ACCOUNT' and a checkbox labeled 'New to Amazon?'.

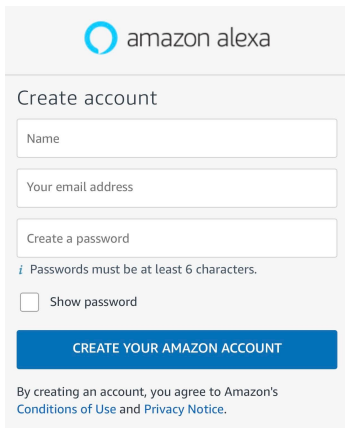

The screenshot shows the 'Create account' screen of the Amazon Alexa app. At the top, there is the Amazon Alexa logo. Below it, the text 'Create account' is displayed. There are three input fields: 'Name', 'Your email address', and 'Create a password'. Below the password field is a note: 'i Passwords must be at least 6 characters.' Below this note is a checkbox labeled 'Show password'. A large blue button labeled 'CREATE YOUR AMAZON ACCOUNT' is positioned below the input fields. At the bottom, there is a link for 'CREATE A NEW AMAZON ACCOUNT' and a note: 'By creating an account, you agree to Amazon's Conditions of Use and Privacy Notice.'



5

Prev

Next

Set up a voice profile

1. Say "Alexa, learn my voice" or press the more icon in the bottom right corner.
2. Press "Settings".

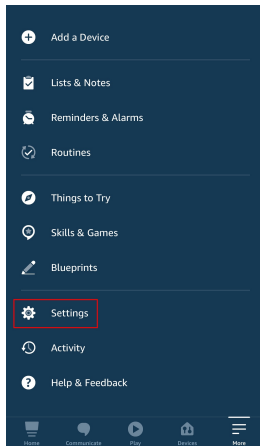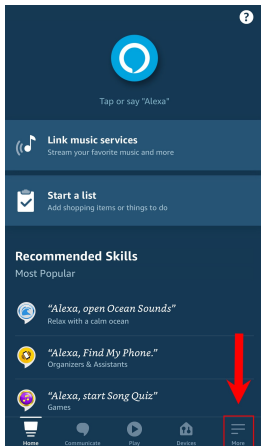



6

Prev

Next

Set up a voice profile cont.

3. Press "Your Profile".
4. Press Create on the "Voice" tab.

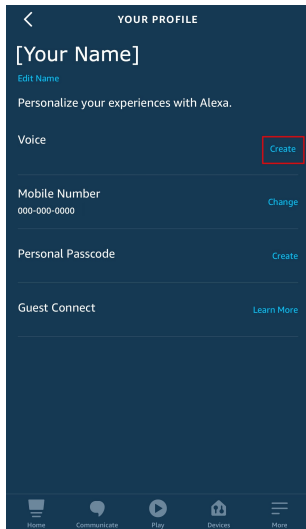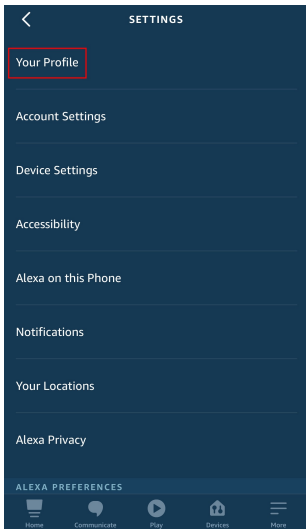



7

Prev

Next



Set up a voice profile cont.

1. Follow the voice set-up process.
2. Complete the voice commands given.

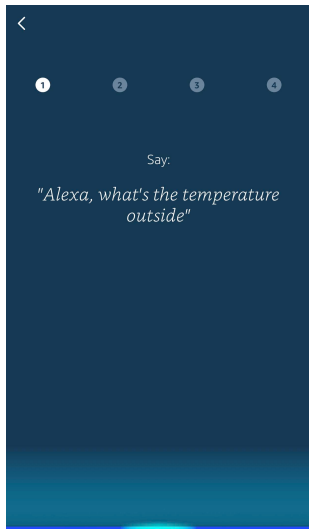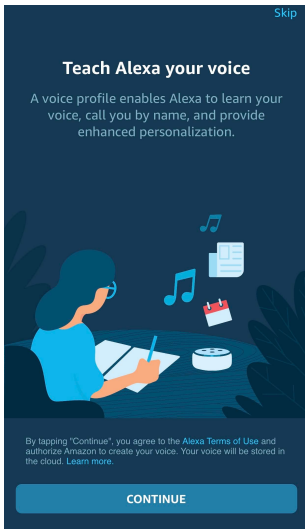

Downloading the Skill

1. Access the “more” menu on the bottom right corner of the screen.
2. Press “Skills and Games”.

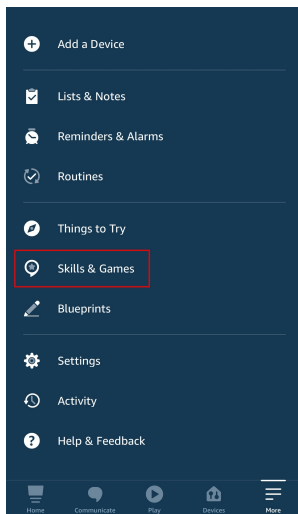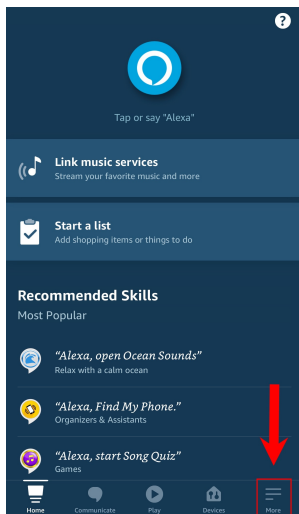



9

Prev

Next


Downloading the Skill Cont.

1. Press Search icon and search for “My Pillar”.
2. Click on the “My Pillar” skill.
3. Enable the skill by pressing the “ENABLE TO USE” button.

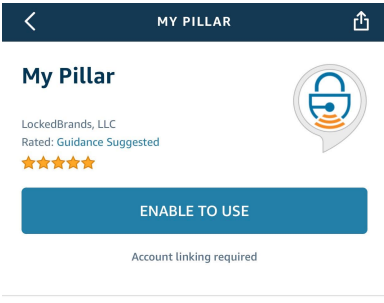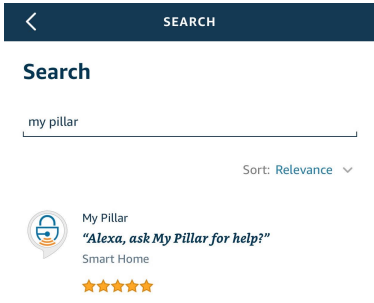


Linking your lockbox

1. Login using your email associated with your LockedBrands account and password.
2. Enter a 4-digit code into the “voice pin code” box.

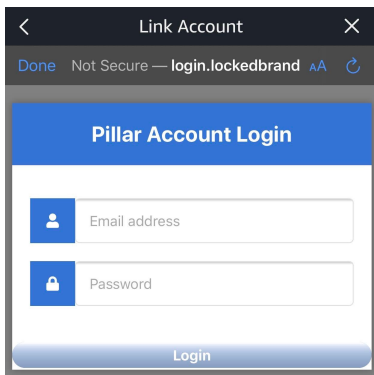


The screenshot shows a mobile app interface titled "Link Account". At the top, there is a navigation bar with a back arrow, the title "Link Account", and a close button. Below the navigation bar, the status bar shows "Done Not Secure — login.lockedbrand" with accessibility icons. The main content area has a blue header with the text "Pillar Account Login". Below the header, there are two input fields: "Email address" with a person icon and "Password" with a lock icon. At the bottom of the form is a blue "Login" button.

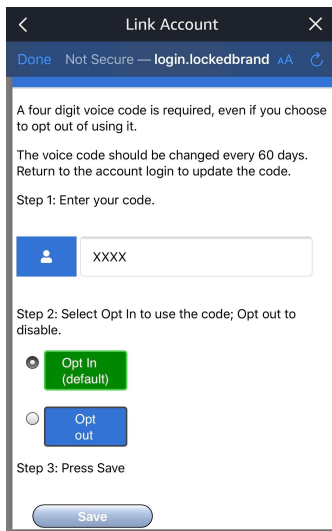

The screenshot shows the same "Link Account" screen after the login step. The main content area contains the following text: "A four digit voice code is required, even if you choose to opt out of using it." followed by "The voice code should be changed every 60 days. Return to the account login to update the code." Below this, it says "Step 1: Enter your code." There is an input field with a person icon and the text "XXXX". Below the input field, it says "Step 2: Select Opt In to use the code; Opt out to disable." There are two radio button options: "Opt In (default)" which is selected, and "Opt out". At the bottom, it says "Step 3: Press Save" and there is a "Save" button.

Linking your lockbox Cont.

1. You have the option to either Opt In to use the code or Opt Out to disable the voice code function.*
2. Press save.
3. Grant Permission for the skill to access your lockbox information.

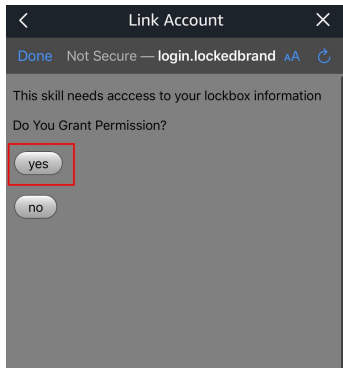

You are now ready
to use Alexa to
control your
lockbox!

* If you opt in, you will be required to say the pin code every time you Ask Alexa to perform a function on your lockbox.

12

Prev

Next

Voice-Activation Functions with Ask Alexa

To use the skill to control your lockbox, invoke a function by saying one of the following

- Alexa, tell My Pillar to unlock
- Alexa, ask My Pillar to change color to..... (Blue, Red, Green, Yellow, Orange, Purple, Gray, Navy, White, & Light Blue)
- Alexa, tell My Pillar to change style to..... (Solid, Breathing, Solid Night, Breathing Night, and OFF)

Voice-Activation Functions with Ask Alexa Cont.

- Alexa, tell My Pillar to set brightness to..... (a number from 1 to 100%) percent
- Alexa, tell My Pillar to change access time* to (any number from 5-10) seconds.

Note: You must use the specific phrases and say “My Pillar” to invoke the functions or Alexa will not recognize the command.

* Access time is the amount of time that the lockbox will stay unlocked.

Support

Amazon and Amazon Alexa Support

- Support can be found on [Amazon.com](https://www.amazon.com) under Help > Device and Digital Content Support Voice ID

LockedBrands Support

Quick Start Guide

- [Instructions](#)

Share Access and Transfer

- [Instructions](#)
- [How to Video](#)

FailSafe Mode/Master Password Guide

- [Instructions](#)

[Other FAQs](#)

Common Questions

Can I have more than one voice profile registered on my Amazon Account?

- To add accounts to your Amazon account, open the Amazon app and tap on the menu button in the top-left corner.
- Next, tap on Settings, and then select Your Profile.
- Under Your Profile, tap manage next to the Voice tab.
- Follow the prompts under “Want Alexa to recognize other voices?” to add a new voice profile on your account.

Common Questions Cont.

How can I improve the accuracy of my voice profile?

- To improve the accuracy of your voice profile, open the Amazon app and tap on the menu button in the top-left corner. Next, tap on Settings, and then select Your Profile.
- Under Your Profile, tap manage next to the Voice tab.
- Then choose Match voice profiles under Help Alexa recognize speakers and follow the prompts.

For more information, please visit us at

[LockedBrands.com](https://www.lockedbrands.com)