

RIDER

BY ROCKWELL

THE COLISEUM

User Manual

Contents

Regular Display	pg. 1-2
Setting Time	pg. 3-4
Chronograph/Lap Split Time	pg. 5-6
Split or Lap Operation	pg. 7-8
How To Use Recall	pg. 9-10
How To Use Timer	pg. 11-12
Set Daily Alarm	pg. 13-14
Set Date Alarm Time	pg. 15-16
Time Zone/Hourly Chime	pg. 17-18
Light/Sound	pg. 19-20
Watch Care/Features	pg. 21-22

Introduction

Thank you for purchasing the Coliseum from Rider by Rockwell. We are sure you will enjoy using this quality timepiece. Please visit www.rockwellwatches.com or send us an email to info@rockwellwatches.com for any questions or to get more info.

The Coliseum is a multifunction digital, it features: dual time zone, chronograph with 50-lap memory, countdown timer, and 8 alarms. Case construction is ABS, and band is made of PU. The stadium-style bezel helps protect the lens from scratching.

For longer watch life, avoid exposing it to extreme or harsh conditions for extended periods. Avoid rough use or impacts. Do not open the watch case unless it is done by a authorized service provider.

Keep this manual on hand as a reference.


For a video tutorial of this watch visit:

<http://store.rockwellwatches.com/collections/coliseum/products/coliseum-black-black>

Regular Display

REGULAR DISPLAY AND BUTTON OPERATION

E-01

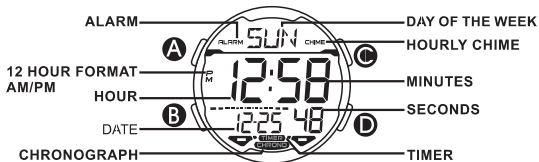


BUTTON OPERATION

- | | |
|---------------------|-----------------------------------|
| A SET/RECALL | C ADVANCE/START/SPLIT/LAP |
| B MODE | D RECEDE/STOP/ADJUST/LIGHT |


HOW TO CHANGE THE DISPLAY MODE

E-02

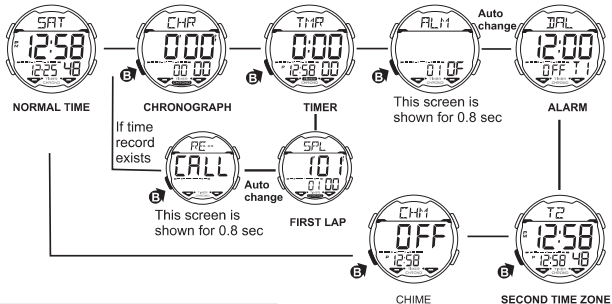

HOW TO DISPLAY CALENDAR

E-03

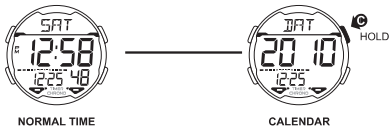


2.

Setting Time

HOW TO SET NORMAL TIME

E-04

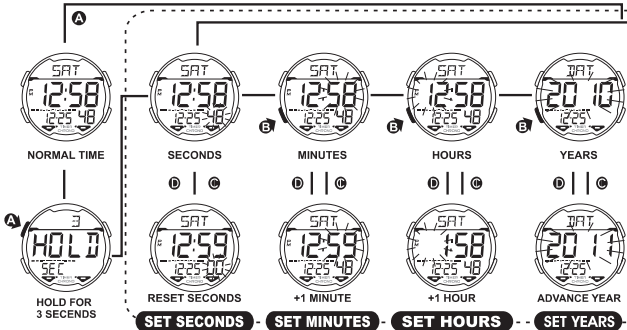

HOW TO SET NORMAL TIME

E-05



MONTHS

D | | C



DATE

D | | C



12 HR FORMAT

D | | C



ENABLE BUTTON TONE

D | | C



ADVANCE MONTH

SET MONTHS



ADVANCE DATE

SET DATE



24 HR FORMAT

**SET 12/24
FORMAT**



DISABLE BUTTON TONE

**SET BUTTON TONE
(ON/OFF)**

SET SECONDS

- Minutes do not advance and seconds return to zero when set seconds before 30 seconds.
- Minutes advance and seconds return to zero when set seconds after 30 seconds.


- Press "C" to advance the setting. Hold "C" for longer time than 2 seconds can advance the setting rapidly.
- Press "B" to reverse the setting.

Return to normal time display, the week will be set automatically

Chronograph/Lap Split Time


HOW TO USE THE CHRONOGRAPH

E-06

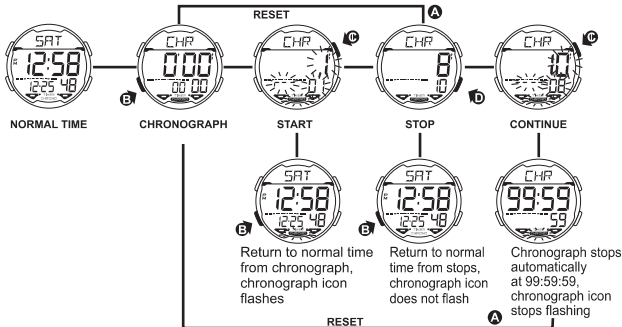

HOW TO CHANGE THE LAP/SPLIT MODE


E-07

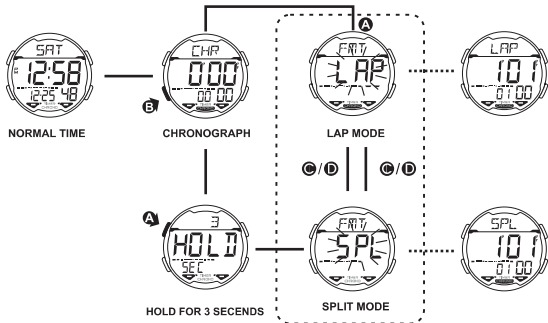

Split or Lap Operation


HOW TO SET THE SPLIT OR LAP OPERATION

E-08

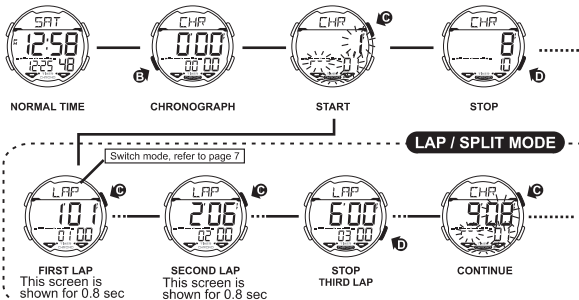

HOW TO SET THE SPLIT OR LAP OPERATION


E-09

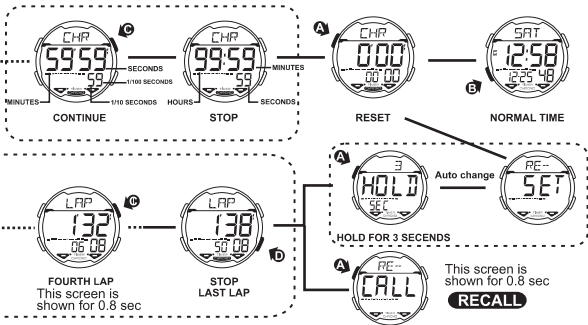

Recall

HOW TO USE THE RECALL

E-10

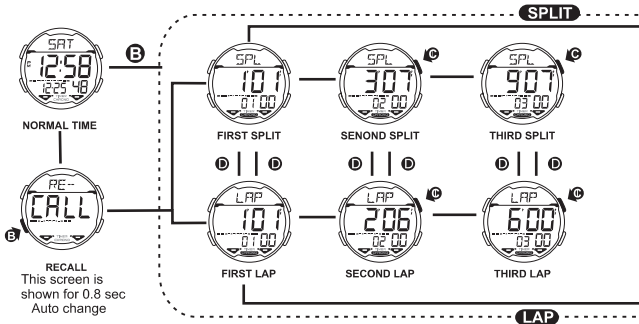

HOW TO USE THE RECALL

E-11



LAST SPLIT



LAST LAP

LAP 1 = 1' 01"

LAP 2 = 2' 06"

LAP 3 = 6' 00"

SPLIT 1 = 1' 01"

SPLIT 2 = 3' 07"

SPLIT 3 = 9' 07"



AVERAGE TIME



TOTAL TIME



HOLD FOR 3 SECONDS

Auto
change



NORMAL TIME


RESET



Timer


HOW TO USE TIMER

E-12

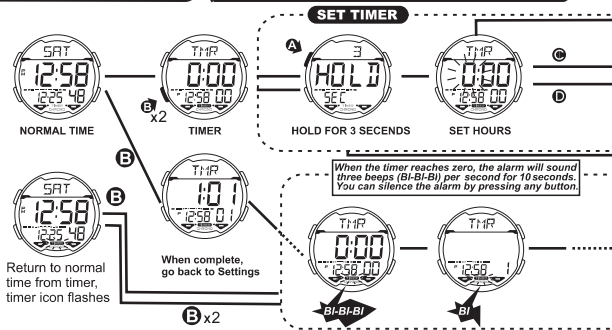

HOW TO USE TIMER


E-13)

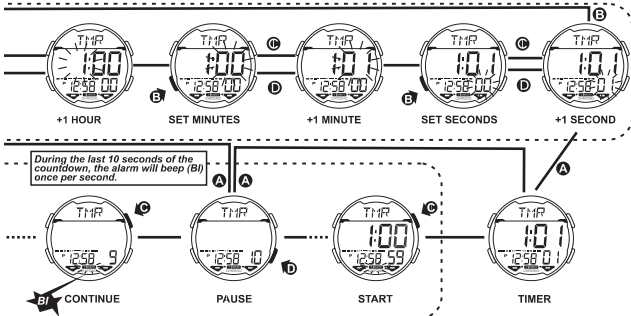

Daily Alarm

HOW TO SET DAILY ALARM TIME

E-14

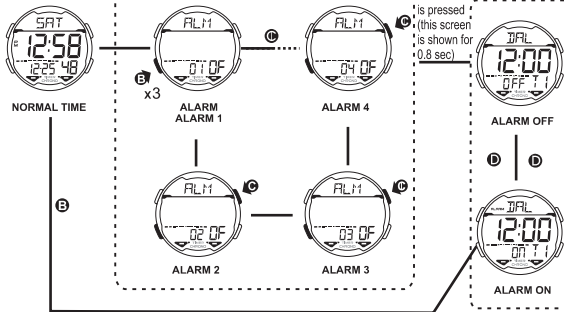

HOW TO SET DAILY ALARM TIME

E-15

DAILY ALARM
(1ST - 4TH ALARM)

When you enter Settings, alarm automatically turns on.



HOLD FOR 3 SECONDS

- Press "C" to advance the setting. Hold "C" for longer time than 2 seconds can advance the setting rapidly.
- Press "D" to reverse the setting.



HOURS



+1 HOUR



MINUTES



+1 MINUTE



NORMAL TIME ALARM




SECOND TIME
ZONE ALARM

Date Alarm Time

HOW TO SET DATE ALARM TIME

E-16

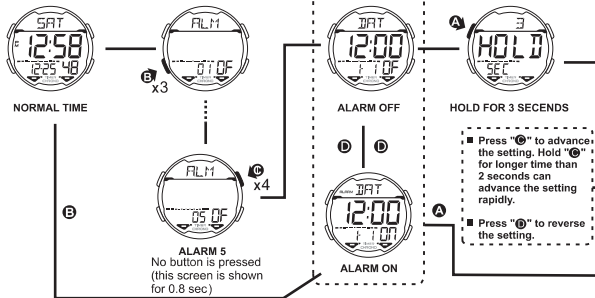

HOW TO SET DATE ALARM TIME

E-17

DATE ALARM
(5TH ~ 8TH ALARM)

When you enter Settings, alarm automatically turns on.



MONTHS



ADVANCE MONTH



DATE



ADVANCE DATE



HOURS



+1 HOUR



MINUTES




+1 MINUTE

Time Zone/Hourly Chime

HOW TO SET SECOND TIME ZONE

E-18

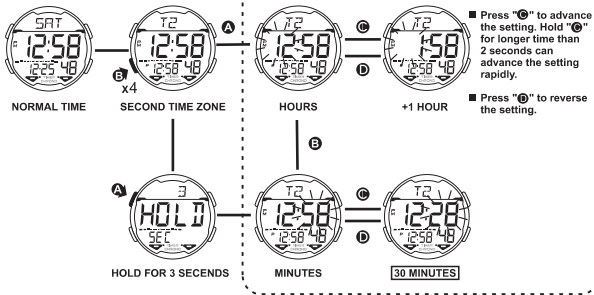

HOW TO SETUP HOURLY CHIME ON/OFF

E-19



NORMAL TIME



CHIME OFF

 


CHIME ON

Light/Sound

HOW TO USE THE LIGHT

E-20



NOTE:

1. This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.
2. The illumination provided by backlight may hard to see under direct sunlight.

- 1.Button tone: Turn ON or OFF, see "How to set function display."
- 2.Beeps with each press of a button except for the LIGHT button .
- 3.The button will only beep once when pressed and held
- 4.Alarm duration: 20 sec, two short beeps per second,beep once every hour.
- 5.The TIMER sound will take priority over the ALARM sound

Watch Care/Features

CARE OF YOUR WATCH

E-22

1. This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
2. Do not operate buttons while underwater, or while swimming or diving.
3. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
4. Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces.
5. Avoid exposing the watch to temperature extremes.
6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
7. Keep your watch away from strong electric fields and static electricity.

FEATURES AND SPECIFICATIONS

E-23

1. Standard display mode: Hour, Minutes, Seconds, Day of the week, Month, Date.
2. Function:
 - * 100-hour chronograph with memory for 50 laps / splits, and average lap.
 - * 24-hour countdown timer.
 - * 8 alarm (4 daily / 4 date) function with buzzer signal output.
 - * Second time zone.
 - * Hourly chime.
 - * Perpetual calendar.
 - * 12/24 hour format switch option .
 - * AM / PM & Electro-Luminescent light.
 - * Button tone ON/OFF function
3. Accuracy at normal temperature (25°C): ± 30 seconds a month.
4. Normal operating temperature range: $10^{\circ}\text{C} \sim 40^{\circ}\text{C}$.

Notes



WWW.ROCKWELLTIME.COM

© Rockwell Time Inc.

