



**PAMPA AUTOMATIC CATTLE GATE**

# INSTALLATION



## 1 ATTACH THE EQUIPMENT SECURELY TO THE POLE

- Adjust the pole diameter with the strap.
- Tighten securely with ratchet straps.



## 2 HOOK THE THREAD TO THE ROD

- Check that it can not be unhooked when going down or up.
- Drop the rod so that the weight itself keeps the thread tense.

**NOTE:** when retracting the cattle gate, the thread should be as parallel to the ground as possible for ideal engine operation.

## 3 TURN ON THE CATTLE GATE AND PROGRAM

- Turn on with the bottom key.
- The equipment will close the cattle gate completely, when it reaches the top. Will open it in several stages. Press button A on the remote control to stop it at the step you consider appropriate for correct opening. It only receives whilst stationary between each stage.

## CONGRATULATIONS! YOUR CATTLE GATE IS PROGRAMMED AND WORKING!

It will always open until the set step every time that receive the remote control signal. This process must be done every time that the cattle gate is turned off and on again.

**NOTE:** The smaller the gate opening, the less battery consumption each opening cycle will require, therefore, the autonomy of the equipment will increase.

# ATTENTION !



**DO NOT TURN ON THE EQUIPMENT WITHOUT TENSION ON THE THREAD TO AVOID ENTANGLEMENT IN THE PULLEY THAT COULD DAMAGE THE DEVICE.**

## SPECIFICATIONS



### LARGE CAPACITY BATTERY

With overload protection, current limiting temperature protection.

### SAVING MONEY



### RELIABILITY

Manufactured with the highest quality components.

### TIME OPTIMIZATION



### CLEAN ENERGY

Battery charge by solar panel.

## WARNINGS

Battery life will depend on usage, weather conditions and hours of sun exposure.

In case of storing the device for inactivity, be sure to **TURN OFF** the key at the bottom of the unit , otherwise it could **DAMAGE THE BATTERY** by completely discharging.

VISIT OUR WEBSITE TO SEE THE INSTALLATION, USE AND RECOMMENDATION VIDEOS

[WWW.PENSAGRO.COM](http://WWW.PENSAGRO.COM)

## PENSAGRO PRODUCTS

### PAMPA AUTOMATIC CATTLE GATE - AUTOMATED POLY WIRE LIFTER FOR ELECTRIC WIRE REMOTE CONTROLS - EXTENSION LANCE SYRINGE

#### WARRANTY

This product warranty is for six (6) months from the date of purchase due to any manufacturing and/or material defect.

PENSAGRO agrees to make repairs with a charge for a period equal to five (5) years after the expiration of the warranty.

#### TERMS AND CONDITIONS

- 1)The equipment must be installed according to the user manual.
- 2)This warranty is valid only for the original buyer and the final consumer.
- 3)This warranty will be void and invalid if this equipment is altered, opened without authorization, mistreated or damaged by accident, misuse, abuse, flood or other accident.
- 4)This warranty does not cover:
  - a) Any damage caused to other equipment connected to the equipment covered by the warranty.
  - b) Damage of any kind caused by improper connection of the equipment.
  - c) Damage of any kind caused by not respecting the product specifications.
- 5) Additional expenses (charter, shipping, packaging, insurance, fees, taxes, etc) for shipping and/or receipt of the equipment will be supported by the customer.
- 6) If the execution of the warranty is valid, PENSAGRO agrees to repair the equipment or replace it if this is not possible.

#### POST WARRANTY SERVICE

After warranty expires we have: service, maintenance and update of our equipment for the term of five (5) years.

## ACTIVATE YOUR WARRANTY HERE:

[www.pensagro.com/garantia.php](http://www.pensagro.com/garantia.php)



**MADE IN ARGENTINA**

Technical Service: [serviciotecnico@pensagro.com](mailto:serviciotecnico@pensagro.com)