





Installation Instruction for Axle Scales

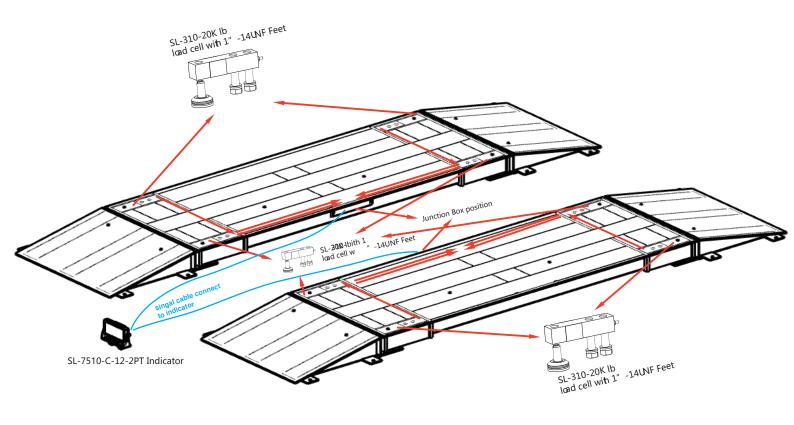


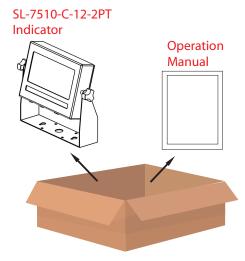

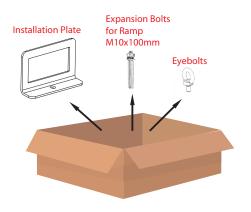

  Scale Components





platform (total: 2pcs)



ramp A (total: 4pcs)



load cell (total: 8pcs)



feet (total: 8pcs)



junction box (total: 2pcs)



Singal cable for indicator (total: 2pcs)



bending plate (total: 2pcs)

Bolts details



bolt for load cell M24 x 75 mm (total: 16 pcs)



expansion bolt M16 x 100 mm (total: 28 pcs)



Limit bolt M20 x 70 mm (total: 8 pcs)




bolt for bending plate (total: 16 pcs)




M16 eyebolt (total: 2 pcs)

Tools Required for Installation

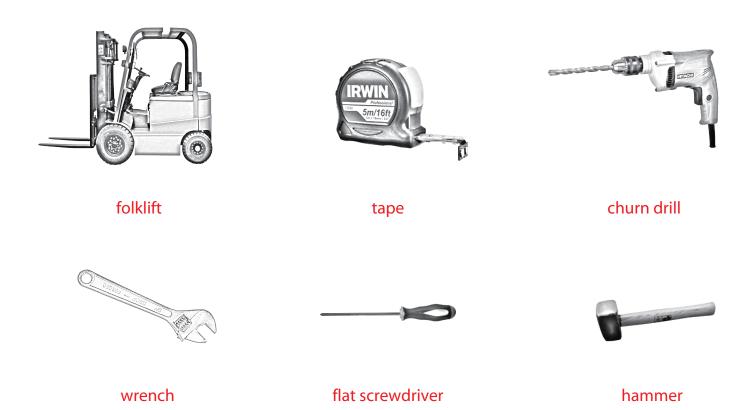


(1) Make sure the complete installation is done on a level ground.


(2) Bolt the installation plate to the ramps and place the ramps 87" apart in parallel with forklift.

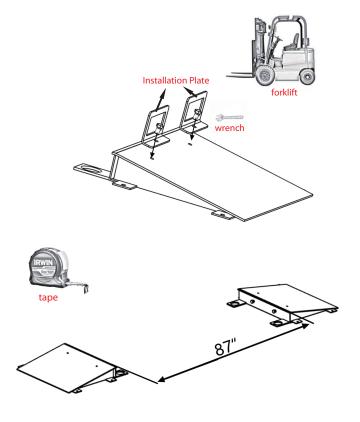



(3) Bolt the installation plates to the platform and screw the four threaded level feet into the four corners of the platform while lifting it with the forklift.

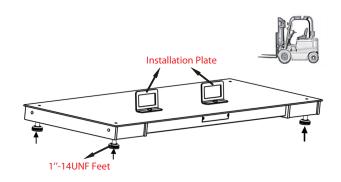

  (4) Place the platform between the two ramps, making sure all the feet sit inside the rings on the ramps .



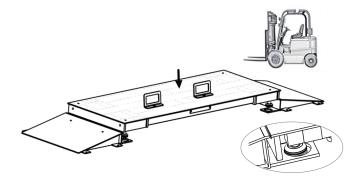





(5) Pull out the interface cable

Open the cover on the side and you will find the junction box with a 50ft long cable nested inside. Run the cable (with connector) through hole on the bottom and pull it out from underneath as long as you need.


Close the cover with the original screws after this is finished.

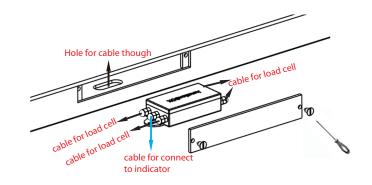

(6) Follow the same steps to install the other set.

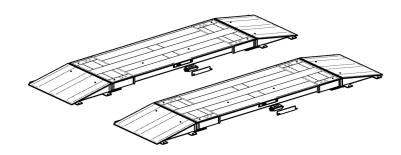

(7) Plug the connectors on the interface cables to the 2 ports of the indicator .

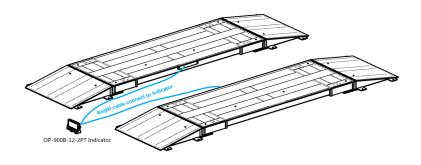

(8) For permanent use, install anchoring bolts to the ramps .

