

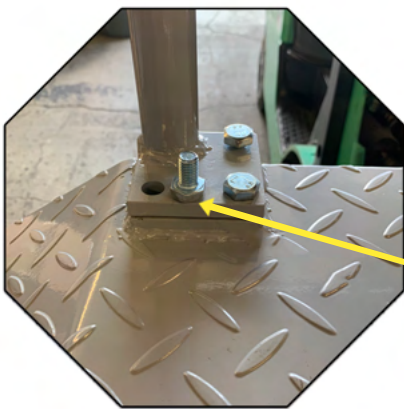
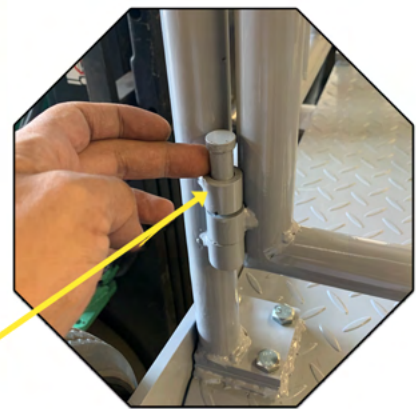


INSTALLATION MANUAL

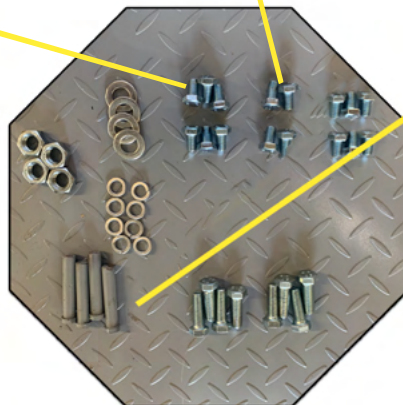


Use small bolts to secure the cage

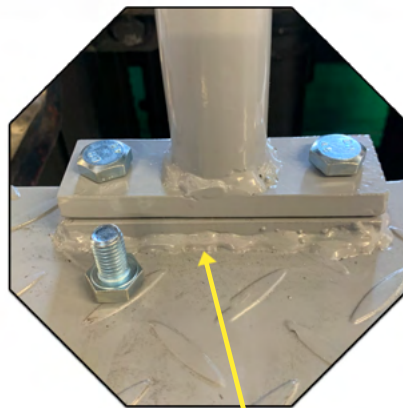


Match up the gate with the cage & insert the pin.

ANIMAL WEIGHING SCALE & CAGE SYSTEM

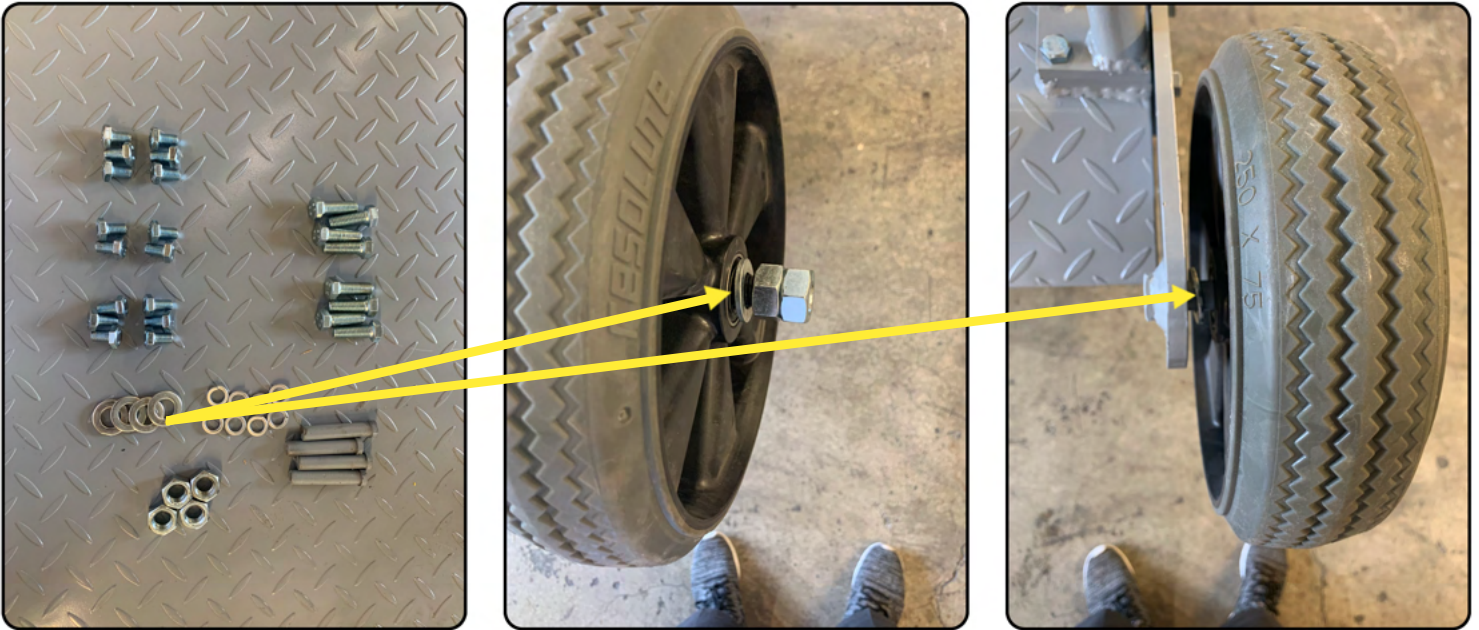

Use one spacer on the inside of the wheel & one spacer on the outside.
Tighten with 2 nuts provided.

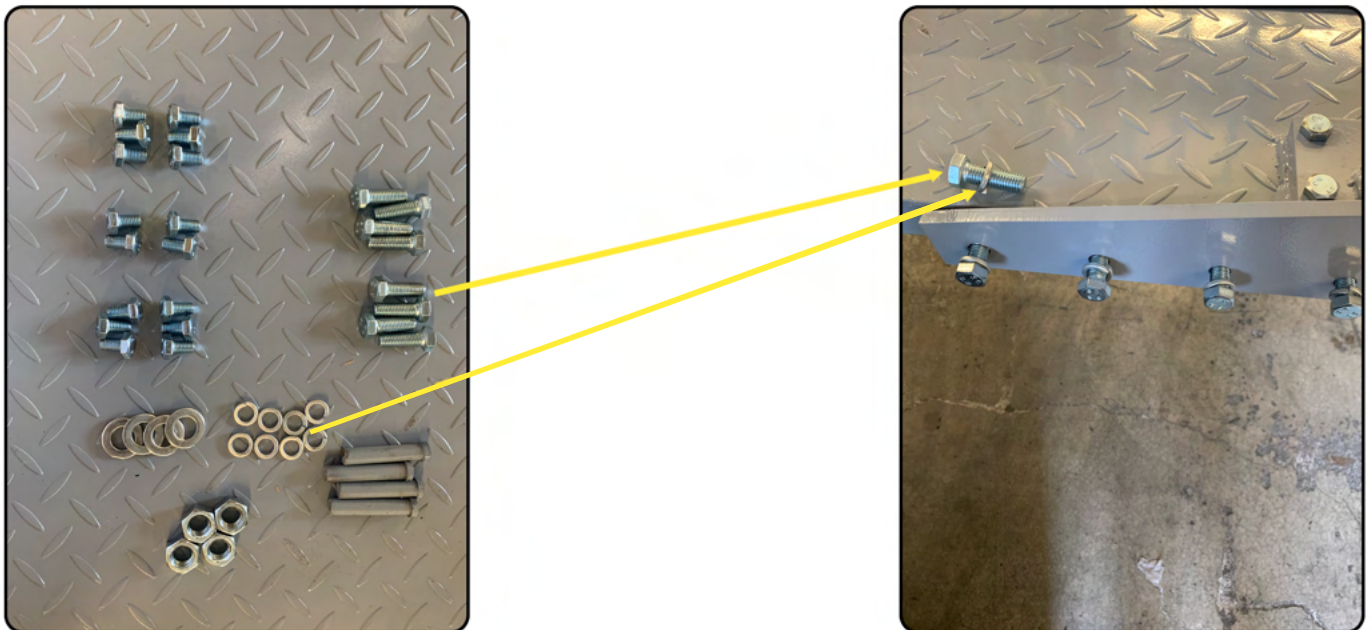

Use the long Bolt & nut provided. Four on each
side to mount the side bracket & the wheels.