


REMOTE DISPLAY HOW TO GUIDE

In order to set up your remote display you will need to change some settings in your OP-900 or OP-901 indicator to allow communication between the two devices

OP-900/OP-901 PARAMETER SETTINGS

To enter parameter settings, follow the procedure below:

1. Make sure the unit is set to either kg or lb
2. Press and hold the HOLD and PRINT key at the same time for 2 seconds
3. Use the arrow keys to change C01 to C18
4. Press the PRINT  key to enter/edit the parameter setting
5. Use the arrow keys to change the settings of the below parameters
6. Press the ACCUM key to save and exit settings at any time

Function	Parameter	Settings/Options	Default
Communication Setting	C 18	Set the serial interface data output method: 0 = Turn off serial interface data output 1 = Continuous sending mode, for remote display 2 = Print mode, connect printer 3 = Command request mode, connect computer. 4 = PC continuous sending mode, connect computer	0
Baud Rate	C 19	0=1200 (OP-910 remote display) 1=2400 2=4800 3=9600 (OP-910X remote display)	3