




OP-918 PALLET JACK


QUICK GUIDE



1. Once Pallet Jack is assembled Turn On pallet jack indicator by holding the “ON/OFF” key for 3 seconds
2. If indicator does not show  press the “ZERO” Key on the indicator and the screen will display 
3. Move pallet jack under the center of the pallet
4. Put the handle lever in the down position and start rocking the handle up and down to pump the pallet jack up
5. The pallet’s weight will be shown on the indicator
6. Press the “UNIT” key to switched between lbs or kgs
7. To print out the weight data, hold down the “SET” key for 3 seconds
8. Direct pallet to new location
9. To set down, position handle lever in the up position to slowly lower the pallet down to the ground
10. Roll pallet jack out from under the pallet, the display should read 
11. Turn indicator off when not in use by holding the “ON/OFF” key for 3 seconds

CHARGING INSTRUCTIONS

- 1) CONNECT ADAPTER TO INDICATOR AND PLUG INTO WALL OUTLET
- 2) IF ADAPTER LIGHT IS RED, INDICATOR NEEDS TO BE CHARGED
- 3) WHEN INDICATOR IS COMPLETELY CHARGED, ADAPTER LIGHT WILL TURN GREEN
- 4) TURN INDICATOR ON
- 5) AN EMPTY BATTERY ICON WILL FLASH FOR A COUPLE SECONDS ON INDICATOR
- 6) THIS DOES **NOT** MEAN INDICATOR IS NOT CHARGED
- 7) INDICATOR CHARGE LASTS UP TO 22 HOURS

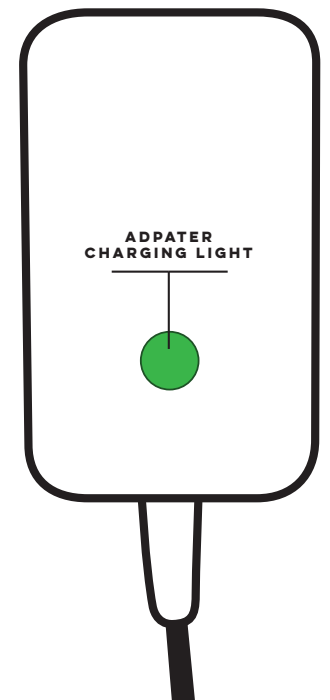

CHARGER ADAPTER

