

OP-902 Parameter Settings

- Press HOLD and UNIT together to enter the parameter settings
- Use the following diagram to navigate through the parameter settings:

Key	Function
ON/OFF	Exit
HOLD	Confirm
ZERO	Move Left
UNITS	Move Down

Function	Display	Parameter Settings
Communication Setting	Ern 1	Set the serial interface data output method: 0 = Turn off serial interface data output 1 = Continuous sending mode, connect computer 2 = Print mode, connect printer (OP-412T) 3 = Command request mode, connect computer
Baud Rate	bAud 1	1 = 9600bit/s (OP-412T) 2 = 4800bit/s 3 = 2400bit/s 4 = 1200bit/s 5 = 600bit/s