 


Base Station Installation

1. Install base station antenna.
2. Plug the transformer end of the base station AC/DC adaptor into a standard AC electrical power outlet, plug the other end into the "DC In" jack on the back of the base station.
3. Plug phone cord into the "LINE" Jack.
4. A standard telephone or answering machine can be plugged into the adjacent receptacle on the bottom of the base station marked TEL.



 
Handset and Charger Installation (Charger only for FreeStyle 1 HC)

1. Plug the transformer end of the Charger AC/DC adaptor into a standard AC electric power outlet, plug the other end into the "DC In" jack on the back of the Charger.
2. Install battery pack onto the handset.
3. Install handset antenna.
4. Place handset onto the charger front slot.
5. Fully charge the battery for three hours before use.
6. The phone system is now ready to perform basic functions such as making and receiving phone calls and Intercom calls. No base station or handset programming is needed for basic operations.



Handset Registration

1. Press MENU-7 to enter the registration mode.
2. Press and hold the base's Registration (REG) button for 2 seconds until the and LEDs lighting up and flashing, also the base will emit ringing to remind you the base is in the registration mode.
3. Press handset key "1", this completes the registration process. The base station will assign a handset ID between 12 and 19. The assigned ID will be displayed on the handset LCD, indicating successful registration.



Handset features

1. TALK/FLASH ()
a. Places or answers a telephone or Intercom call
b. Sends a Flash signal to phone line to retrieve a dial tone after the call ends, or to perform the call waiting feature provided by local phone companies during a call.
2. SPEAKERPHONE ()
a. Press the key to enable/disable the speakerphone during incoming, outgoing or Intercom call.
3. 2-WAY INTERCOM / TRANSFER ()
a. Places an intercom call to another handset, a group handset (group paging) or all registered handsets.
b. Intercom calls are digital, full duplex, and are conducted without the assistance from the base.
4. BROADCAST ()
a. Half duplex broadcasting to handsets for immediate announcement
b. Half duplex broadcasting to base stations
Re : Press the key on the side of handset to activate the broadcast function.
5. Left/Right Soft Keys ()
a. Make menu selection.
b. Up () / Down () Scrolling Keys
c. Scroll through records and menu selections.
d. Adjust receiver voice volume when in the Talk mode.
e. Press to adjust ringer volume when in the Standby mode.
f. Press to enter phonebook when in the Standby mode.
7. END; On/Off Key ()
a. Ends a call.
b. Leaves current menu operation, up one level.
c. Press for 3 seconds to off the power
8. CALLER ID Key ()
a. Review caller ID list.
b. Including received and missed caller ID.



Base features

1. RESET Button
a. Restores base station to factory settings
b. Reset button is intended to prevent accidental system reset.
c. All handsets (including administrator) and additional base(s) need to be re-registered after a base station reset.
2. Registration Button (REG)
Enters registration mode along with handset, assigns handset ID (11-19).
3. Dialing Keys
a. Enter the phone no after pressing the Speakerphone key.
b. Enter the handset ID or Group ID when making the Intercom call or broadcast.
c. Enter the phone no when storing the base speed dial directory.
4. Function Keys
a. TRANSFER (): during talk, press the key to transfer the call to a registered handset.
b. MEMORY (): store phone number into speed dial memory of base unit. Up to 20 entries. Or retrieves a phone number from the speed dial memory during the talking.
HOLD (): press the key to put the call on hold.
FLASH (): press the key to send a Flash signal to phone line to retrieve a dial tone after the call ends, or to perform the call waiting feature provided by local phone companies during a call.
c. REDIAL/P (): press the key to retrieve the last dialed number. Or store a pause time (1 second) while storing the speed dial memory.
5. VOLUME keys (and)
a. Increase or decrease the ringer volume during standby mode.
b. Increase or decrease the voice volume during talk mode.
6. SPEAKERPHONE key ()
a. Press the key to get the dial tone, followed by phone number to make outgoing call.
b. Press the key again to hang up the call.
7. INTERCOM/BROADCAST Key ()
a. Enter handset ID then press the key to enable the 2-way Intercom feature.
b. Enter handset ID then press and hold the key for over one second to enable the broadcast feature.
Re:Press the Key without entering handset ID first, all registered handset will be enabled.

