

1 Insert the controller through the square hatch.



2 Install the controller and secure the screws.





3 Thread and lead the cable through the hole in the round rudder position.



4 Use the lead cable to pull the rudder cable out of the hole.



5 Pull the wire rope left and right to ensure smooth rotation and correct direction of the manual handle.

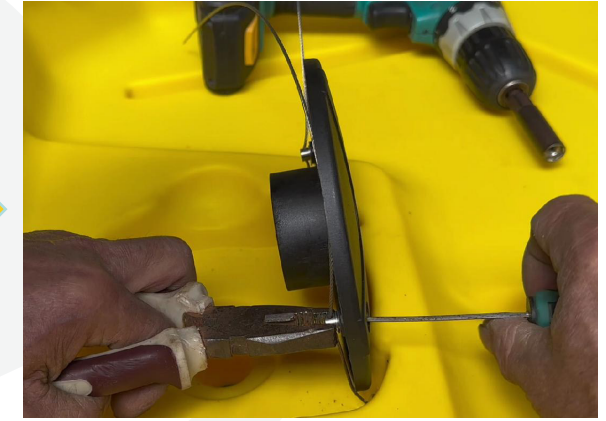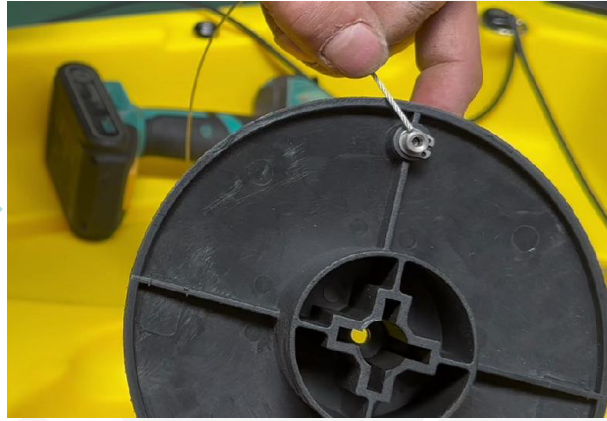

6 Install cable screws.

7 Run the cable through the rudder

8 Tighten the screws



9 Thread the cable through the fixing bolt.

10 Cut the cable to a suitable length.

11 Press tight the fixing bolt.