



19" Waterproof TV

Dimensions of TV Front screen
Mounting Plate

490mm x 335mm x 3mm
474mm x 318mm x 48mm

24" Waterproof TV

Dimensions of TV Front screen
Mounting Plate


595mm x 397mm x 3mm
580mm x 380mm x 45mm

PLEASE NOTE: installation of your TV should be carried out by a technical competent person and confirm to all relevant regulations. If in any doubt please contact us or a qualified electrician. Your warranty will be void if any problems are due to incorrect installation/ poor sealing of the unit.


1. Ensure that you get the correct viewing position when installing your mounting plate. Once you have got the correct position check that there are no hazards around the area of installation, for example, cables or pipes.
2. Please use our Mounting plate TV sizes below to cut out a recess in the wall to fit into the wall depending on what TV size you have.
3. Un-screw the plate at the back of the TV unit and connect all wires needed, then screw back the plate securely. Chase all cables into the cable hole as seen above.
4. Fix your mounting plate into place with the screws provided.
5. Once you have checked that the TV is functioning correctly and all cables are fitted, apply unbroken bead of silicon to the inside of the TV bezel at least 5mm thick.
6. Please ensure the bezel is firmly sealed to the wall surface to complete the waterproof properties of the installation. If it is not sealed correctly this will void your warranty.

Installing the mounting plate

1. Make a hole in the wall
(please leave enough room for the cables)

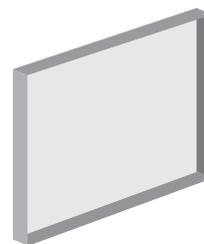

2. Position the mounting plate

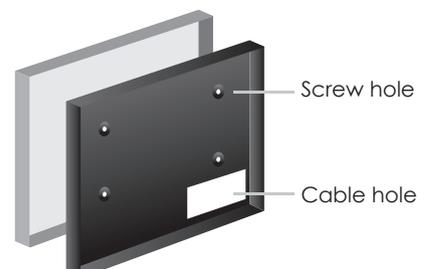

3. Fit the waterproof television

