
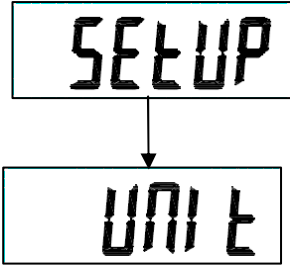



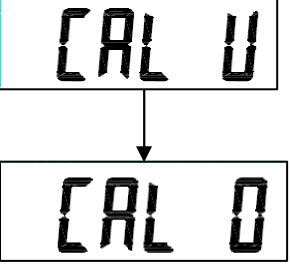
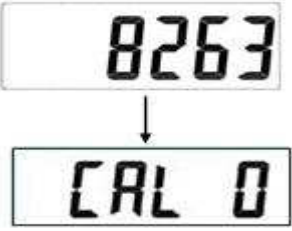







CALIBRATION PROCEDURE

To calibrate the scale, please turn off the scale.

Operation	Display
Turn the scale on using the ON/OFF key.	
Press UNIT key for 3 seconds and SETUP will show shortly. UNIT will appear on the display.	
Press the TARE key repeatedly until the "CAL ib" symbol is displayed.	
Press the HOLD key.	
Press the TARE key. The triangle [◀] will display on the top of left hand side of the display. If not, press the TARE key.	
Press the HOLD key repeatedly until the "CAL 0" symbol is displayed.	

<p>Press the TARE key, the display will show the present ZERO Count value (6000~12000). Then press the UNIT key.</p>	
<p>Press the HOLD key.</p>	
<p>Press the TARE key. Enter the calibration weight (200 kg). Press TARE key and HOLD key to set the weight.</p>	
<p>Confirm by pressing the UNIT key and the number on the display will be 000.0</p>	
<p>Put the calibration weight on the scale, and the display will show SPAN Count value (15000~20000). Press the HOLD key. The adjustment process is started.</p>	
<p>When the adjustment is finished successfully, the scale is automatically switched over to the weighing mode again and the calibration weight (200kg) will be displayed. Remove the calibration weight</p>	
<p><i>Turn off the scale and then start the scale again.</i></p>	