



# PORTABLE WINE CHILLER

OWNERS MANUAL

LCPWC1

# LITTLE CAVE

by **GRAND CRU**<sup>®</sup>

[www.grandcruwinefridges.com.au](http://www.grandcruwinefridges.com.au)

NEED HELP?  CALL 1300 935 683



# LITTLE CAVE

by GRAND CRO®

## PORTABLE WINE CHILLER

**OWNERS MANUAL**

**LCPWC1**

**DEVICE:** BOTTLE WINE CHILLER

**MODEL NO:** LCPWC1

**POWER:** 72W

**MAINS DATA:** 100V-240V; 50HZ/60HZ

**EXTERNAL MEASUREMENTS:** 135MM WIDE; 245MM HIGH; 285MM DEEP

**TEMPERATURE RANGE:** 5°C-18°C; 41°F-64°F



### CONTENTS

IMPORTANT INFORMATION 4

SAFETY INFORMATION 6

COMMISSIONING 8

OPERATION AND HANDLING 10

GENERAL INFORMATION 11

WARRANTY, SERVICE

AND SUPPORT 13

**!** This manual contains important information including safety and installation instructions of the appliances. Please read it carefully before use and follow all safety information and instructions. It is recommended to keep this manual for easy reference so that you can be familiar with the operation of the appliance.

**NEED HELP?**  **CALL 1300 935 683**

## IMPORTANT INFORMATION

---

Please read the information contained herein so that you can become familiar with your device quickly and take advantage of the full scope of its functions. Your device will serve you for many years if you handle it and care for it properly.

**We wish you a lot of pleasure in using it!**

---

### INFORMATION ON THIS MANUAL

These Operating Instructions are a component of the device (referred to hereafter as the Device) and provide you with important information for the initial commissioning, safety, intended use and care of the device. The Operating Instructions must be available at all times at the device. This Operating Manual must be read and applied by every person who is instructed to work with the device:

- Commissioning
- Operation
- Troubleshooting and/or
- Cleaning

Keep the Operating Manual in a safe place and pass it on to the subsequent owner along with the device.

---

### WARNING NOTICES

The following warning notices are used in the Operating Manual concerned here.



**DANGER:**

**A warning notice of this level of danger indicates a potentially dangerous situation.**

If the dangerous situation is not avoided, this can lead to death or serious injuries. Observe the instructions in this warning notice in order to avoid the danger of death or serious personal injuries.



**WARNING:**

**A warning notice of this level of danger indicates a possible dangerous situation.**

If the dangerous situation is not avoided, this can lead to serious injuries. Observe the instructions in this warning notice in order to avoid the personal injuries.

**ATTENTION:**

**A warning notice of this level of danger indicates a possible dangerous situation.**

If the dangerous situation is not avoided, this can lead to slight or moderate injuries. Observe the instructions in this warning notice in order to avoid the personal injuries.

**PLEASE NOTE:**

**A notice of this kind indicates additional information, which will simplify the handling of the machine.**

---

**LIMITATION OF LIABILITY**

---

All the technical information, data and notices with regard to the installation, operation and care are completely up-to-date at the time of printing and are compiled to the best of our knowledge and belief, taking our past experience and findings into consideration.

No claims can be derived from the information provided, the illustrations or descriptions in this manual.

The manufacturer does not assume any liability for damages arising as a result of the following:

- Non-observance of the manual
- Uses for non-intended purposes
- Improper repairs
- Technical alterations, modifications of the device
- Use of unauthorized spare parts

All translations are carried out to the best of our knowledge. We do not assume any liability for translation errors, not even if the translation was carried out by us or on our instructions. The original German text remains solely binding.

---

**COPYRIGHT PROTECTION**

---

This document is copyright protected. We reserves all the rights, including those for photomechanical reproduction, duplication and distribution using special processes (e.g. data processing, data carriers, data networks), even partially. Subject to content and technical changes.

## SAFETY INFORMATION

This chapter provides you with important safety notices when handling the device. The device corresponds with the required safety regulations. Improper use can result in personal or property damages.

### INTENDED USE

The bottle wine chiller is designed for keeping and already cooled bottle of wine, sparkling wine or any other beverage at drinking temperature over the long term.

- The device can accommodate bottles with a maximum diameter of 92mm.
- The bottle wine chiller is also suitable for cooling other beverages such sparkling wine, soft drinks or bottled beer.
- The temperature range can be between 5°C-18°C or 41°F-64°F.

Uses for a different purpose or for a purpose which exceeds this description are considered incompatible with the intended or designated use.



**WARNING:**  
**Danger due to unintended use!**

Use the device exclusively for its intended use. Observe the procedural methods described in this Operating Manual. Claims of all kinds due to damages resulting from unintended uses are excluded. The User bears the sole risk.

### GENERAL SAFETY INFORMATION

Please observe the following general safety notices with regard to the safe handling of the device.

- Read all instructions before using.
- This device may be used by children aged 8 and above, if they are supervised or have been instructed at to the safe use of the device and have understood the resulting hazards.
- Cleaning and maintenance by the user must not be performed by children unless they are at least 8 years old and are supervised. Children are not allowed to play with the device.
- The device and its connecting cable must be kept away from children who are less than 8 years old.
- The device may be used by individuals with reduced physical, sensory or mental capabilities or a lack of experience and / or knowledge of their use if they are supervised or have been instructed at to the safe use of the device and have understood the resulting hazards.
- Unplug the device when not in use and before cleaning. Allow device to cool before cleaning.
- Only customer service departments authorized by the manufacturer may carry out repairs on the device, as otherwise the guarantee entitlements will be null and void in the event of any subsequent damages. Improperly performed repairs can cause considerable dangers for the user.

- Defective components must always be replaced with original replacement parts. Only such parts will guarantee that the safety requirements are fulfilled.
  - Do not use accessory attachments that have not been recommended by the manufacturer.
  - Do not allow cord to touch hot surfaces or hang over sharp edges such as those on counter tops.
  - Do not place the device on or near a hot gas or electric burner, or heated oven.
  - Always handle the device gently. Do not place it near the edge of the table or counter to protect against the deformation or functional damage in case it falls down from the table accidentally.
  - Do not use this device for any unintended use.
- Do not open the housing on the device under any circumstances. There is a danger of an electrical shock if live connections are touched and the electrical or mechanical structure is altered. In addition, functional faults on the device can also occur.

---

## **MORTAL DANGER DUE TO ELECTRICAL POWER**

---

Mortal danger exists when coming into contact with live wires or sub-assemblies! Observe the following safety notices to avoid dangers due to electrical power:

- Do not dip the cable, device or plug into water or other liquid to prevent an electric shock.
- Do not operate this device if it has a damaged cable or plug, if it is not working properly or if it has been damaged or dropped. If the power cable or plug are damaged, then they must be replaced by the manufacturer or its service agent in order to avoid a hazard.

## COMMISSIONING

### SAFETY INFORMATION

This chapter provides you with important safety notices during the initial commissioning of the device. Observe the following notices to avoid dangers and damages:



**WARNING:**

**Packaging materials may not be used for playing. There is a danger of suffocation.**

### DELIVERY SCOPE AND TRANSPORT INSPECTION

As a rule, the device is delivered with the following components:

- Wine chiller
- Operating Instructions



**PLEASE NOTE:**

**Examine the shipment for its completeness and for any visible damages. Immediately notify the carrier, the insurance and the supplier about any incomplete shipment or damages as a result of inadequate packaging or due to transportation.**

### UNPACKING

To unpack the device, remove the device out of the carton and remove the packaging material.

### DISPOSAL OF THE PACKAGING

The packaging protects the device against damages during transit. The packaging materials are selected in accordance with environmentally compatible and recycling-related points of view and can therefore be recycled. Returning the packaging back to the material loop saves raw materials and reduces the quantities of accumulated waste. Take any packaging materials that are no longer required to “Green Dot” recycling collection points for disposal.



**PLEASE NOTE:**

**If possible, keep the original packaging for the device for the duration of the guarantee period of the device, in order that the device can be re-packaged properly in the event of a guarantee claim.**



---

## SETUP LOCATION REQUIREMENTS

---

In order to ensure the safe and trouble-free operation of the device, the setup location must fulfil the following prerequisites:

- The device must be set up on a firm, flat, horizontal surface with sufficient load-bearing capacity for the device.
- The device is not intended to be installed in a wall or a built-in cupboard.
- Do not operate the product near hot gas or hot stove.
- Choose the setup location in such a way that children cannot reach the device.
- The device is not intended to be installed in a wall or a built-in cupboard.
- Do not set up the device in a hot, wet or extremely damp environment or near flammable material.
- The electrical socket must be easily accessible so that the power lead can be disconnected easily, in the case of an emergency.
- The installation and assembly of this device in non-stationary setup locations (e.g. on ships) must be carried out by specialist companies / electricians, provided they guarantee the prerequisites for the safe use of this device.

---

## ELECTRICAL CONNECTION

---

In order to ensure the safe and trouble-free operation of the device, the following instructions must be observed for the electrical connection:

- Before connecting the device, compare the connection data (voltage and frequency) on the rating plate with those of your electrical network. This data must agree in order that no damages occur in the device. If in doubt, ask your qualified electrician.
- Make sure that the power cable is undamaged and has not been installed under the oven or over hot or sharp surfaces.
- The electrical safety of the device is only guaranteed if the device is connected to a properly installed protective conductor system. Operations using an electrical outlet without a protective conductor are prohibited. If in doubt, have the house installation checked over by a qualified electrician. The manufacturer cannot be made responsible for damages that are caused by a missing or damaged protective conductor.


---

## RATING PLATE

---

The rating plate with the connection and performance data can be found on the underside of the device.

## OPERATION AND HANDLING

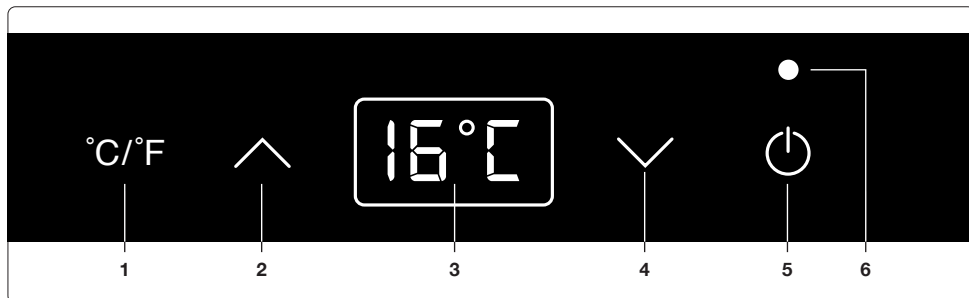

### CONTROL PANEL AND DISPLAY

1. Change from °C to °F, as well as display of the current temperature inside the wine bottle chiller
2. Increase the temperature
3. Display Window
4. Reduce the temperature
5. On/Standby button
6. LED

### OPERATION OF THE CHILLER

- Connect the adapter plug with the device, then insert the plug into the socket.
- Press the On/Standby button.
- Set your desired temperature.
- Place a suitable bottle (less than 90mm in diameter) in the device. The device starts to cool down.



#### PLEASE NOTE:

**Ambient temperature below 16°C or above 32°C will hinder the performance of the appliance.**

### LED:

- The LED flashes until the set temperature is reached.
- After that it is constantly illuminated.
- As soon as the temperature deviates by more as 3°C, the display flashes again.
- If you press the °C/°F button for a long time, the temperature in the interior of the bottle wine chiller is displayed for a few seconds.

### The cooling power of the device depends on various factors:

- **The ambient temperature:**  
The maximum achievable cooling power depends, among other things, on the outside temperature. Rapid cooling is possible at a lower ambient temperature. If the ambient temperature is very high, cooling may need more time.
- **The starting temperature of the contents of the bottle:**  
A pre-cooled bottle content is immediately kept cool. Bottles with a warmer content need more time to reach the desired drinking temperature.

## GENERAL INFORMATION

### CLEANING AND MAINTENANCE

This chapter provides you with important notices with regard to cleaning and maintaining the device. Please observe the notices to prevent damages due to cleaning the device incorrectly and to ensure trouble-free operation. Please observe the following safety notices, before you commence with cleaning the device. To clean, simply wipe the outside and inside body of the WineCase One with a damp cloth. Once clean, ensure that the appliance is dried thoroughly.



#### ATTENTION:

**The device must be cleaned at regular intervals.**

- Switch the device off prior to cleaning it and unplug the plug from the wall power outlet.
- If dampness penetrates into the device, this can damage the electronic components. Please hat no liquid can enter the interior of the device through the ventilation slots.
- Do not immerse the appliance into water or other liquids, and do not put it in the dishwasher.
- Do not use any aggressive or abrasive cleaning agents or solvents.
- Do not scrape off stubborn dirt with hard items.

### TROUBLESHOOTING

This chapter provides you with important notices with regard to operating the device. Observe the following notices to avoid dangers and damages.

- **The wine temperature control does not work:** The device may not be connected or the electrical circuit may be broken.
- **Wine is not cooled sufficiently:** The wine wasn't chilled long enough; the ambient temperature is too high.



#### ATTENTION:

**Only qualified electricians, who have been trained by the manufacturer, may carry out any repairs on electrical equipment.**

Improperly performed repairs can cause considerable dangers for the user and damages to the device.



#### PLEASE NOTE:

**If you are unable to solve the problem with the steps shown above, please contact Customer Service.**

## DISPOSAL OF THE OLD DEVICE

---



Old electric and electronic devices frequently still contain valuable materials. However, they also contain damaging substances, which were necessary for their functionality and safety.

If these were put in the non-recyclable waste or were handled incorrectly, they could be detrimental to human health and the environment. Therefore, do not put your old device into the non-recyclable waste under any circumstances.



### **PLEASE NOTE:**

**Utilize the collection point, established in your town, to return and recycle old electric and electronic devices. If necessary, contact your town hall, local refuse collection service or your dealer for information.**

Ensure that your old device is stored safely away from children until it is taken away.

## WARRANTY, SERVICE AND SUPPORT

---

Thank you for purchasing a Grand Cru Wine Fridge from Home Icon International Pty Ltd. Home Icon provides a 1-year warranty on the Grand Cru range of Wine Fridges.

---

### WARRANTY REGISTRATION

---

Register your wine fridge now for warranty, and allow us to provide you with the best possible after sales service:

1. Please log on to our website at [www.grandcruwinefridges.com.au](http://www.grandcruwinefridges.com.au)
2. Click on the **'Support'** tab across the top
3. Select **'Warranty Registration'** and fill out the details as required

This warranty does not cover the following:

- Any damages caused from improper use or not used in accordance with the instruction manuals.
- Damage caused by connecting your product to the wrong power source/supply.
- Incorrect installation or modifications made during installation or use of the product.
- Removing screws or otherwise opening the outer case will void the warranty.
- Any damages resulting from poor handling or moving of the product, misuse, fire or water damage etc.
- Failure to maintain the product as per the Instruction Manual.
- Problems caused by incorrect or inadequate venting of the product.

### SERVICE AND SUPPORT

---


Should an instance arrive where you require assistance, contact our support team:

1. Please log on to our website at [www.grandcruwinefridges.com.au](http://www.grandcruwinefridges.com.au)
2. Click on the **'Support'** tab across the top
3. Select the **'Request a Service'** option and fill out the details as required

NEED HELP?  CALL 1300 935 683





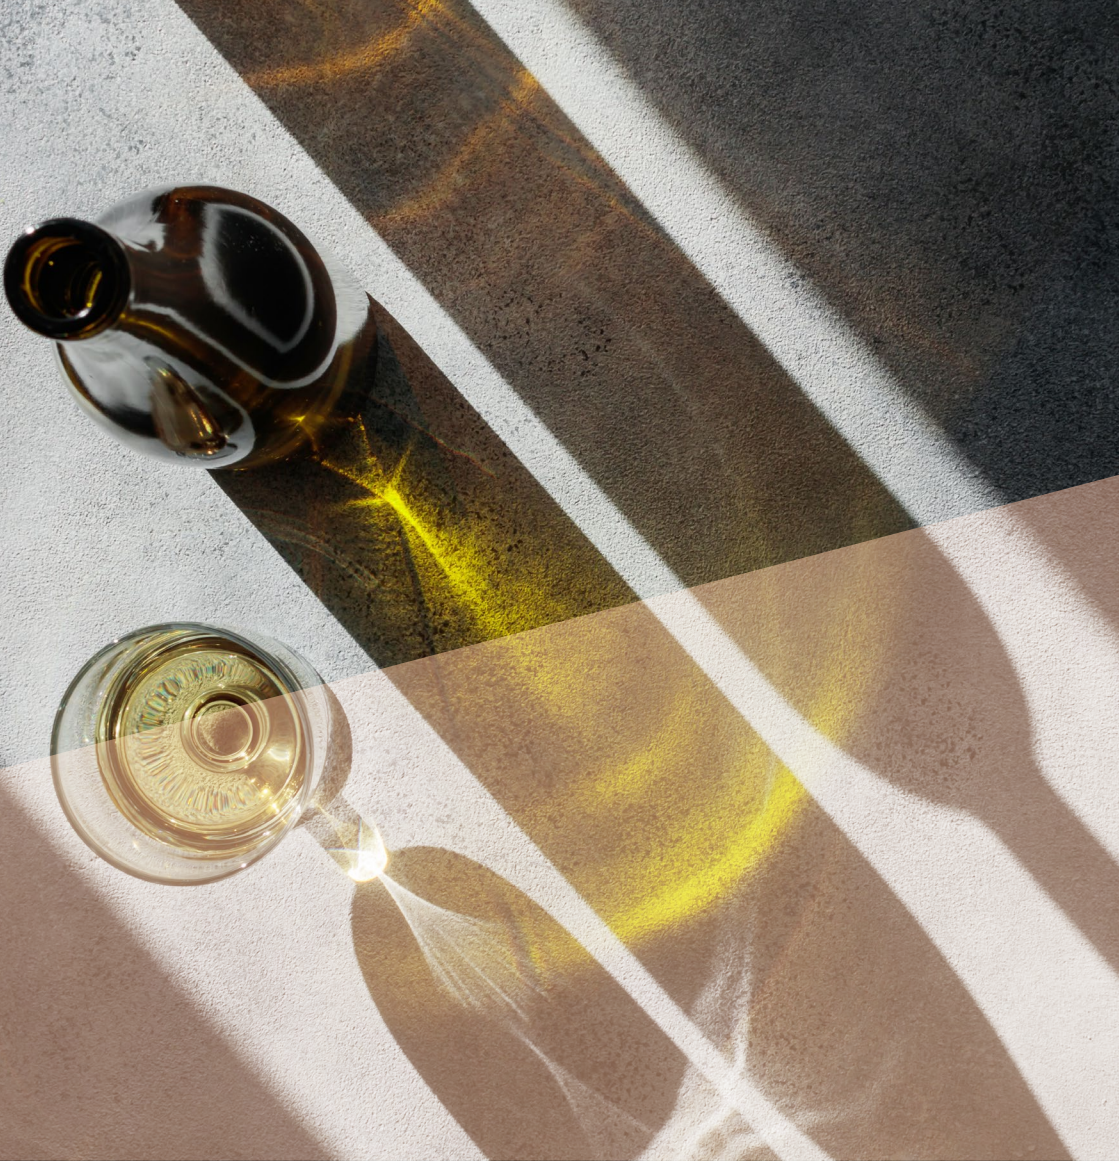

# LITTLE CAVE

by GRAND CRU®

[www.grandcruwinefridges.com.au](http://www.grandcruwinefridges.com.au)

NEED HELP?  CALL 1300 935 683