
## How to Use?

- Fill the foot bath with warm water no higher than the level indicator (approx. 4-5 cm)
- Ensure that the rotary switch is set to ① before the unit is connected to the mains
- Make sure the cable is routed safely so that there is no risk of anyone tripping over it
- · Be seated comfortably in a chair
- Place your feet on the footrest and apply slight pressure
- Set the desired function on the rotary switch:
- 1. Ooff
- 2. Wibration Massage + Infrared Light,
- 3. Heat + Bubble Massage,
- 4. Heat + Bubble and Vibration Massage + Infrared Light
- · Pour the water out over the narrow side of the footbath after use

## Massage roller

- Install the rollers, making sure that the roller fixing points downwards,
  as shown in the illustration given in the instruction manual
- Move your feet back and forth on the four massage rollers integrated into the bottom of the footbath for special massage effect
- Optionally, the massage rollers can be removed by pulling them firmly upwards

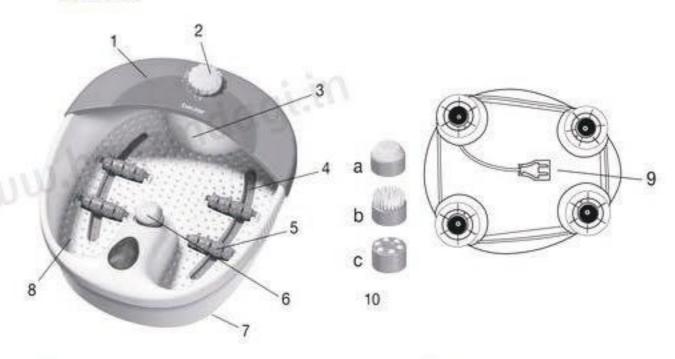

- 1. Splash protection 2. Rotary switch 3. Water level mark 4. Bubble strip 5. Massage attachment
- 6. Removable pedicure attachments a. Corn and callous remover b. Brush c. Massage attachment
- 7. Rubber feet (bottom side) 8. Foot rest with massage naps 9. Cord winder (bottom of device)

## REMEMBER

- Never connect the foot bath to the power supply when your feet are already in the water. If the device is damaged, this can lead to an electric shock
- Do not use the footbath if you have any changes caused by disease or injury in your foot (e.g. open wounds, warts, fungal infection)
- Do not use the foot bath for longer than 20 minutes to avoid risk of overheating.
  Allow it to cool for at least 15 minutes before using it again
- This device must be not be used by children or persons (including children) with restricted physical or sensory capabilities without supervision

- Do not place the foot bath in the shower, bathtub or wash basin for filling
- Please do not use it for animals or uses beyond what its been made for
- Switch the device off and disconnect the power supply after every use and before every cleaning
- Never stand up with your feet in the foot bath, as you might slip
- If the device is not working properly check the connectivity thoroughly. Send it to the Beurer Service Centre in India for repairs