How to Use?

- Take off the blade cover from the scissors
- Open the lock at the rear of the grip
- Hold the scissors in the palm of your dominant hand
- Rest the index finger on the curved area of the grip and the thumb on the other side
- Now use your thumb and fingers to apply pressure to close the blades
- The blades will automatically open due to spring
- Once done please lock the scissors and replace the blade cover



REMEMBER

- Keep away from children
- Avoid exposure to moisture in order to protect from rusting
- Clean fibers from the blades regularly with a dry old toothbrush