


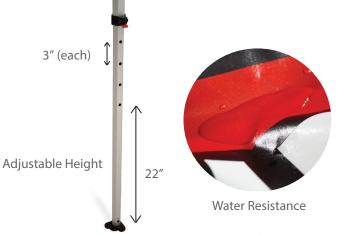

OUTDOOR USE





 






Optional Sand Bag







Our Casita Canopy Tents™ are an excellent way to provide shade during outdoor and indoor events. This canopy is a 15' x 10' size and are available in custom UV print, which has a high quality finish with vivid color. Set up is quick, easy, and user friendly. Telescopic legs snap into place offering a range of heights. This classic system included a protective dust cover to use while in storage.

DISPLAY DIMENSIONS	176"W x 135"H x 118.75"D
MIN. HEIGHT	99"H
MAX. HEIGHT	133"H
LOWEST SETTING TO PEAK	120.25"H
FLOOR TO LOWEST SETTING	22"H
GRAPHIC SIZE	Canopy: 176"W x 89"H Back Wall: 117"W x 79"H Half Wall: 117"W x 40.5"H

GRAPHIC MATERIAL

UV Fabric (water resistant)

GRAPHIC FINISHING

Hemmed around sides.

DISPLAY CONSTRUCTION

Aluminum frame (Hex leg thickness: 50mm)

SHIPPING WEIGHTS & DIMENSIONS

Shipping Weight	50 lbs (frame only) 56 lbs (frame and graphic)
Shipping Dimensions	62"L x 10"W x 13"H (over size)

LARGE QUANTITY FREIGHT

Freight Shipping	16 boxes per 48"L x 40"W x 67"H skid
Freight Weight	845 lbs (frame only)
	941 lbs (frame & graphic)

GRAPHIC TURN AROUND TIME

4 business days after proof approval

AVAILABLE ACCESSORIES

/ W/ WE/ KBEE / KOOLOOOTKILO	(V) (IE) (BEE) (GGEGGG) (IEG	
Rope	Sand Bag	
Stakes	La Caja Hard Case	
Flag Holder	Travel Bag Wheels	
AVAILABILITY	CA Only	
WIND RATING	20 mph	



Nylon Travel Bag



Optional La Caja Hardcase

PARTS LIST




(qty 1) Canopy Frame Frame



(qty 1) Rope



(qty 1) Travel Bag

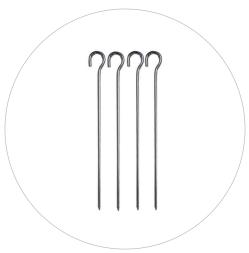

(qty 8) Stakes



(qty 1) Bag for Rope & Stakes

PRODUCT CODE: CAS-CST15UV

SET UP INSTRUCTIONS (5FT CANOPY SHOWN BELOW)

Take your frame and slightly expand it open to expose the corner bars.



Step 3

Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of loop Velcro sewn to it and each corner of the frame has a strip of hook Velcro.



Step 5

Increase the height by extending the lower legs.



Step 7

Locate the spindle under the canopy, in the middle of the frame. Pull the lever out and rotate to extend the upper peak pole. The dome cap will push out the canopy creating tension to flush out any loose areas.




Take your canopy graphic and place it on top of the frame.



Step 4

With the canopy securely in position, expand the frame until the corner latches lock into place.

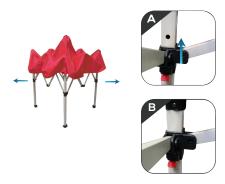

Step 6

Pull each leg down until the latch locks into place.



Step 8

The install is complete.

