

# How To Change or Replace Parts




Installation  
Tutorial Video

## Replace or Change Charcoal Filters:

It is recommended to direct vent the hood whenever possible. If your situation does not allow for a direct vent install, carbon filters are available to recirculate the air through your hood.

### Charcoal Filter Installation Instructions

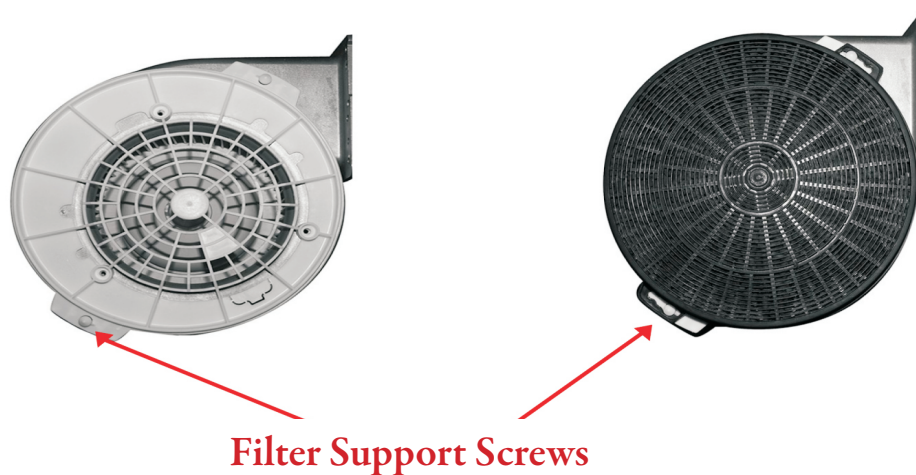

- ① Remove the stainless steel or aluminum filters from the bottom of the hood.
- ② Locate the existing raised support screws on each side of the internal motor(s).
- ③ For each motor side, position the filter over its support screw and rotate to lock into place.

**NOTE:** Replacement is recommended after 130 hours of cooking or 6 months of operation. Replace more often if your cooking habits generate more grease.

**NOTE:** Never work on or clean the range hood while power is ON!  
Always unplug the unit or switch the electrical breaker to the off position.