

ADULT ASSEMBLY REQUIRED



WARNING: Small Parts

Product contains small parts with potentially hazardous sharp points and sharp edges in the unassembled state. Keep unassembled parts away from children.



WARNING: Tipping Hazard

This toy has been rigorously tested to meet all toy tipping safety standards; however, this toy is **not meant** to be climbed on. Serious injury can occur with improper use.

- Do not allow children to climb on or hang from this product
- Place product on flat, level surface only
- Do not place heavy objects on top of this product
- Keep back of this product against a flat wall
- Follow age guidelines for this product

Assembly Instructions

1. Upon opening package, please inspect contents to make sure all parts and components are accounted for.
2. Place contents on padded or carpeted surface to avoid damage.
3. Please read assembly instructions carefully.

Use and Care


Use on level surfaces only, and routinely check hardware and tighten as necessary. Failure to maintain your new product may result in unsafe conditions for children.

We build our toys with years of future play in mind, so to ensure a long lifespan for your product, surface clean only with a dry soft cloth. To clean small stains, use a slightly damp cloth and if necessary, a mild detergent. Wipe all spills immediately and avoid using any abrasive cleaning agents or scrubs, including ammonia or alcohol based formulas.

For more for information on how to care for your new toy, please visit www.miltonandgoose.com.



 MILTON & GOOSE

Play Kitchen Hood

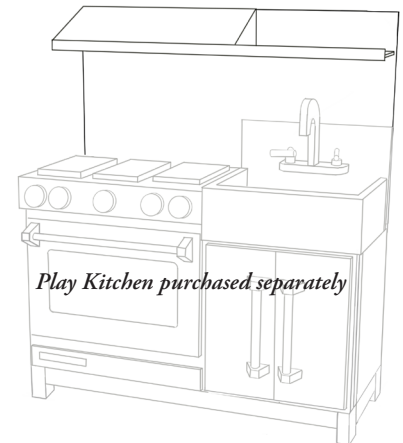

Tools Required

  
Philips-head screwdriver



A

Parts

- 1 hood (A)
- 1 backboard (B)
- 12 7/8" screws (C)
- 3 pegs (D)

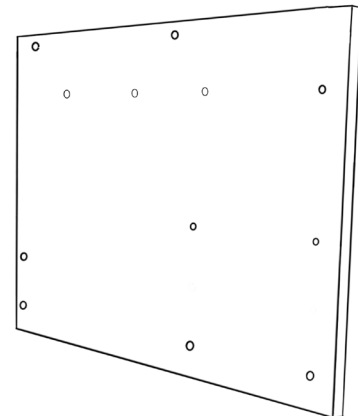

B

Qty 12



C

Qty 3



D

Directions




Loosely attach all screws and then tighten once all screws are in place. Be careful not to over-tighten, otherwise cracking of the wood can result.

Step 1

Insert all screws through pre-drilled holes first!


Attach backboard (B) with 6 screws (C) in pre-drilled holes at back of backboard. Secure screws.

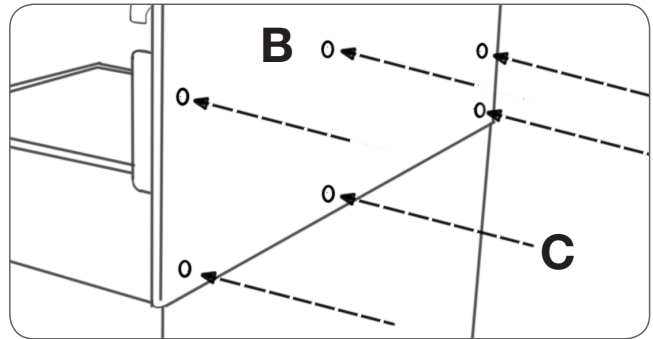

Step 2

Insert all screws through pre-drilled holes first!

Insert pegs (D) into backboard (B) and secure with 3 screws (C) in pre-drilled holes at back of backboard.

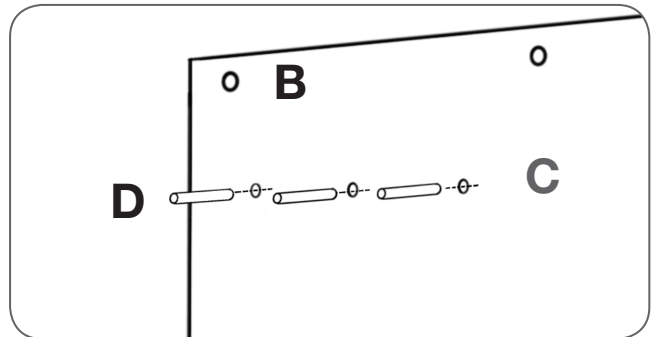

Step 3

Insert all screws through pre-drilled holes first!

Attach hood/shelf unit (A) with 3 screws (C) in pre-drilled holes at back of backboard. Position so the three pegs are hidden under the hood. Secure screws.

