

ADULT ASSEMBLY REQUIRED



WARNING: Small Parts

Product contains small parts with potentially hazardous sharp points and sharp edges in the unassembled state. Keep unassembled parts away from children.



WARNING: Tipping Hazard

This product is **not meant** to be climbed on. Serious injury can occur with improper use.



- We recommend installing the included anti-tip restraint
- Do not allow children to climb on or hang from this product
- Place product on flat, level surface only
- Do not place heavy objects on top of this product
- Keep back of this product against a flat wall
- Follow age guidelines for this product

Assembly Instructions

1. Upon opening package, please inspect contents to make sure all parts and components are accounted for.
2. Place contents on padded or carpeted surface to avoid damage.
3. Please read assembly instructions carefully.

Use and Care

Use on level surfaces only, and routinely check hardware and tighten as necessary. Failure to maintain your new product may result in unsafe conditions for children.


We build our products with years of future play in mind, so to ensure a long lifespan for your product, surface clean only with a dry soft cloth. To clean small stains, use a slightly damp cloth and if necessary, a mild detergent. Wipe all spills immediately and avoid using any abrasive cleaning agents or scrubs, including ammonia or alcohol based formulas.

For more for information on how to care for your new product, please visit www.miltonandgoose.com.

 MILTON & GOOSE

Terry Storage Console

A

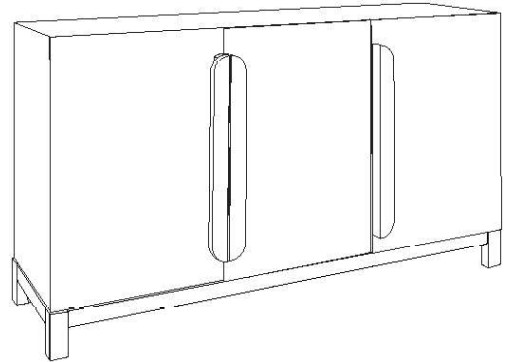

Parts

 
- 1 console (A)
- 4 legs (B)
- 4 wingnuts (C)
- 1 anti-tip kit (D)

NO TOOLS REQUIRED


C
Qty 4



B
Qty 4

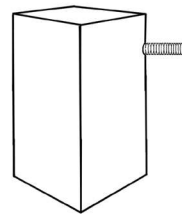


D
Qty 1

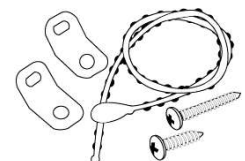 

Directions

Step 1

 Attach 4 legs (B) to console (A) with wing nuts (C).
Turn wing nuts clockwise until tight and securely attached.

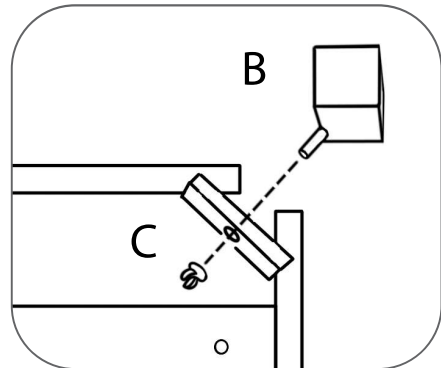

Step 2

Install the included anti-tip kit (D) using the instructions included with the kit.