

CLEANING INSTRUCTIONS

Daily

Mixing unit

Brew chamber and reservoir
(buffer)

Waste bin

Drip tray

Outside

Weekly

Fan

(right side)

Instant canister(s)

Coffee canister

Bean canister

Brewer

Inside



Daily cleaning: Mixing unit

General:

To ensure that the machine continues to work properly, the mixing unit should be flushed several times a day and cleaned daily. You can use the flushing program to flush the machine. (Flush brewer + mixer in the 'Setup menu')

Procedure:

1. Close the 'orange' slider on the canister(s)
2. Remove all tubes from the outlet bracket
3. Disconnect the tube from the mixing unit
4. Turn the fastening ring to the left
5. Remove the mixing unit and the condensate reservoir
6. Remove the mixer
7. Remove the seal and disassemble it (3 parts)
8. Clean the shaft, mixing unit base and the condensate reservoir opening
9. Clean the individual parts (dishwasher proof)
10. Reassemble the mixing unit in reverse order
11. Pay attention to the flat side of the shaft and the mixer opening (A)
12. Reconnect the tube to the mixing unit and replace it in the outlet
13. Reconnect all hoses to the outlet bracket
14. Open the 'orange' slider on the canister(s)
15. Activate the flushing program



Note:

The parts can be cleaned with tap water.



Daily cleaning:
Brew chamber and reservoir (buffer)

General:

The brew chamber and reservoir (buffer) should be cleaned on a daily basis.

In order to flush the machine the flushing programme can be used.

(Flush brewer + mixer in the 'Setup menu')

Procedure:

1. Close the 'orange' slider of the canister(s)
2. Place the service key
3. Push the button 'Open/close brewer' in the Setup menu
4. Remove the brew chamber
5. Remove the reservoir of the brewer (buffer)
6. Clean the brew chamber and reservoir (dishwasher proof)
7. Place back the brew chamber and reservoir
8. Reinsert the tube into the locking spring
9. Push again on the button 'Open/close brewer'
10. Open the 'orange' slider of the canister(s)
11. Activate the flushing programme



General:

The waste bin must be cleaned.

Procedure:

1. Cut or tear the paper (above the waste bin)
2. Empty the waste bin
3. Clean the waste bin (not dishwasher proof)
4. Make sure the waste bin is completely dry
5. Replace the waste bin
6. Reset waste bin counter ('Maintenance menu')

Note:

This procedure is not necessary if you use a waste pipe.



General:

The drip tray must be emptied and/or cleaned

Procedure:

1. Slide the drip tray forward
2. Remove the drip tray grid
3. Empty the drip tray
4. Clean the drip tray (not dishwasher proof)
5. Clean the drip tray grid
6. Make sure the red float is still in place
7. Replace the drip tray grid
8. Slide the drip tray back to the front of the machine

Note:

If the drip tray is connected to a fixed drain:

- weekly cleaning is sufficient (dependent on the level of waste)
- it cannot (or only partially) be pulled forward



Daily cleaning:
Outside

General:

The outside of the machine can be cleaned with a damp cloth

Procedure:

1. Switch off the machine (because of the touch screen)
2. Clean the outside with a damp cloth
3. Switch on the machine
4. Clean the drip tray grid with a damp cloth

Note:

Switch off the machine to clean the glass plate at the front of the door. Do not use abrasive cleaning agents.



Weekly cleaning:

Fan (right side)

General:

The fan and its housing should be cleaned to ensure that the steam can exit the machine properly and to avoid obstructions in the ingredient canister.

Procedure:

1. Switch off the machine
2. Open the fan
3. Carefully remove the rotor from the motor
4. Clean the rotor (not dishwasher proof)
5. Clean the inside of the housing with a brush and a damp cloth
6. Replace the rotor in the motor
7. Close the fan
8. Switch on the machine
9. Activate the flushing program



*Weekly cleaning:
Instant canister(s)*

General:

The ingredient canisters should be cleaned weekly in order to avoid obstructions and jams.

Procedure:

1. Close the outlet by pushing the 'orange' slider to the back
2. Remove the ingredient canister(s) from the machine
3. Pour the ingredients into a dry bowl
4. Disconnect the outlet from the ingredient canister
5. Clean the ingredient canister and outlet with a brush (do not use water!)
6. Refill the ingredient canister(s)
7. Replace the ingredient canister(s) in its/their correct position
8. Open the outlet by pulling the 'orange' slider forward
9. Activate the flushing program

Note:

Do not use liquid in the ingredient canister(s).



Weekly cleaning: Coffee canister

General:

Cleaning of the coffee canister should take place weekly in order to avoid obstructions and jams.

Procedure:

1. Close the 'orange' slider of the coffee canister
2. Remove the canister
3. Pour over the fresh brew coffee in a dry bowl
4. Unlink the outlet from the ingredient canister
5. Clean the ingredient canister and outlet with a brush (no water!)
6. Refill the ingredient canister with coffee
7. Replace the canister
8. Open the 'orange' slider of the coffee canister
9. Activate the flushing programme

Note:

Avoid liquids in the coffee canister.



Weekly cleaning:

Bean canister

General:

The bean canister must be cleaned in order to remove greasy deposits.

Procedure:

1. Close the bean canister by pulling the 'orange' slider forward
2. Remove the bean canister
3. Pour the beans into a dry bowl
4. Clean the bean canister
5. Refill the bean canister
6. Remove any remaining beans from the plate on which the canister rests
7. Replace the bean canister in its correct position
8. Open the 'orange' slider on the bean canister
9. Activate the flushing program

Note:

If you clean the bean canister with water, make sure that all parts are very dry before you fill the bean canister again.



General:

The brewer should be cleaned weekly (not dishwasher proof). You can use the cleaning procedure to clean the brewer (cleaning brewer in the 'Setup menu').

Procedure:

1. Close the 'orange' slider of all the canisters
2. Disconnect the brewer outlet from the brewer
3. Carefully tear off the filter paper, just before the brewer.
4. Place the service key
5. Push the button 'Open/close brewer' in the Setup menu
6. Drop the remaining filter paper in the waste bin
7. Remove the reservoir of the brewer (buffer)
8. Remove the brewer
9. Remove the brewer chamber from the brewer
10. Remove the filter screen
11. Remove the filter plate
12. Wash all parts, including the brewer, in hot water, no dishwasher!
(if necessary with a non-corrosive detergent)
13. Remount all parts in reversed order
14. Place the filter paper
15. Push again on the button 'Open/close brewer'
16. Reconnect the brewer outlet to the brewer
17. Open the 'orange' slider of all the canisters

Note:

Do not clean the filter with use a hard brush or tools. When replacing the brewer, use the supplied special tools to adjust the drive so it clicks into the clutch in the back wall of the machine.



General:

The inside of the machine should be cleaned weekly with a damp cloth.

Procedure:

1. Close the 'orange' slider on all canisters
2. Remove the canisters
3. Remove the coffee canister from the machine
4. Remove the waste bin
5. Clean the inside of the machine with a damp cloth
6. Replace the ingredient canister(s) in its/their original position
7. Replace the bean canister
8. Replace the waste bin
9. Open the 'orange' slider on all the canisters
10. Activate the flushing program

