




Scan for  
instructional video

## Shade Tee Usage Instructions


### 1. Install Stake

Taking care to properly align the stake threads, screw the stake into the bottom on the ShadeTee. Misalignment of the threads can result in stripping of the aluminum threaded insert.

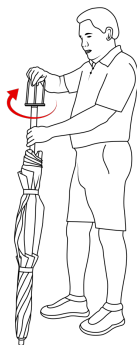


### 2. Open Canopy

Open the canopy and insert the pin through the main hub by extending the poles so that the point where the pin is to be inserted into the pole is at eye level in order to make the pin hole in the top pole viewable and insertion as easy as possible

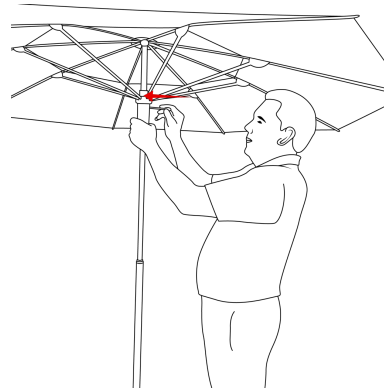


### 3. Set Top and Middle Poles to desired Height.

The 3-section twist locking pole system enables the ShadeTee to be set at any height desired by twisting each pole right to tighten. Twist until moderate resistance is felt. Overtightening can damage the locking mechanisms.

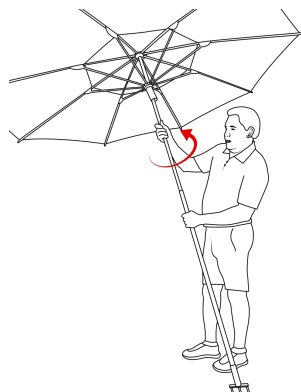


### 4. Set ShadeTee in Turf

Holding the pole of the Shade Tee in place with both hands, step on the stake to fully push in into the turf in a location where the canopy will provide shade spot in desired location. Take care to keep ShadeTee as vertical as possible for best performance in wind.

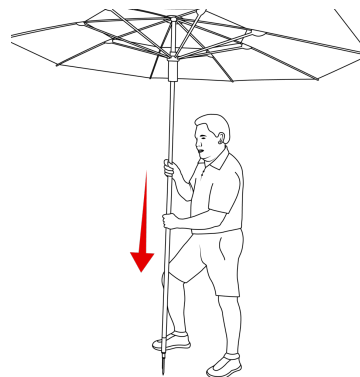


### 5. Remove ShadeTee from Turf

Move ShadeTee back and forth a few times to loosen stake in ground and pull ShadeTee upward.

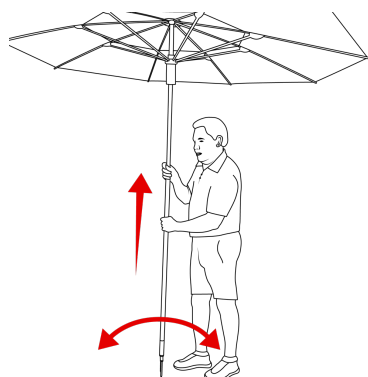

### 6. Loosen Poles and collapse for storing.

Twist poles to the left to loosen them and collapse ShadeTee to its shortest length for packaging in carry bag.

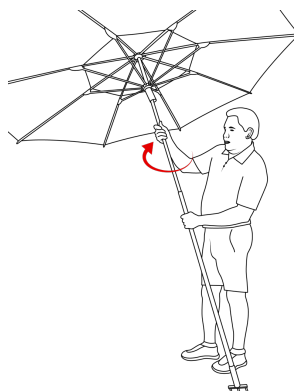



## Detail Shade Tee Usage Instructions

**1. Install Stake.** After removing from the storage bag, screw the stake clock-wise into the threaded insert in the bottom pole of the Shade Tee.

**2. Open Canopy.** Next open the canopy and insert the pin through the main hub to secure the canopy in the open position. This is most easily done by extending the poles so that the point where the pin is to be inserted into the pole is at eye level in order to make the pin hole in the top pole viewable and insertion as easy as possible. Once poles are positioned properly, push the hub upward with the left hand, pulling down on the top pole with the alternate hand, until the hub poles align with the pole pin hole. Hold the hub in place by grasping the hub and the pole at the same time with one hand and insert the pin through the hole in the top pole with the alternate hand. Once the canopy is open, slide the hub stabilizer located on the top pole above the hub down into the top of the hub.

**3. Set Top and Middle Poles.** Once the canopy is open and secure, the next step is to set the Shade Tee to your desired height. This is done by adjustment of the three section, twist locking, telescopic pole. For most common height settings, we recommend that the top or smallest pole be fully extended and locked in place first. The twist locking mechanism is based on the right-hand rule where the pole to be locked in place be turned to the right or clockwise to lock. Holding the middle pole with the left hand, twist the top pole right with the right hand to lock it in place. Continue twisting until moderate resistance is felt. Over tightening is not necessary and could cause damage to the locking mechanism inside the pole. Next, raise the middle pole to adjust the canopy to the desired height. While holding the bottom pole with the left hand, twist the middle pole to the right with the right hand until moderate resistance is felt.

**5. Determine Ideal location.** Finally, determine the exact location on the range where you would like to locate the Shade Tee. The location of the Shade Tee will be dependent on the position of the sun in the sky. Once a suitable location is determined, orient the Shade Tee as perfectly vertical as possible and while holding the pole of the Shade Tee in place with both hands, step on the stake to fully push in into the turf. Keeping the Shade Tee vertical and thus the canopy as horizontally flat as possible enables optimum Shade Tee Performance in the wind. The Shade Tee is now ready to use.

In its highest position, golfers are able to complete a full swing under the canopy. This would occur when the sun is directly overhead. When the sun is not directly overhead simply move into the shaded area.

**Once a session is complete.** Move the ShadeTee back and forth a few times to loosen the stake in the ground and then pull the Shade Tee stake from the ground. Next, unlock the middle pole by grasping the bottom pole with the left hand, and then twisting the middle pole left or counter clock-wise with the right hand until it is loosened and lower into the bottom pole. Once the middle pole has been loosened, repeat for the top pole by grasping the middle pole with the left hand and twisting the top pole left or counter clock-wise with the right hand until it is loosened and lower into the middle pole. Push up slightly on the hub to remove the tension between it and the pin and remove the pin from the main hub lowering the canopy. Collapse the 3-section telescopic pole until the poles are completely nested and then secure the canopy using the canopy bundle strap and place into the storage bag top end first. Finally, remove the stake by unscrewing it from the threaded insert in the bottom pole and place in storage pocket on the side of the ShadeTee carry bag.

**A WORD ABOUT WIND.** While the Shade Tee has been tested in and is rated to perform in sustained winds of 15 mph, sound judgement and care should be taken as to whether to utilize the Shade Tee on windy days. **In no case should the Shade Tee ever be left unattended in the open position in windy conditions. During pauses in use, the Shade Tee canopy should be closed to prevent an unexpected heavy gust of wind from damaging the unit. For clubs providing ShadeTees for use on their driving ranges, the ShadeTee is not meant to be a permanent structure and should not be set up on the driving range and left attended for extended periods of time.**

**Warranty & Returns:** The Shade Tee is warranted against defects of materials and workmanship for 90 days and are fully refundable within 30 days of purchase. All purchases of the ShadeTee product from Anderson Golf implies agreement that the ShadeTee will not be used in sustained winds of 15 mph or greater. The warranty does not cover damaged caused by misuse or damage cause by wind. Anderson Golf provides a flat rate repair service for non-warranty damaged ShadeTees of \$50.00.

Prior to returning any product, Anderson Golf should be contacted at admin@andersongolfideas.com or 910-724-3412 to have a return authorization number assigned. Shipping costs for Warranty replacements and refunds are the responsibility of the customer. Discounted shipping labels will be provided by Anderson Golf. Refunds, Warranty claims and damaged units will be sent to Anderson Golf, 80 Blake Blvd #4586, Pinehurst, NC 28374.