## FLEXTILT HEAD 3D

## USER'S MANUAL


Before operating your edelkrone, please watch the user's manual video from the link below

http://edel.kr/fh3d






## 1. WHAT'S IN THE BOX

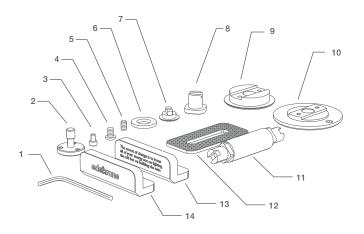

- 1. 2,5mm allen key
- 2. 1/4"-20 mounting screw
- 3. M3 screws (11 pcs)
- 4. M4 screws (8 pcs)
- 5. M5 set screw

- 6. X16 (6 pcs)
- 7. X11 (6 pcs)
- 8. X10 (4 pcs)
- 9. X14
- **10.** X13

- 11. X12
- 12. Soft plate sticker
- **13.** X9 L
- **14.** X9

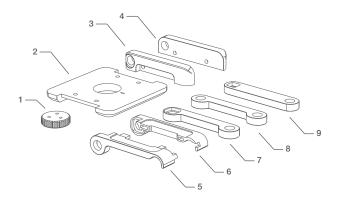


**1.** X17 **4.** X4


**7.** X7

**2.** X1 **5.** X3


**8.** X6


**3.** X5 **6.** X2 **9.** X8 (2pcs )

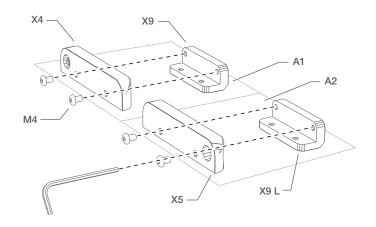


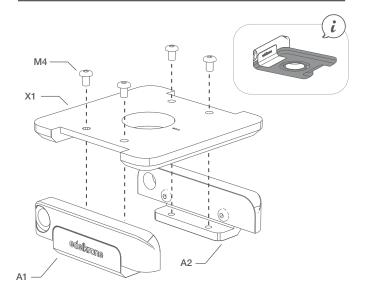




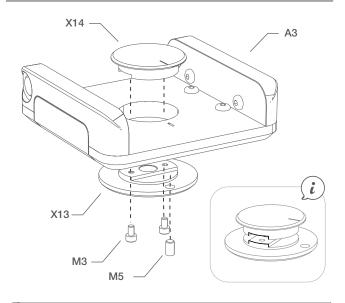


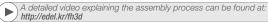


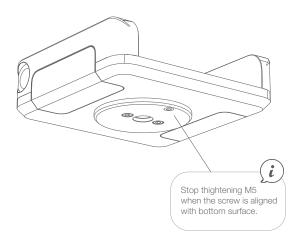





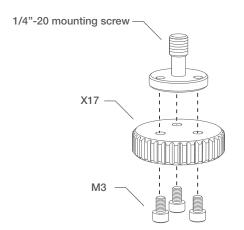

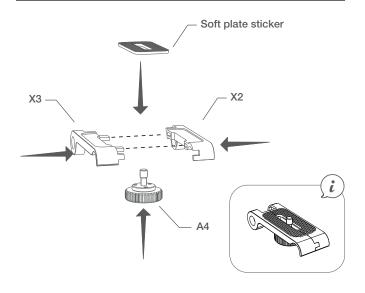


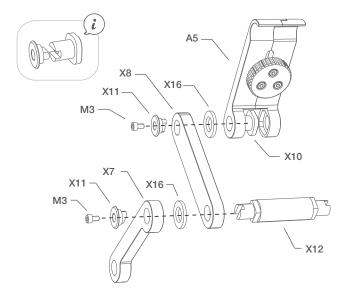

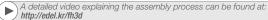


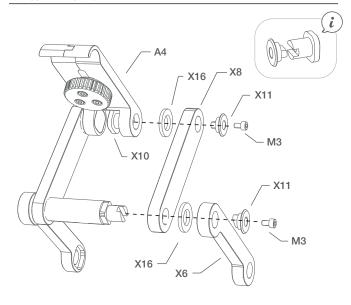




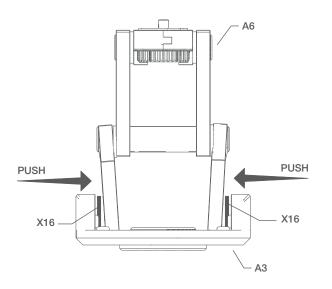



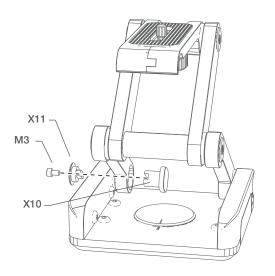




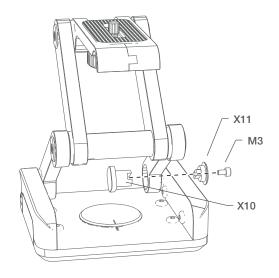




A detailed video explaining the assembly process can be found at: http://edel.kr/fh3d

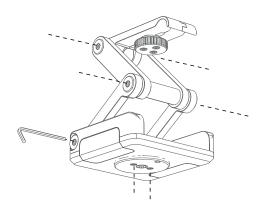


You can adjust the tension of the system with the help of 2.5mm allen key. Simply tighten or loosen the screws on each side.

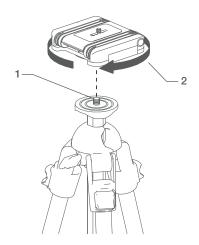

- 1. Place your FlexTILT Head on the screw.
- 2. Rotate clockwise to tighten.
- 3. Continue rotating until it is tightened.




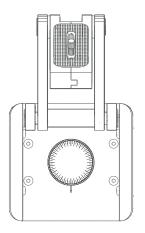

If the hash marks are turning, it means the FlexTILT Head is panning.

If the hash marks are turning with the FlexTILT Head itself, it means FlexTILT Head either loosens or thightens.



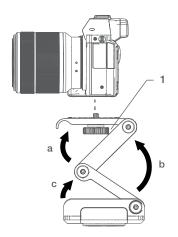

- 1. Unfold the FlexTILT Head to access the mounting wheel.
- 2. Attach your camera by turning the mounting wheel.
- ! While adjusting height, adjust one point at a time. (a,b,c)

## DISCLAIMER

edelkrone cannot be held responsible for damage caused by improper use or modification of the product.



For more information and tips about your FlexTilt Head 3D, please watch the user's manual videos at: http://edel.kr/fh3d

edelkrone

