

MIXX[®]

StreamBuds[™] Mini 1 True Wireless Earbuds

QUICK START GUIDE



MIXX

THANKS!

Thanks for choosing our MIXX StreamBuds Mini 1 earbuds.

All of our products come with a 2 year warranty for peace of mind.

Feedback is welcome, email us on support@mixx-io.com for any comments or queries.




CONTENTS

LET'S START	1
LET'S STAY CHARGED	2
LET'S CONNECT	3
LET'S PLAY	4
LET'S ASK GOOGLE/SIRI	5
LET'S RECYCLE	5
LET'S BE SAFE	6

LET'S START

What's in the box?

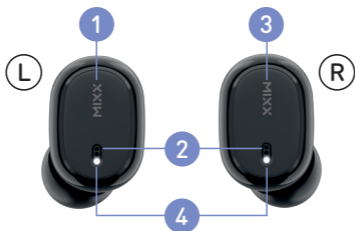

LET'S STAY CHARGED

The Earbuds

Note: If your earbuds and charge case do not have any power when you first unpack them, place the earbuds into the charge case and plug the charge case into a USB port using the USB C cable **8** provided.

A voice prompt "Battery low" allows for 2 minutes play time before the earbud powers down stating "Battery low, power off". The earbuds LED Lights **4** will each flash WHITE twice, every 5 seconds to show battery is low. Before the earbuds power off they will flash WHITE three times.

Charge the earbuds by placing them in the Portable Charging case **5**.

IMPORTANT! See the back of each earbud to view the left **L** and right **R** letters. Then place them in their respective slots in the charging case and close the lid to charge.

While charging, the Earbud LED Lights **4** will be WHITE and once fully charged, the LED Lights will turn off.

TIP: 15 MINUTE QUICK CHARGE

If you're running low on power, charge your earbuds for 15 minutes and get **2 hours extra play time** while on the go.

The Portable Charging Case

When all 4 LED Charge Indicators **6** switch off, then it is time to recharge.

Always connect the case to a suitable USB wall charger, computer USB port or a power bank using the USB C charging cable **8** supplied. Plug the supplied cable into the USB C port **7** on the charge case.

Each LED Charge Indicator **6** represents 25% charge on the case.

The first LED indicator will flash WHITE until it reaches 25% charge, then it will remain on as the next LED indicator begins to flash.

The case is fully charged when all 4 of the LED Charge Indicators **6** are WHITE. This can take up to 2 hours.

LET'S CONNECT

First time pairing

Place the earbuds in the Portable Charging Case **5**. See the back of the earbuds to ensure the left **L** and the right **R** earbuds are in their respective slots in the case.

Remove both earbuds from the Portable Charging Case **5**. They will automatically dual pair together and a voice prompt will state 'Pairing'. The earbud LED lights **4** will flash WHITE to indicate pairing mode.

Go to the Bluetooth settings on your audio device to select 'MIXX StreamBuds Mini 1' from the list. Once paired successfully you will hear 'Connected' and the Earbud LED Light **4** will turn off.

You can now enjoy your music, watch a video or take a call hands free. The earbuds will automatically reconnect to the last device they were paired with, confirming 'Connected'.

Placing both earbuds back in the Portable Charging Case **5** and closing the lid will power them off. (Note – if the earbuds do not turn off, the battery in your charging case needs to be recharged – see 'Let's Stay Charged')

LET'S PLAY

TOP TIP:

For better noise isolation, comfort and sound quality ensure the correct sized (S, M or L) ear cushions **9** (supplied) are fitted on the earbuds.

NOTE: Check the back of the earbuds for **L** and **R** letters to ensure you place them in the correct ears.

Play / Pause

Long press for 1 second either Touch Sensor **1** or **3** .

Decrease Volume

Single tap LEFT Touch Sensor **1** .

Increase Volume

Single tap RIGHT Touch Sensor **3** .

Answer / End call

Long press for 1 second either Touch Sensor **1** or **3** .
(Audio is picked up via the microphones **2** .)

Decline an incoming call

Double tap either Touch Sensor **1** or **3** .

Power On

Remove both earbuds from the case and they will automatically dual pair together.

To manually turn on, **long press** each Touch Sensor for **2 seconds**.

Power Off

Place both earbuds in the case and close the lid. This will automatically turn off the earbuds and the Bluetooth.

To manually turn off, **long press** each Touch Sensor for **6 seconds**.

LET'S ASK GOOGLE ASSISTANT / SIRI


Pair your Bluetooth device with your earbuds.

Double tap either Touch Sensor **1** or **3** to activate Siri or Google Assistant.

Your Voice Assist familiar 'Beep' will sound to confirm connection. You can now ask Siri or Google Assistant a question or state a command.

LET'S RECYCLE

This product can be recycled.

Products bearing this symbol  must NOT be thrown away with normal household waste.

Take the product to a collection point designated for recycling of electronic devices.

Find out more about return and collection points through your local authority.

LET'S BE SAFE

IT IS IMPORTANT THAT YOU PLEASE READ THIS SECTION COMPLETELY.

For your protection

Check with your doctor before use if you are fitted with a medical device such as a pacemaker or a programmable shunt.

Ensure the product is correctly connected using the manufacturer's original accessories included with the product.

Do NOT make unauthorized alterations to this product.

Product may contain small parts which can be a choking hazard. Please keep the product out of reach from children under 6 and animals.

Whilst this product has been made using hypo-allergenic materials, you may suffer some skin irritation after prolonged use.

Do NOT listen to loud music for a long duration of time. We recommend turning the volume down before placing the device in your ears to avoid hearing damage.

Do NOT use the product while operating machinery, including cars, trucks or other vehicles.

Do NOT use noise cancelling mode or use your device in areas where the use of hearing is required for safety. e.g., while riding a bicycle, at a construction site or railroad etc.

Clean only with a dry cloth - Wipe off sweat from the earbuds and the

charging case before charging.

IMPORTANT!

Do NOT use a non-certified PD or QC3 wall charger as this may damage the product. Only use the cable supplied to charge your device.

If your product has become damaged in any way, does not operate normally or has been dropped, please refer to a qualified person to have the product checked before continuing to use it.

WARNING:

This product contains a Lithium battery. Incorrect disposal of this battery may result in an explosion.

The operating temperature range for this product is 5° - 40° celsius.

Please avoid exposing the product, charging case and cable connectors to prolonged rain, moisture or liquid spills/splashing.

Please remove your device from your ears immediately if they emit any loud unusual noise or you experience a warming sensation.

If you experience any of the issues listed above, please turn off your device and contact MIXX Ltd on support@mixx-io.com

MIXX



support@mixx-io.com



mixxaudio.com

MIXX Limited

5 The Pavilions, Brighton Road, Pease Pottage,
West Sussex, RH11 9BJ. United Kingdom