



Streambuds

True Wireless Earphones

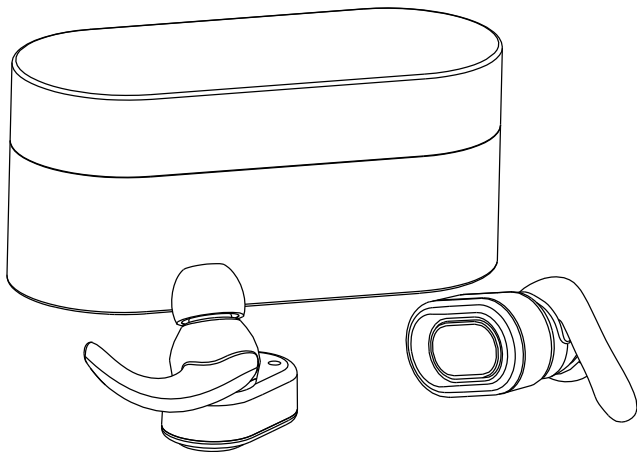

Quick Start Guide

MIXXAUDIO™

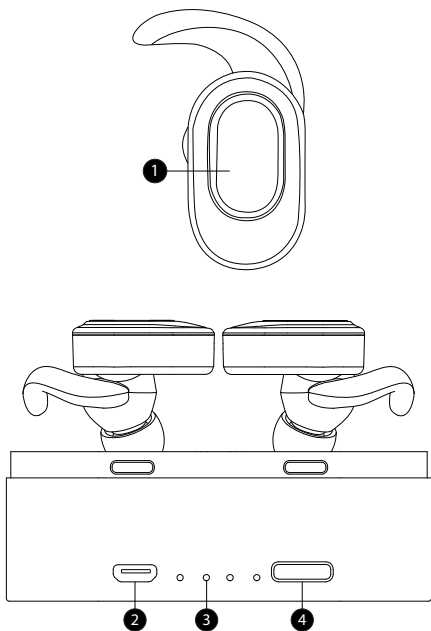

-
- 1 Multi-Function Button
 - 2 Micro USB Charging Port
 - 3 Power Level Indicator Lights
 - 4 Charge Button

Powering On and Pairing

Press the Multi-Function Button on both earphones for 2 seconds. A light on each earphone will flash blue and red.

Once the lights have stopped flashing, the earphones are paired with each other.

One of the earphones will start flashing blue and red, and the other flashes blue every few seconds, the earphones are ready to pair with your phone.

Using your phone, search for nearby Bluetooth Devices. Select 'Mixx Streambuds' and pair your phone with the earphones.

Note: If you have used the earphones before, you will only need to press the Multi-Function Button on each earphone, then search and pair the earphones with your phone.

Powering Off

Press the Multi-Function button on either earphone for 3 seconds. The lights will flash red, then both earphones will switch off.

Charging the earphones

The earphones are charged using the Portable Charging Case. When you have finished using the earphones, place them back into the case and press the Charge Button. The earphones will then begin to charge.

While the earphones are charging, the lights on them will be red. The Charging Case will continue to charge the earphones until they are both fully charged. Once they are fully charged, the lights will switch off.

Always charge the Portable Charging Case using the included micro USB cable and a suitable USB charger.

Checking the Charging Case Charge Level

To check the charge level of the Portable Charging Case at any time, press the Charge button.

The Charge Level Indicator Lights will switch on to show the amount of charge in the Power Bank.

Each light represents approximately 25% charge. e.g. 3 lights is approximately 75% charge

Taking Phone Calls

Answer a call- Short Press Left Earphone Multi-Function Button

Decline a call- Press and Hold Left Earphone Multi-Function Button

End a call- Short Press Left Earphone Multi-Function Button

Redial last No.- Double Press Left Earphone Multi-Function Button

Note: You must be using the LEFT earphone for hands-free calling.

Controlling Music Playback

Play- Short Press Multi-Function Button on either earphone

Pause- Short Press Multi-Function Button on either earphone

Note: With most phones, pressing 'Play' with no music player running on the phone will launch the phone's default music player app and start playback.

Safe Usage Instructions

Do not drop, short circuit, or disassemble this product.

Refer all servicing to qualified persons. Servicing may be required when the product has been damaged in any way and does not operate normally, or has been dropped.

Do not install this product in confined or built-in space such as a bookcase or similar unit.

If the battery is ballooning, discharged, or faulty, please stop using it immediately.

Please keep this product out of reach of children and animals.

WARNING: Please refer to the information on the safety labels on the product or its power supply before installing or operating the device.

WARNING: To reduce the risk of fire or electrical shock, do not expose this product to rain or moisture. The product should not be exposed to dripping or splashing water. Objects filled with liquids should not be placed on the product.

CAUTION: This product contains a Lithium battery. Incorrect disposal of this battery may result in explosion.

The recommended operating temperature of this product is between 5°C and 40°C.

MIXX AUDIO™

For support please visit www.mixxaudio.com

Made in China