

MIXX™

TRUE WIRELESS



StreamBuds™ Micro M1 True Wireless Earbuds

HOW TO GUIDE

MIXX

THANKS!

Thanks for choosing our MIXX StreamBuds Micro M1.

All of our products come with a 2 year warranty for peace of mind.

Feedback is welcome, email us on support@mixx-io.com for any comments or queries.




CONTENTS

LET'S START	1
LET'S CONNECT	3
LET'S ASK GOOGLE OR SIRI	3
LET'S STAY CHARGED	4
LET'S PLAY	5
NEED EXTRA HELP?	7
LET'S VIEW TECHNICAL SPECS	8
CONTACT MIXX	8
LET'S BE SAFE	9
LET'S RECYCLE	10
SAFE USAGE INFO	12

LET'S START

What's in the box?

A pair of MIXX StreamBuds Micro M1
True Wireless Earbuds

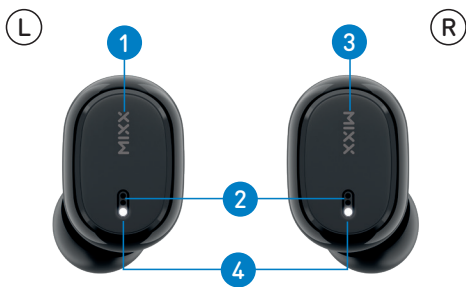

Portable charging case



USB Type C charging cable



3 Pairs of Ear Cushions,
small, medium and large



- 1 Left Touch Sensor
- 2 Microphones
- 3 Right Touch Sensor
- 4 Earbud LED Lights
- 5 Portable Charging Case
- 6 LED Charge Light
- 7 USB Type C Charging Port
- 8 USB Type C Charging Cable
- 9 3 Pairs of Ear Cushions (S, M and L)

LET'S CONNECT

First Time Pairing

Place the earbuds in the Portable Charging Case **5**. See the back of the earbuds to ensure the left (L) and the right (R) earbuds are in their respective slots in the case.

Remove both earbuds from the Portable Charging Case **5**. They will automatically dual pair together and a 'Beep' will sound. One of the Earbud LED lights **4** will flash WHITE to indicate pairing mode.

Go to the Bluetooth settings on your audio device to select 'MIXX StreamBuds M1' from the list. Once paired successfully you will hear 'Connected' and the Earbud LED Light **4** will turn off.

You can now enjoy your music, watch a video or take a call hands free. The earbuds will automatically reconnect to the last device they were paired with, confirming 'Connected'.

Placing both earbuds back in the Portable Charging Case will power them off.

LET'S ASK GOOGLE OR SIRI

Pair your Bluetooth device with your earbuds.

Double tap either Touch Sensor **1** or **3** to activate Siri or Google Assistant.

Your Voice Assist familiar 'Beep' will sound to confirm connection. You can now ask Siri or Google Assistant a question or state a command.

LET'S STAY CHARGED

The Earbuds

A voice prompt 'Battery low' allows for 2 minutes play time before the earbud powers down stating 'Battery low, power off'. The Earbuds LED Lights **4** will each flash WHITE for 5 seconds and will then switch off.

Charge the earbuds by placing them in the Portable Charging case **5**.

IMPORTANT! See the back of each earbud to view the left **L** and right **R** letters. Then place them in their respective slots in the charging case and close the lid to charge.

While charging, the Earbud LED Lights **4** will be WHITE and once fully charged, the LED Lights will turn off.

The Portable Charging Case

Ensure that one or both earbuds are inside the Portable Charging Case **5** to check the battery status of the case. Remove the earbuds then place them back into the case. When the case LED Charge Light **6** flashes BLUE or does not light up then it is time to recharge the Case.

Always charge the case to a suitable USB wall charger, computer USB port or a power bank using the USB Type C charging cable supplied.

The LED Charge Light **6** will flash RED while charging and will then turn off once fully charged. This can take up to 1 to 2 hours.

TIP: 15 MINUTE QUICK CHARGE

If you're running low on power, charge your earbuds for 15 minutes and get **2 hours extra play time** while on the go.

LET'S PLAY



TOP TIP: For better noise isolation, comfort and sound quality ensure the correct sized (S, M or L) ear cushions (supplied) are fitted on the earbuds.

First Time Pairing

Remove both earbuds from the Portable Charging Case.

Go to the Bluetooth settings on your audio device to select 'MIXX StreamBuds M1' from the list.

Once paired successfully you will hear 'Connected'.

NOTE: Check the back of the earbuds for **L** and **R** letters to ensure you place them in the correct ears.

Play / Pause

Long press for 2 seconds either Touch Sensor **1** or **3** .

Decrease Volume

Single tap LEFT Touch Sensor **1** .

Increase Volume

Single tap RIGHT Touch Sensor **3** .

Answer / End call

Long press for 2 seconds either Touch Sensor **1** or **3** .

Decline an incoming call

Double tap either Touch Sensor **1** or **3** .

Activate Siri or Google Assistant

Double tap either Touch Sensor **1** or **3** to activate Siri or Google Assistant.

Listen for the familiar Voice Assist 'beep' then ask a question or state a command.

Power On

Remove both earbuds from the case and they will automatically dual pair together.

To manually turn on, **long press for 3 seconds** each Touch Sensor.

Power Off

Place both earbuds in the case and close the lid. This will automatically turn off the earbuds and the Bluetooth.

NEED EXTRA HELP?

Common solutions

If you are experiencing problems with your earbuds:

- Power on the earbuds (see Let's play section).
- Check the status on the LED Lights (see Let's stay charged section).
- Charge the earbuds (see Let's stay charged section).
- Move your device closer to the earbuds and away from any obstructions or interference.
- Try connecting to another device.

Question & Answers

- Q.** While pairing with my phone, I see two 'MIXX StreamBuds M1' in my Bluetooth menu listing?
- A.** Wait for 4 seconds for the earbuds to connect to each other before pairing with your device.

If there is still no connection simply 'forget' or 'unpair' both earbuds in your Bluetooth settings, place them back in the Portable Charging Case **5** and start again.

- Q.** What smartphone voice assist systems do these earbuds work with?
- A.** You can connect to Siri or Google Assistant after pairing with your smartphone.

LET'S VIEW TECHNICAL SPECS

Play time on a single charge:	Up to 5 hours
Play time with charging case:	Up to 20 hours extra
Bluetooth:	Version 5.1
Resistance:	IPX4, water and dust resistant
Supported profiles:	HSP, HFP, A2DP, AVRCP
Wireless range:	10m
Earbud capacity:	40mAH each side
Dynamic driver:	8mm
Frequency response:	20Hz – 20KHz
Weight including case:	Total 38g (earbuds 4g each)
Portable case dims:	60 x 50 x 28 mm (L x H x D)

Compatibility

Suitable for most Bluetooth audio supported smartphones, tablets, notebooks, laptops and computers.

CONTACT MIXX

Feedback is welcome simply email us on **support@mixx-io.com** or visit **mixxaudio.com** for more information.

LET'S BE SAFE

It's important that you read this section completely, especially the **'Warning, Caution and Safe Usage'** instructions.

For your protection

Ensure the product is correctly connected using the manufacturer's original accessories included with the product.

Please keep the product out of reach from children and animals.

Do NOT listen to loud music for a long duration of time.

- We recommend turning down the volume before placing the device in or on your ears.
- Adjust the volume to a comfortable level before listening to avoid hearing damage.

Do NOT use the product while operating machinery, including cars, trucks or other vehicles.

Do NOT use noise cancelling mode or use your device in areas where the use of hearing is required for safety. e.g., while riding a bicycle, at a construction site or railroad etc.

Do NOT drop, short circuit, disassemble or continue to use this product and its portable charging case if damaged.

CAUTION!

Please remove your device from your ears immediately if:

- * They emit any loud unusual noise
- * You experience a warming sensation
- * There is loss of audio

Turn off your device and contact MIXX Limited on support@mixx-io.com.

IMPORTANT!

Do NOT use a non-certified PD or QC3 wall charger as this may damage the product. Only use the cable supplied to charge your device.

May contains small parts which may be a choking hazard. NOT suitable for children under age 6.

NOTE: If your product has become damaged in any way, does not operate normally or has been dropped, please refer to a qualified person to have the product checked before continuing to use it.

WARNING: The operating temperature range for this product is 5° - 40° celsius.


Please avoid exposing the product, charging case and cable connectors to prolonged rain, moisture, any splashing or liquid spills.

This may cause excessive heat or melting and may lead to fire damage or personal injury.

CAUTION: This product contains a Lithium battery. Incorrect disposal of this battery may result in an explosion.

LET'S RECYCLE

This product can be recycled.

Products bearing this symbol  must NOT be thrown away with normal household waste.

Take the product to a collection point designated for recycling of electronic devices. Find out more about return and collection points through your local authority.

The background of the advertisement is a top-down view of various electronic accessories. In the upper left, a black power bank is partially visible with a blue digital display showing '55'. To its right, a white braided charging cable is neatly coiled with a white strap. Below the power bank, a black USB-A to USB-C cable is shown. In the bottom right, another black USB-C to USB-C cable is visible. The background is a light grey surface with a dark grey diagonal line separating the top and bottom sections.

MIXX™

CHARGE

To view our wide range of
power banks, chargers, cables
and in-car products visit

mixxcharge.com

EN SAFE USAGE INFORMATION

Do not crush, puncture or incinerate the charging case or the earbuds. Only use certified or device manufacturer's charging cable.

MIXX



support@mixx-io.com



mixxaudio.com

MIXX Limited
5 The Pavilions, Brighton Road, Pease Pottage,
West Sussex, RH11 9BJ. United Kingdom

SBMM1-HTG01