

# COZYTEK

## Heated Electric Throw

CTHBDG CZETNB

### User Manual

Please read and  
retain for future  
reference



[www.futura-direct.co.uk](http://www.futura-direct.co.uk)

Search for  
*futura* *direct*

on You 

For in-depth  
user guides &  
tutorials

Follow Us @:



# COZYTEK Heated Electric Throw

Thank you for choosing our Heated electric Throw. Please be sure to read this user's manual carefully before using the unit. If you should encounter any problems, please contact a qualified service technician for help.

## Getting Started

- Remove the throw from box
- Remove any packaging from the product
- Place packaging inside the box and either store or dispose of safely.

## In the box

- Soft Throw with Controller
- Instruction manual

## Features

- Removable Controller
- Washable blanket (with controller removed)
- 9 Heat settings 1- 8 & H (High)

## SPECIFICATIONS

Voltage: 220 - 240V~ 50Hz

Rated Power: 110 -120 W

CTHBDG Size: 160 x 120 cm (Dark Grey color)

CZETNB Size: 160 x 120 cm (Navy Blue color)


With controller

## SAFETY INSTRUCTION

- Ensure that the mains supply corresponds to the voltage on the rating label.
- This appliance is not intended for use by persons (including children) who are not mentally able, physically capable, experienced or do not understand the product. They should be given supervision and instruction in the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the throw with young children, the infirm or any person who is insensitive to heat.
- Avoid extended use of this product as a build up of heat could cause over-heating of the body (heatstroke).
- Do not insert pins in the throw.
- Do not use if wet.
- This product should be checked regularly for damage to the throw, controller or the cord. If there are any concerns the product should be checked by a qualified engineer also disconnect the appliance from the mains and do not continue to use the product.
- This product has no user-serviceable parts. Refer all servicing and repairs to a qualified engineer. Improper repairs may place user at serious risk.
- This appliance is intended for household use only and should not be used for industrial or commercial purposes.
- This product is not toy.

# COZYTEK Heated Electric Throw

## DESCRIPTION OF PARTS

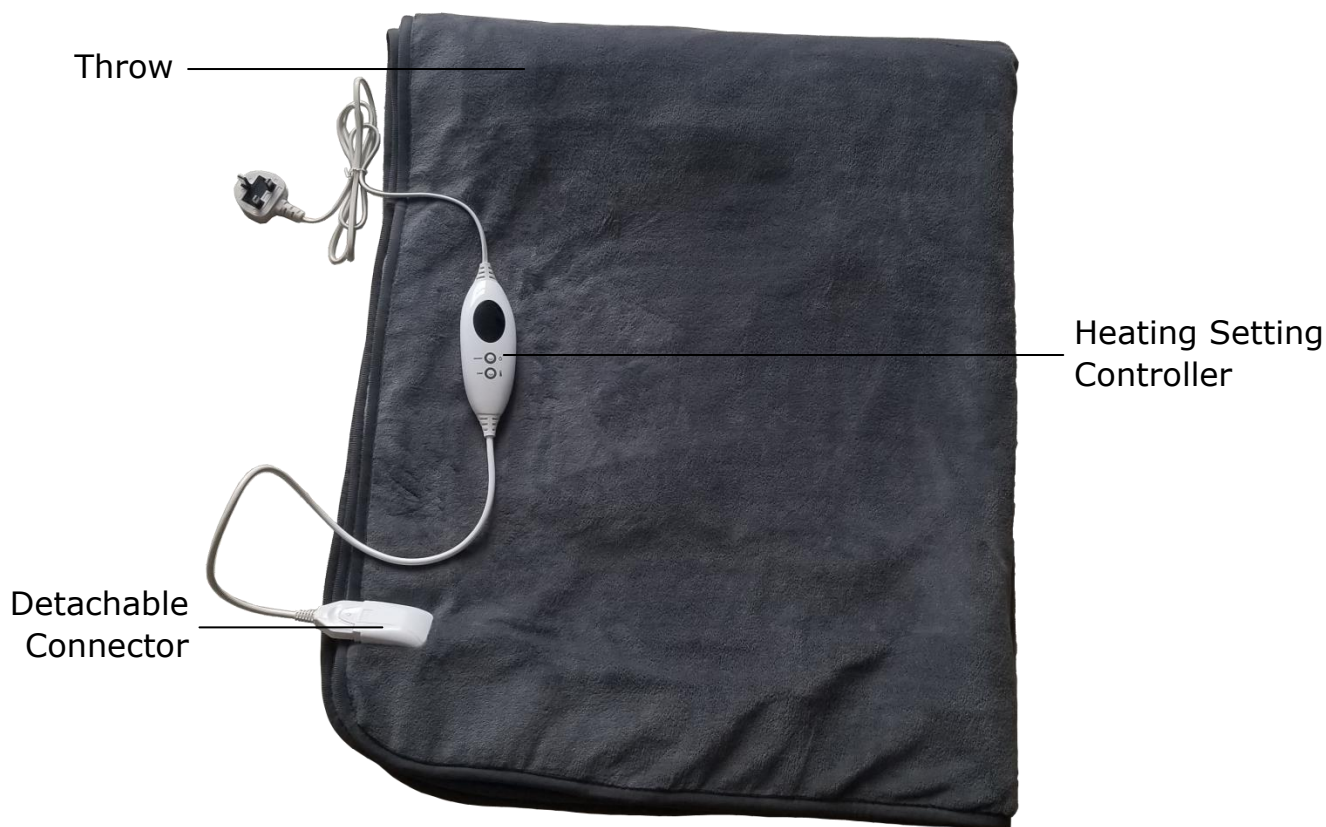

## BASIC GUIDE TO STARTING UP

- This is designed to be used as a throw only. It is recommended to connect to the mains supply via a 30mA RCD protection device.
- Drape the throw over the shoulders and smooth out to remove any creases. The controller should be positioned close to hand so that the temperature can be adjusted without walking around with the throw on.
- Connect the plug to the mains supply and press ON/OFF button for 3 seconds to start up. When it is started up initially, the heat display is 8 and timer is set to 3 hours. Press Temp button to set the heat position among 1.2.3.4.5.6.7.8.H. H represents the highest heat setting. When using it, select the appropriate heat position according to comfort.
- To advance straight to the highest heat setting, it is only recommended that this setting is used to initially warm the throw. Then set Heat to desired level. "H" will automatically transfer to '1' after one hour of working.
- The heated throw will switch off automatically after 3 hours.
- Press on/off button for 3 seconds to shut off when you stop to use it.

# COZYTEK Heated Electric Throw

## Remarks:

If the temperature is displayed as P, please check whether the coupler of the electric blanket has been connected firmly or not and restart it. If the fault cannot be removed, it means the internal connection of the electric blanket has problems and it needs to ask help from after-sales service.

If the temperature is displayed as E, it means the electric blanket has internal short circuit and has been broken.

- NOTE: On initial use and after washing, it is recommended that the throw is operated for 2 hours to ensure it is completely dry. Ignore any slight odour that may occur on first use.
- Do not sleep with the controller set to the maximum heat. Switch off when the heating is no longer required – do not leave on indefinitely. Unplug the throw from the mains when not in use.

## CARE AND MAINTENANCE

### Before cleaning

Disconnect the throw from the mains supply, and then disconnect the controller from the throw. Store the controller away carefully.

### Cleaning

Do not dry clean this throw

The throw has waterproof heating elements making it safe to immerse in water and wash by hand or machine. Always remove the controller first – do not allow any part of the controller to be immersed in any liquid.

### Hand wash

After disconnecting the controller, immerse the throw in a luke-warm, mild detergent, water solution. Soak for five minutes, remove and gently squeeze out as much water as possible (DO NOT WRING THE THROW). Rinse in clean water, squeeze out as much as possible (again without wringing).

### Machine Wash

With the controllers detached the throw can be washed in a machine (size permitting).



# COZYTEK Heated Electric Throw

Wash on WOOL or DELICATES cycle with a neutral detergent or mild soap powder at a wash temperature of 40°C. Do not use high speed or extra spin cycles.

## Drying

Drape the throw over a clothes line to dry – do not use pegs to secure the throw.

Allow to dry naturally – do not use any form of direct heat such as a hair dryer or heater. Ensure that the throw and its connector are fully dry before re-connecting the controller and using.

## Damage Check

The throw, controller and cable must be regularly checked for damaged. If any damage or wear is found, the product must be checked by a qualified engineer.

## Environmental Protection



Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

## DECLARATION OF CONFORMITY

We Futura Direct Ltd, England declare that the Heated Electric Throw has been manufactured according to our full quality assurance procedures.

The declaration is to certify that it conforms to CE, EMC, WEEE and RoHS directives.



Mr. Paul Kaye, UK QA Manager  
Please read the following carefully  
FUTURA Direct Ltd. and/or its distributor have provided the parts list and assembly diagram as a reference tool only.

Neither FUTURA Direct Ltd. or its distributor makes any representation or warranty of any kind to the buyer that he or she is qualified to do any repairs or replace any parts of this product. FUTURA Direct Ltd. and its distributor expressly state that all repairs or parts replacement should be done by certified or licensed technicians. The buyer assumes all risk and liability arising out of his or her repairs or parts replacement to the original product.

## 24 MONTHS LIMITED WARRANTY

Here at Futura Direct Ltd we are confident that you will enjoy many hours of pleasure from your product. However, if within 24 months from the date of purchase you experience any problems due to defects in materials or manufacture, please connect us directly on 01302332030.

Should your product develop a fault please follow these steps immediately:

- ✧ Call our technical helpline on 01302332030.
- ✧ We will replace any defective product that is in warranty due to defective materials or workmanship.
- ✧ We will NOT replace any product that has faults due to accidental damage, abuse or from failure to follow the instructions.
- ✧ This does not affect your statutory right.



[www.futura direct.co.uk](http://www.futura-direct.co.uk)

We FUTURA Direct Ltd, England DN6 7AY declare that the heated electric throw is exclusively manufactured for FUTURA Direct Ltd and has been manufactured according to our fully quality assurance procedures.