Digital Panel Heater

PS6W PS10W

PS12W PS15W

PS18W PS20W

User Manual

Please read and retain for future reference



www. futura direct.co.uk


This product is only suitable for well insulated spaces or occasional use.

Search for futuradirect

on You Tube

For in-depth user guides & tutorials

Follow Us @:

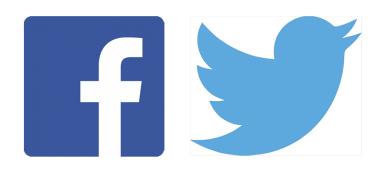

Thank you for choosing our Digital Panel Heater. Please be sure to read this users' manual carefully before using the unit. If you should encounter any problems, please contact a qualified service technician for help.


CONTENTS

Parts List Technical Information Safety Instructions Using your Heater Maintenance Warranty

PARTS LIST

No.	Description	No.	Description
1	Front Panel	14	Tip Over Switch Box (Bottom)
2	Hook Rack (Top)	15	Tip Over Switch
3	Thermostat	16	Tip Over Switch Box (Top)
4	Waterproof Cover	17	Control Box Dam-board
5	Rear Cover	18	Control Box Cover
6	Hook Rack (Bottom)	19	Stopper Cover
7	Feet	20	Decoration Cover
8	Support Frame	21	Sticker
9	Heating Element Support	22	Small Panel
10	Heating Element	23	PCB
11	Sensor Dam-board	24	Controller
12	Sensor Fixed Cover	25	Power Switch
13	Sensor Fixed Part	26	Tension Disc

Exploded Assembly Diagram

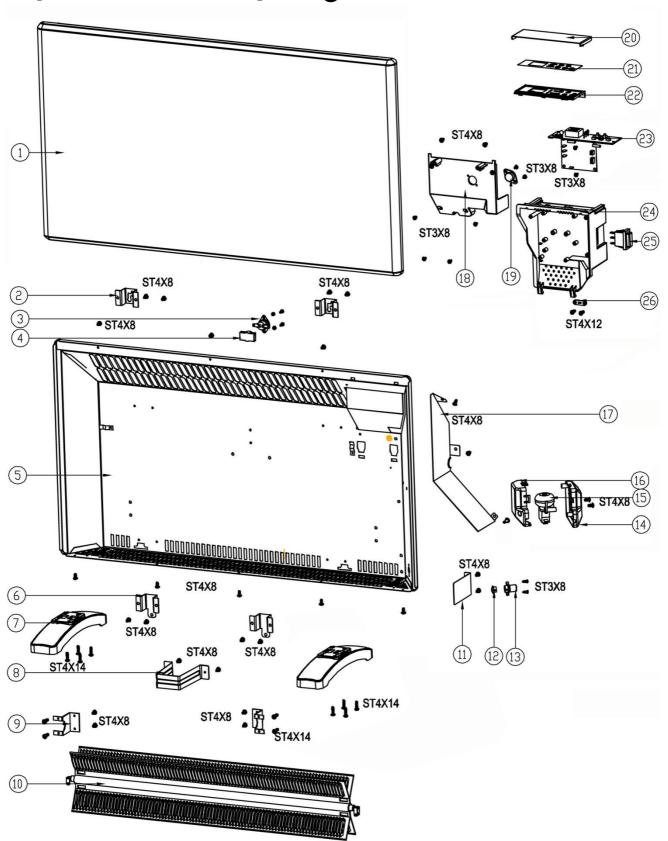

NOTICE: Actual product may vary from pictures shown.

TECHNICAL INFORMATION

LED Digital panel heater

Model: PS10W

Rated Voltage: 230V ~ 50Ha

Rated Power: 1000W

IP rating: IPX4

Machine Size (without feet): 54x8x40cm (Length x Width x Height)

Model: PS15W

Rated Voltage: 230V ~ 50Ha

Rated Power: 1500W

IP rating: IPX4

Machine Size (without feet): 70x8x40cm (Length x Width x Height)

Model: PS20W

Rated Voltage: 230V ~ 50Ha

Rated Power: 2000W

IP rating: IPX4

Machine Size (without feet): 86x8x40cm (Length x Width x Height)

Model: PS6W

Rated Voltage: 230V \sim 50Ha

Rated Power: 600W

IP rating: IPX4

Machine Size (without feet): 45x7x40cm (Length x Width x Height)

Model: PS12W

Rated Voltage: 230V ~ 50Ha

Rated Power: 1200W

IP rating: IPX4

Machine Size (without feet): 66x7x40cm (Length x Width x Height)

Model: PS18W

Rated Voltage: 230V ~ 50Ha

Rated Power: 1800W

IP rating: IPX4

Machine Size (without feet): 87x7x40cm (Length x Width x Height)



Read this entire manual before using this product. Failure to do so can result in serious injury. Save this manual for future reference.

Copyright© 2021 by FUTURA Direct Ltd. All rights reserved. This manual or any artwork contained herein must not be reproduced in any shape or form without the express written consent of FUTURA Direct Ltd. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein.

SAFETY INSTRUCTIONS


Read this owner's manual completely and make sure you understand all of its safety quidelines.

WARNING! To avoid electric shock or damage due to the heat, always make sure the plug is pulled out before the heater is moved or cleaned.

- 1. Read the instructions carefully.
- 2. The product is intended for home use only.
- 3. Make sure the heater is connected to the house's regular mains (230 V), as it indicated on the heater.
- 4. New heaters will produce a specific odor when used the first time. This will stop after a short time and is completely harmless.
- 5. Check for any pieces of packing foam or cardboard that may have fallen into the heating elements of the heater. These pieces must be removed in order to avoid unpleasant odors.
- 6. Prevent the heater from overheating do not cover.
- 7. Always turn off the heater and unplug it when not used for a long time.
- 8. Pay special attention if the heater is used in rooms where children, the handicapped or elderly reside.
- 9. The heater should not be set up directly beneath an electrical socket outlet.
- 10. The cord must not be laid under any kind of carpet. Make sure the cord is laid in such a way that nobody can trip on it.
- The heater must not be used if either the cord or plug is damaged. The heater must not be used if it has been dropped on the floor or is damaged in any other way causing it to malfunction.
- 12. The cord must be repaired by the manufacturer or by an expert if it has been damaged, to avoid dangerous situations.
- 13. Avoid using extension cords, which may overheat and could possibly start a fire.
- 14. Never cover the air vents on the heater. Avoid potential fire hazards by making sure the air intakes are not blocked or covered. The heater should be used in rooms with normal flat floors.
- 15. The heater should not be installed in close proximity to flammable materials of any kind because there can always be a risk of fire.
- 16. The heater must never be used in rooms where gasoline, paint or other flammable liquids are stored, such as in a garage.
- The heater is approved for use in zone 2 in bathrooms. 17.

Digital Panel Heater PS6W/ PS10W/ PS12W/ PS15W/ PS18W/ PS20W

- 18. Never touch an electric heater with wet hands. The heater should be installed so a person showering or taking a bath cannot come into direct contact with it.
- 19. The heater becomes hot when it is on. Therefore, be careful and avoid burning or scorching your skin.
- 20. The heater must be switched off, the plug removed and the heater must cool down before it is moved.
- 21. Avoid overloading the mains (the circuit) where the heater is connected. The heater may overload the electrical circuit if other electrical devices are plugged into the same socket outlet.
- 22. The device cannot be used by children under 8 years of age and persons with reduced physical or mental abilities or lack of experience and knowledge unless they have been given supervision or instruction in the safe use of the device and understand the hazards involved.
- 23. Children should not play with the device. Cleaning and maintenance should not be done by unsupervised children.
- 24. Children under the age of 3 should be kept away from the device, unless they are under constant supervision.
- 25. Children aged 3 to 8 years are only permitted to turn the device ON/OFF, assuming the device is mounted according to the assembly instructions and the children have received instruction or supervision in the safe use of the device and understand the hazards involved.
- 26. STORE THIS INSTRUCTION MANUAL FOR FUTURE USE!
- 27. NEVER TOUCH YOUR PANEL HEATER OR ITS CASING WITH WET HANDS! See Fig. 1

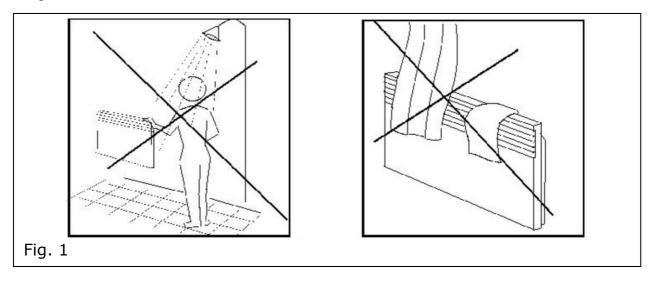


Unpacking

Carefully remove the product and any accessories from the box. Make sure that all items listed in the packing list are included.

Packing List


- A) Panel heater
- B) Manual


USING YOUR HEATER

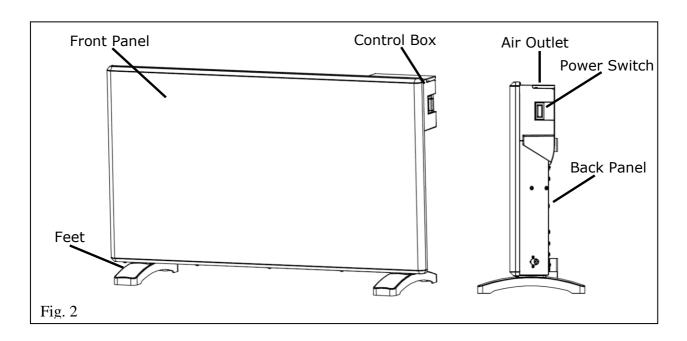



OPERATION INSTRUCTION ASSEMBLY

For wall mounted

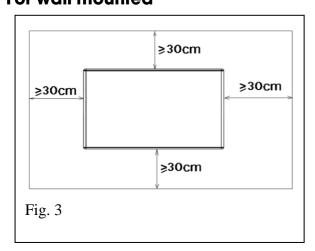

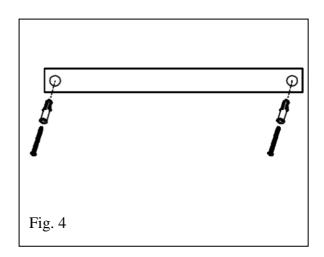

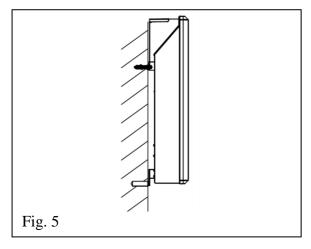


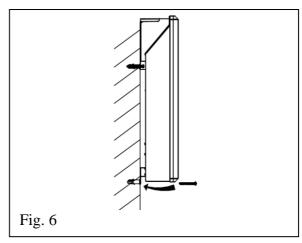

- 1. Be sure to keep the distance between the heater and floor, wall and so on at least 30cm as picture (Fig. 3).
- 2. Use drill dimension paper to drill **top two holes (Φ8)** on the wall and put the expansion screws in the holes as picture (Fig. 4).
- 3. The hook racks are pre-assembled on the back of the heater, hang the top two hook racks on the screws as picture (Fig. 5). Mark the two bottom hook rack's position on the wall and take away the heater, then drill **bottom two holes (Φ8)** on the wall and put expansion screw's plastic cover in the holes as picture (Fig. 5).
- 4. Hang the heater on the wall and put the expansion screws in the bottom two holes as picture (Fig. 6).


For Stand (Fig. 7)

- 1. Fit the foot onto the bottom of the body.
- 2. Fasten the foot with 4 screws.

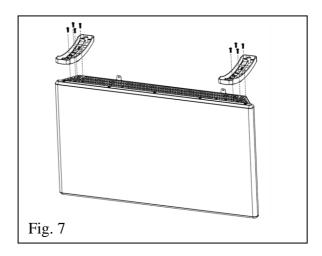

Electronic thermostat – Instructions

Control panel for electronic thermostat:

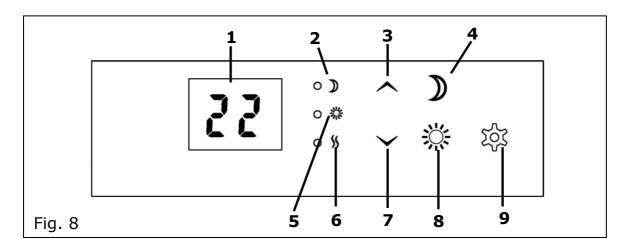

Digital Panel Heater PS6W/ PS10W/ PS12W/ PS15W/ PS18W/ PS20W

- 1, Display (shows the desired room temperature by default)
- 2, Control light Night function
- 3, Control button (+) (increase temperature)
- 4, Night function
- 5, Control light day function
- 6, Power indicator
- 7, Control button (-) (reduce temperature)
- 8, Day function
- 9, Function button (F) / Open window function


Warning: Before the heater is turned on, it must be attached to a wall or stand. If the heater is not installed correctly or is installed askew, this may cause the heater to malfunction or in the worst case, be damaged.



If the temperature sensor is not functioning properly, you will see the symbol on the display. Please contact the dealer or importer.

Set the desired temperature

Press the arrow buttons to set the desired temperature. See Fig. 9.

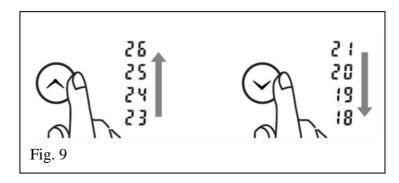


Day/night thermostat - Instructions

Tip! The thermostat can be used as a regular electronic thermostat (i.e. the heater will maintain a constant temperature 24 hours a day). Please see the section on the electronic


thermostat for further information!

1) Daytime setback

When you want the heater to reduce the temperature during the day (set for weekdays from now on) press . The display shows "d".

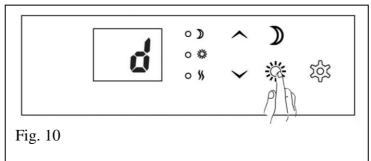


Use the arrow buttons to enter the correct weekday. (Monday=1, Tuesday=2, Wednesday=3, Thursday=4,

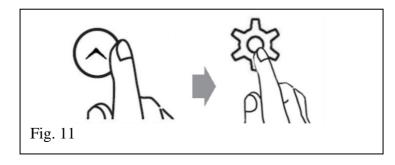


Friday=5, Saturday=6, Sunday=7). Save by pressing .



Enter the desired temperature for daytime setback. Save by pressing

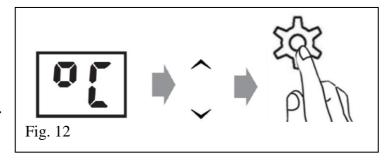

Enter the desired number of hours for daytime setback. Save by pressing **1633**

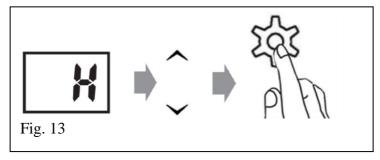


*Control light 🔆 is steady green when


the heater is in an active setback period. The control light is steady red when the setback period is inactive, but has been programmed.

2) Nighttime setback


When you want the heater to reduce the temperature in the evening (applicable every evening/night from now on) press D. The display shows C.

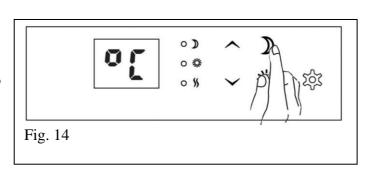

temperature for Enter the desired nighttime setback. Save by pressing

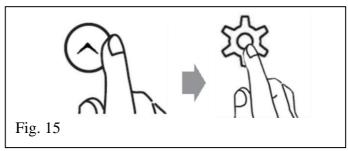

Enter the desired number of hours for nighttime setback. Save by pressing

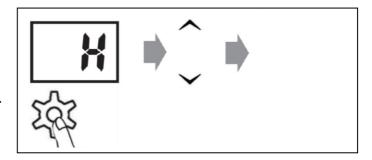


Digital Panel Heater PS6W/ PS10W/ PS12W/ PS15W/ PS18W/ PS20W

*Control light $\mathfrak D$ is steady green when the heater is in an active setback period. The control light is steady red when the setback period is inactive, but has been programmed.

3) Change setback temperature — Daytime

Press and hold and press 3 times.

Enter the desired temperature for daytime setback. Save by pressing or wait 15 seconds for automatic confirmation.

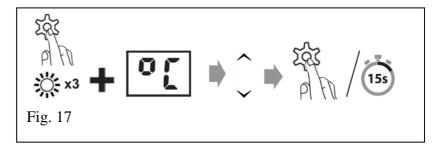


4) Change setback temperature — Nighttime

Press and hold 500 and press 3 times.

Enter the desired temperature for nighttime setback. Save by

pressing or wait 15 seconds for automatic confirmation.

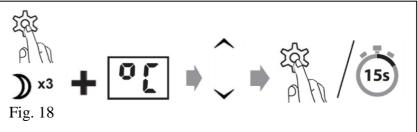


5) Change number of hours — Daytime

Press and hold and press 2 times.


Enter the desired number of hours for daytime setback.

Save by pressing or wait 15 seconds for automatic confirmation.

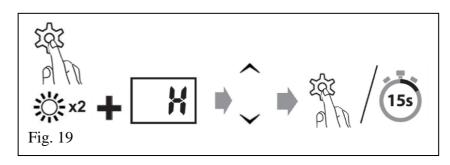

6) Change number of hours — Nighttime


Press and hold \mathfrak{P} and press $\mathfrak{D}_{2 \text{ times}}$.

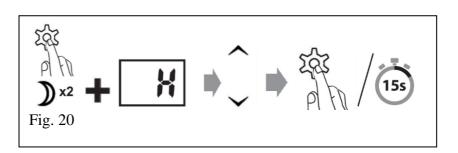

Enter the desired number of hours for nighttime setback. Save by pressing or wait 15 seconds for automatic confirmation.


7) Cancel (skip) setback period

Press and hold and press or once (depending on which setback period you want to cancel).

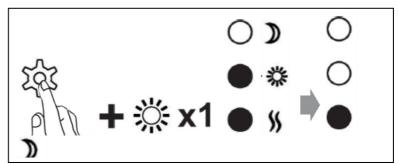



*The heater will skip an active setback period or the next setback period.

*During the next setback period, the heater will automatically resume the programmed temperature reduction.

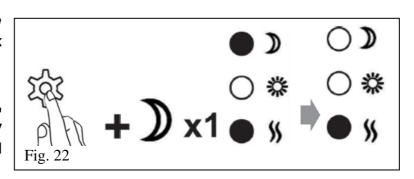

8) Delete a setback program

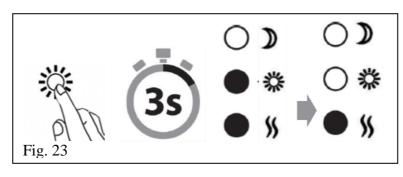

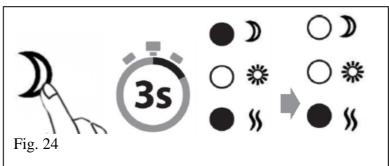

9) Open window function

The heater has open window function.

If you open a window widely in the space where the heater is located and the temperature drop 2 $^{\circ}$ C or more than 2 $^{\circ}$ C in two minutes, a sensor will detect the sharp drop in temperature. The heater will switch out automatically and show $^{\circ}$ C in display.

The heater will be reignited automatically after 10 minutes. However you can manually relight the radiator before the 10 minutes end by pressing 50 . The icon 50 disappears and show previous operation mode.

Default setting of open window function is closed.

Press and hold button for 5 seconds, display show for the hold button to open open window function, display show icon "ON" and flash for 15 seconds to confirm automatically, or you can press to confirm directly.

If open window function is opened, and you want to close, then press and hold button for 5 seconds, display show $\mathfrak{F}\mathfrak{l}$, then press button to close open window function, display show icon "OF" and flash for 15 seconds to confirm automatically, or you can press to confirm directly.

10) Resetting the heater

Turn off the heater's main switch.

Press and hold while you turn on the heater's main switch.

11) Memory function

*The heater remembers free mode's temperature settings and will automatically return to the desired temperature after a power failure. But it can't remember the settings for day mode and night mode.

MAINTENANCE


- 1. For cleaning, always unplug the heater and leave it to cool.
- 2. Wipe the heater regularly with a damp cloth and dry the surface before turning on the heater again.
- 3. The heater must be cleaned at least once a month during the heating season.
- 4. Dust etc. should be removed with a soft cloth.
- 5. The heater can be stored in a dry and clean place.

CAUTION! The heater should never be immersed in water. Avoid using detergents to clean the heater. Never let any water get inside the heater; this can be hazardous.

Disposal

Power tools, accessories and packaging should be sorted for environmentallyfriendly recycling.

Only for EC countries:

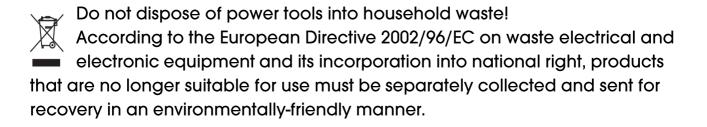

DECLARATION OF CONFORMITY

The declaration is to certify that it conforms to CE, EMC, LVD and RoHS directives:

EN55014-1/A2: 2011 EN55014-2/A2: 2008 EN61000-3-2: 2014 EN61000-3-3: 2013

All provisions of Annex 1 of Council Directive 2014/30/EU – EMC directive

EN60335-1: 2014

EN60335-2-30/A11: 2012

EN62233: 2008

All provisions of Annex 1 of Council Directive 2014/35/EU – the Low Voltage Directive RoHs 2011/65/EU



Mr. Paul Kaye, UK QA Manager Please read the following carefully FUTURA Direct Ltd. and/or its distributor have provided the parts list and assembly diagram

as a reference tool only.

Neither FUTURA Direct Ltd. or its distributor makes any representation or warranty of any kind to the buyer that he or she is qualified to do any repairs or replace any parts of this product. FUTURA Direct Ltd. and its distributor expressly state that all repairs or parts replacement should be done by certified or licensed technicians. The buyer assumes all risk and liability arising out of his or her repairs or parts replacement to the original product.

24 MONTHS LIMITED WARRANTY

If within 24 months from the date of purchase you experience any problems with your product, please return the product to its distributor/dealer for repair or replacement. This warranty DOES NOT COVER normal wear, or any damage as a result of accidents, misuse, abuse or negligence.

Form 1: Information requirment for the electric local space heaters

Model identifier(s): NDFL1202D-2E (PS10W)						
Item	Symbol	Value	Unit	Item	Unit	
Heat Output				Type of heat input, for electric storage local space heaters only (select one)		
Nominal heat output	P _{nom}	1,00	kW	manual heat charge control, with integrated thermostat	No	
Minimum heat output (indicative)	P _{min}	1,00	kW	manual heat charge control with room and/or outdoor temperature feedback	No	
Maximum continuous heat output	P _{max,c}	1,00	kW	electronic heat charge control with room and/or outdoor temperature feedback	No	
Auxiliary electricity consumption				fan assisted heat output	No	
At nominal heat output	el _{max}	N/A	kW	Type of heat output/room temper control (select one)	rature	
At minimum heat output	el _{min}	N/A	kW	single stage heat output and no room temperature control	No	
In standby mode	el _{SB}	0	kW	Two or more manual stages, no room temperature control	No	
				with mechanic thermostat room temperature control	No	
				with electronic room temperature control	No	
				electronic room temperature control plus day timer	No	
				electronic room temperature control plus week timer	Yes	
				Other control options (multiple selections possible)		
				room temperature control, with presence detection	No	
				room temperature control, with open window detection	Yes	
				with distance control option	No	
				with adaptive start control	No	
				with working time limitation	No	
				with black bulb sensor	No	
Contact details Applicant Name: IMPORTED BY FUTURA DIRECT LTD. Address: DONCASTER, ENGLAND, DN6 7AY						

Form 2: Information requirment for the electric local space heaters

Model identifier(s): NDFL1202D-3E (PS15W)						
Item	Symbol	Value	Unit	Item	Unit	
Heat Output				Type of heat input, for electric storage local space heaters only (select one)		
Nominal heat output	P _{nom}	1,50	kW	manual heat charge control, with integrated thermostat	No	
Minimum heat output (indicative)	P _{min}	1,50	kW	manual heat charge control with room and/or outdoor temperature feedback	No	
Maximum continuous heat output	P _{max,c}	1,50	kW	electronic heat charge control with room and/or outdoor temperature feedback	No	
Auxiliary electricity consumption				fan assisted heat output	No	
At nominal heat output	el _{max}	N/A	kW	Type of heat output/room temper control (select one)	rature	
At minimum heat output	el _{min}	N/A	kW	single stage heat output and no room temperature control	No	
In standby mode	el _{SB}	0	kW	Two or more manual stages, no room temperature control	No	
				with mechanic thermostat room temperature control	No	
				with electronic room temperature control	No	
				electronic room temperature control plus day timer	No	
				electronic room temperature control plus week timer	Yes	
				Other control options (multiple selections possible)		
				room temperature control, with presence detection	No	
				room temperature control, with open window detection	Yes	
				with distance control option	No	
				with adaptive start control	No	
				with working time limitation	No	
				with black bulb sensor	No	
Contact details Applicant Name: IMPORTED BY FUTURA DIRECT LTD. Address: DONCASTER, ENGLAND, DN6 7AY						

Form 3: Information requirment for the electric local space heaters

Model identifier(s): NDFL1202D-4E (PS20W)						
Item	Symbol	Value	Unit	Item	Unit	
Heat Output				Type of heat input, for electric storage local space heaters only (select one)		
Nominal heat output	P _{nom}	2,00	kW	manual heat charge control, with integrated thermostat	No	
Minimum heat output (indicative)	P _{min}	2,00	kW	manual heat charge control with room and/or outdoor temperature feedback	No	
Maximum continuous heat output	P _{max,c}	2,00	kW	electronic heat charge control with room and/or outdoor temperature feedback	No	
Auxiliary electricity consumption				fan assisted heat output	No	
At nominal heat output	el _{max}	N/A	kW	Type of heat output/room temper control (select one)	rature	
At minimum heat output	el _{min}	N/A	kW	single stage heat output and no room temperature control	No	
In standby mode	el _{SB}	0	kW	Two or more manual stages, no room temperature control	No	
				with mechanic thermostat room temperature control	No	
				with electronic room temperature control	No	
				electronic room temperature control plus day timer	No	
				electronic room temperature control plus week timer	Yes	
				Other control options (multiple selections possible)		
				room temperature control, with presence detection	No	
				room temperature control, with open window detection	Yes	
	_			with distance control option	No	
				with adaptive start control	No	
				with working time limitation	No	
				with black bulb sensor	No	
Contact details Applicant Name: IMPORTED BY FUTURA DIRECT LTD. Address: DONCASTER, ENGLAND, DN6 7AY						

Form 4: Information requirment for the electric local space heaters

Model identifier(s): NDFL788D-2E (PS6W)							
Item	Symbol	Value	Unit	Item	Unit		
He at Outer.				Type of heat input, for electric sto	orage		
Heat Output				local space heaters only (select one)			
Nominal heat output	P _{nom}	1,00	kW	manual heat charge control, with integrated thermostat	No		
Minimum heat output (indicative)	P _{min}	1,00	kW	manual heat charge control with room and/or outdoor temperature feedback	No		
Maximum continuous heat output	P _{max,c}	1,00	kW	electronic heat charge control with room and/or outdoor temperature feedback	No		
Auxiliary electricity consumption				fan assisted heat output	No		
At nominal heat output	el _{max}	N/A	kW	Type of heat output/room temper control (select one)	rature		
At minimum heat output	el _{min}	N/A	kW	single stage heat output and no room temperature control	No		
In standby mode	el _{SB}	0	kW	Two or more manual stages, no room temperature control	No		
				with mechanic thermostat room temperature control	No		
				with electronic room temperature control	No		
				electronic room temperature control plus day timer	No		
				electronic room temperature control plus week timer	Yes		
				Other control options			
			1	(multiple selections possible)			
				room temperature control, with presence detection	No		
				room temperature control, with open window detection	Yes		
				with distance control option	No		
				with adaptive start control	No		
				with working time limitation	No		
				with black bulb sensor	No		
Contact details Applicant Name: IMPORTED BY FUTURA DIRECT LTD. Address: DONCASTER, ENGLAND, DN6 7AY							

Form 5: Information requirment for the electric local space heaters

Item	Symbol	Value	Unit	Item	Unit
Heat Output			Type of heat input, for electric storage local space heaters only (select one)		
Nominal heat output	P _{nom}	1,50	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	1,50	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	1,50	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	el _{max}	N/A	kW	Type of heat output/room temper control (select one)	ature
At minimum heat output	el _{min}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	el _{SB}	0	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
				with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	Yes
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	No
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No

Form 6: Information requirment for the electric local space heaters

Model identifier(s): NDFL788D-4E (PS18W)							
Item	Symbol	Value	Unit	Item	Unit		
				Type of heat input, for electric sto	orage		
Heat Output				local space heaters only (select one)			
Nominal heat output	P _{nom}	2,00	kW	manual heat charge control, with integrated thermostat	No		
Minimum heat output (indicative)	P _{min}	2,00	kW	manual heat charge control with room and/or outdoor temperature feedback	No		
Maximum continuous heat output	P _{max,c}	2,00	kW	electronic heat charge control with room and/or outdoor temperature feedback	No		
Auxiliary electricity consumption				fan assisted heat output	No		
At nominal heat output	el _{max}	N/A	kW	Type of heat output/room temper control (select one)	rature		
At minimum heat output	el _{min}	N/A	kW	single stage heat output and no room temperature control	No		
In standby mode	el _{sB}	0	kW	Two or more manual stages, no room temperature control	No		
				with mechanic thermostat room temperature control	No		
				with electronic room temperature control	No		
				electronic room temperature control plus day timer	No		
				electronic room temperature control plus week timer	Yes		
				Other control options (multiple selections possible)			
				room temperature control, with presence detection	No		
				room temperature control, with open window detection	Yes		
				with distance control option	No		
				with adaptive start control	No		
				with working time limitation	No		
				with black bulb sensor	No		
Contact details Applicant Name: IMPORTED BY FUTURA DIRECT LTD. Address: DONCASTER, ENGLAND, DN6 7AY							

www. futura direct.co.uk

We FUTURA Direct Ltd, England DN6 7AY declare that the Digital Panel Heater is exclusively manufactured for FUTURA Direct Ltd and has been manufactured according to our fully quality assurance procedures.