


## AV150 Other Settings (PS) Menu

Remote:

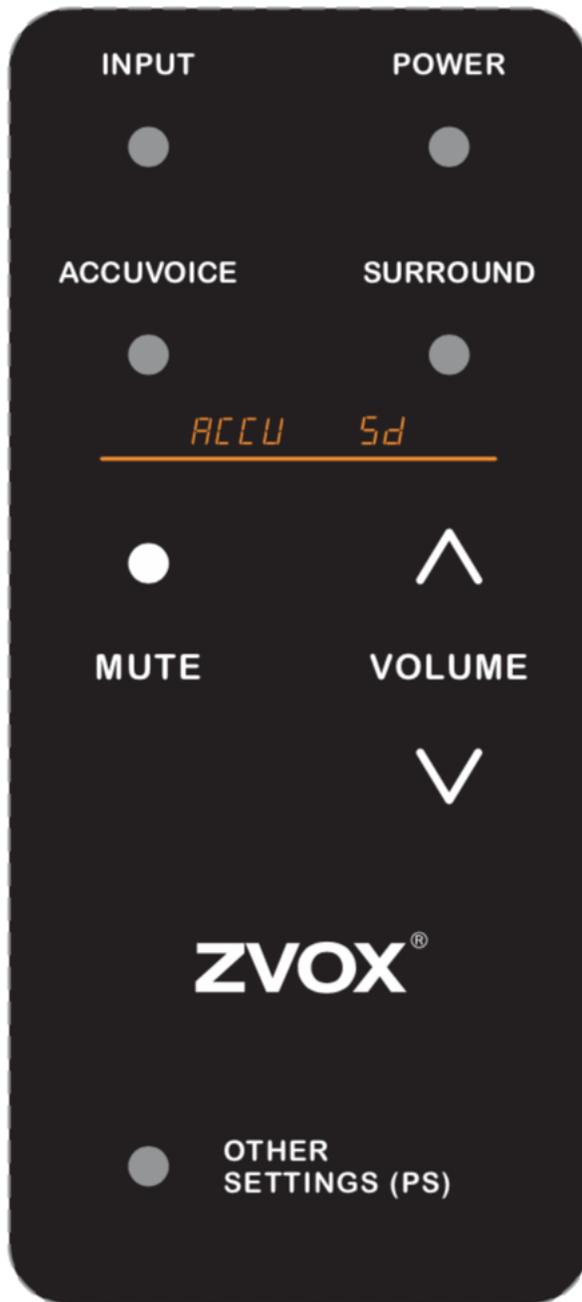

Basic AccuVoice is indicated by a RED led at the fourth position.

Secondary AccuVoice is indicated with a VIOLET led.

Surround mode is indicated by a BLUE led.



You will have about 20-seconds before the process times out and each time you press volume up or down to select a different PS-number, the 20-second clock re-sets and starts again.

Once you have selected a PS-setting you want, you can either wait the 20-seconds for the process to time out, or, you can press the Other Settings (PS) button once and the display will flash your selected PS-setting three times then go out.

When you select a setting of PS-1 through PS-6, then that becomes the default PS-setting you see the next time you access the Program Settings menu, even if you select PS-7 through PS-14 at a later date.

So if you previously set it for PS-5 for Panasonic you will see the yellow and red lights:



Choosing PS-15 restores the factory settings, so if you do that, then the default PS-setting becomes PS-7 again, until you choose PS1 through PS-6.

### Easier Way to Turn OFF the Auto On/Off Feature:

Power the unit ON, and then press and hold down the power button on the ZVOX remote control. After 6-seconds of holding down the power button on the remote, you will see the lights behind the speaker grille blink three times to indicate whether the Auto On/Off is enabled or disabled:



Pressing and holding down the power button on the remote for another 6-seconds will change the Auto On/Off setting again. Whichever lights you see blink three times is the selected setting.

Input select is indicated by the first LED. Green = Analog, Blue =Digital.

Volume down is indicated by the second, Yellow LED.

Volume up is indicated by the third, Orange LED.

Mode is indicated by the fourth LED. Red=AccuVoice 1, Violet =Accuvoice2  
Blue=Surround.