

## **Remote learning process for the SB380, SB500 & SB700:**

First, make sure that the Speaker is first powered “OFF”.

Press and hold down the OTHER SETTINGS (PS) button on the ZVOX remote control for five seconds until you see “Lrn” appear on the display. Release the OTHER SETTINGS (PS) button when you see “Lrn”.

**The first prompt on the display will be “UP 1”.** Aim your remote at the ZVOX display and press and hold down the VOLUME UP (+) button on your TV/CABLE remote. Shortly after, you will see four dashes “----“ appear on the display.

Once “----“ appears, release the VOLUME UP (+) button.

You will then see “rEP” (meaning ‘repeat’) appear. Once again, press and hold down the VOLUME UP (+) button on your TV/CABLE remote, until the four dashes “----“ appear on the display.

Once “----“ appears, release the VOLUME UP (+). You will then see “good” appear on the display.

**The second prompt on the display will be “dn 2”.** Aim your remote at the ZVOX display and press and hold down the VOLUME DOWN (-) button on your TV/CABLE remote. Shortly after, you will see four dashes “----“ appear on the display.

Once “----“ appears, release the VOLUME DOWN (-) button.

You will then see “rEP” (meaning ‘repeat’) appear. Once again, press and hold down the VOLUME DOWN (-) button on your TV/CABLE remote, until the four dashes “----“ appear on the display.

Once “----“ appears, release the VOLUME DOWN (-) button. You will then see “good” appear on the display.

**The third prompt on the display will be "-- 3" (for MUTE).** Press and hold down the MUTE button on your TV/CABLE remote. You will then see four dashes "----" appear on the display.

Once "----" appears, release the MUTE button.

You will then see "rEP" ('repeat') appear. Press and hold down the MUTE button on your TV/CABLE remote until you see the four dashes "----" appear.

Once "----" appears, release the MUTE button. You will then see "good" appear on the display.

**The fourth prompt on the display will be "Pr 4" (for TV POWER).** Press and hold down the TV POWER button on your TV/CABLE remote. You will see four dashes "----" appear on the display.

Once "----" appears, release the TV POWER button.

You will then see "rEP" ('repeat') appear. Press and hold down the TV POWER button on your TV/CABLE remote, until you see the four dashes "----" appear.

Once "----" appears, release the TV POWER button on your TV/CABLE remote control. You will then see "good" appear on the display.

Reconnect the digital optical cable to the Speaker.

You're done!

Simultaneously pressing and hold in the VOLUME UP (+) and VOLUME DOWN (-) buttons on the right hand side panel of the Speaker will also initiate the learning sequence. The Speaker just needs to be powered OFF before you do it.