


E-28 FRONT

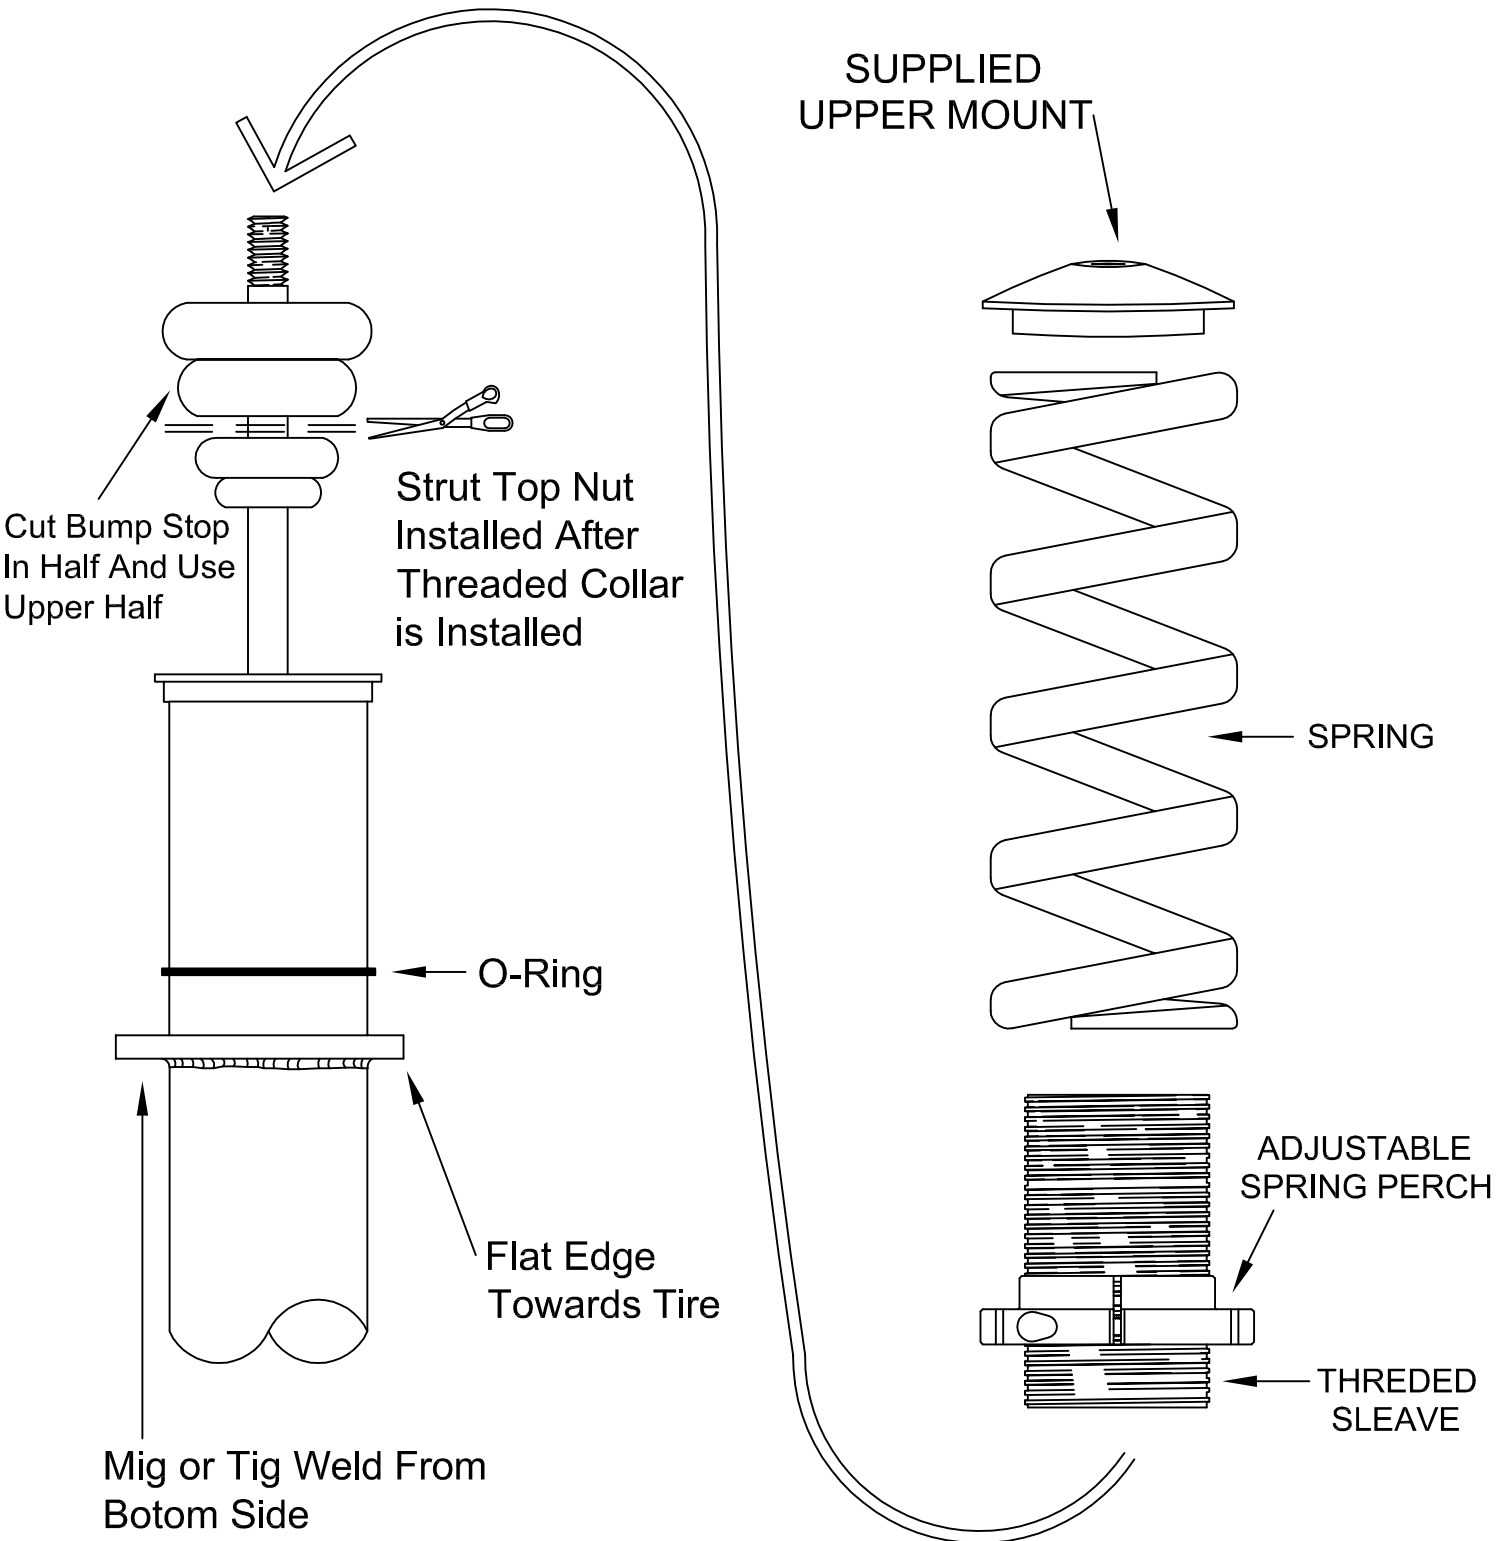

NOTE: Always Remove Strut Insert Before Welding on Strut Housing

GROUND CONTROL
www.groundcontrolstore.com
3885 Dividend Drive
Shingle Springs, CA 95682
(530)677-8600 fax (530)677-9090