

PARTS LIST	
Qty	Name
4	Non-Locking Caster
4	Locking Caster



Scan\* to see
Video Instructions
for Assembly & Use


or


Visit Suspenz.com
"Video & Manual" page
\*QR code reader app required

Tools Needed: None

## Assembly

- 1. Unscrew and remove leveling feet, anchors, & hex nuts. See drawing.
- 2. Replace with 2 locking & 2 non-locking casters per tower; the 2 locking casters should be placed at the front of the frame for easy access.
- 3. Casters should be fully tightened so that the black plastic washers are firmly seated on the U-Base. The casters are not intended to be used as leveling feet.

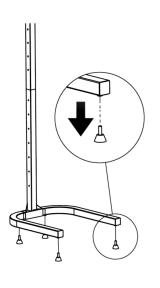

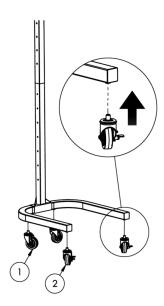

## Note

The adjustable cross bar (Model #21-0144) must be used with the casters so the Free-Standing towers will roll together.

Rev. 11/17

FOR TECHNICAL ASSISTANCE OR REPLACEMENT PARTS: CALL 866.787.7369

## **OUR PLEDGE TO YOU**

Suspenz® products are warrantied for life against defects in material or workmanship to the original owner. Product must be used for its intended purpose under normal conditions. Please visit www.Suspenz.com for complete warranty information.

SUSPENZ®, INC. 8725 ROSWELL ROAD #0-220 ATLANTA GA 30350



CUSTOMER SERVICE:770-518-0045 FAX: 770-518-8507 WEBSITE: WWW.SUSPENZ.COM