

AIRLESS END CART

Model # 22-8899

Model # 22-0099



PARTS LIST	
Qty	Name
1	Cart Frame
1	Lower Cross Bar
1	Padded Lower Cross Bar
2	10" Airless Wheel
2	Bolt
2	Black Plastic Washer
2	Nut

Assembly

Tools Needed:

2 Adjustable Wrenches, Phillips Head Screwdriver

1. Bolt *Wheels to Cart Frame*. Remove locknut and washer from long part of axel (Figure 1), slide wheel over white plastic sleeve, add washer and firmly tighten locknut. Then loosen locknut 1/2 turn so wheel turns freely.
2. Lay *Frame* on floor with side legs slightly apart. Lay *Padded Lower Cross Bar*, *Lower Cross Bar*, and hardware in orientation shown (Figure 2).
3. Put a washer on the bolt and insert up through the *Lower Cross Bar* (Figure 3). Place a *Black Plastic Washer* over the bolt with the flat side of the washer facing up.

Holds up to 150 LBS

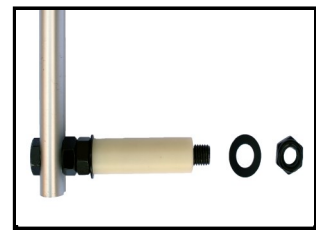


Figure 1



Figure 2



Figure 3



Scan* to see Video
Instructions for Assembly & Use
or Visit Suspensz.com "Video &
Manual" page

*QR code reader app required

Rev. 11/17

FOR TECHNICAL ASSISTANCE OR REPLACEMENT PARTS: CALL 866.787.7369

OUR PLEDGE TO YOU

Suspensz® products are warranted for life against defects in material or workmanship to the original owner. Product must be used for its intended purpose under normal conditions. Please visit www.Suspensz.com for complete warranty information.

SUSPENZ®, INC.
8725 ROSWELL ROAD #0-220
ATLANTA GA 30350



CUSTOMER SERVICE: 770-518-0045
FAX: 770-518-8507
WEBSITE: WWW.SUSPENZ.COM

AIRLESS END CART

Model # 22-8899

Model # 22-0099

4. Insert the bolt with *Cross Bar* up through the leg of the *Cart Frame* (Figure 4). Place the second *Black Plastic Washer* on the bolt with the flat side facing down towards the leg of the *Cart Frame*.
5. Place the *Padded Lower Cross Bar* over the bolt, add washer and lock nut and tighten (Figure 5).
6. Repeat for the other side of the *Cross Bar*. Tighten the bolts enough at both ends of the *Cross Bar* so that the cart can fold flat but will not come apart.

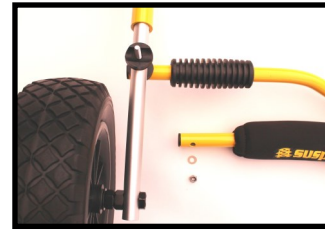


Figure 4



Figure 5

Use

1. Adjust height of the side tubes (approximately the depth of your boat plus 4") so that the upper crossbar rests on top of the boat with the cart angled forward as shown in picture.
2. With the cart leaning forward at about a 45 degree angle, slide either end of boat into the cart opening with the boat keel sitting in the bottom "V" padding. Note: Hull geometries vary. If boat does not rest on the padded crossbar, flip the cart so that it does.
3. The boat should slide in about $\frac{1}{4}$ - $\frac{1}{3}$ of the boat's length.
4. Adjust bungee cord length and connect it to a secure place in or around the cockpit.

Care

Rinse cart after each use to clean off sand, salt and mud.

Caution

This cart is designed for hand towing only. It is not intended to be pulled behind a bicycle or motorized vehicle.



Visit www.SuspENZ.com for additional transportation and storage solutions.

FOR TECHNICAL ASSISTANCE OR REPLACEMENT PARTS: CALL 866.787.7369

OUR PLEDGE TO YOU

SuspENZ® products are warranted for life against defects in material or workmanship to the original owner. Product must be used for its intended purpose under normal conditions. Please visit www.SuspENZ.com for complete warranty information.

SUSPENZ®, INC.
8725 ROSWELL ROAD #0-220
ATLANTA GA 30350



CUSTOMER SERVICE: 770-518-0045
FAX: 770-518-8507
WEBSITE: WWW.SUSPENZ.COM