 
## Axle Extender Kit







PARTS LIST	
Name	
Axle Converter	
Axle Locking Pin	
Quick-Release Wheel Pin	

Holds up to 200 LBS

Axle Locking Pins

Axle Converters (for 26mm hub size wheel)

## Assembly

- 1. Remove existing wheels from cart frame.
- 2. Slide *Axle Converter* over the existing 1" diameter axle. Secure with *Axle Locking Pin* so that *Pin* hangs down.
- 3. Slide *Balloon Wheel (not included)* over converted axle then insert a *Quick-Release Pin* in hole next to wheel and flip the lock ring over the end of the axle to secure the wheel in place.
- 4. Repeat process for other side of the cart.

Rev. 08/18

FOR TECHNICAL ASSISTANCE OR REPLACEMENT PARTS: CALL 866.787.7369

## OUR PLEDGE TO YOU

Suspenz® products are warrantied for life against defects in material or workmanship to the original owner. Product must be used for its intended purpose under normal conditions. Please visit www.Suspenz.com for complete warranty information.

SUSPENZ®, INC. 8725 Roswell Road #0-220 Atlanta GA 30350



CUSTOMER SERVICE:770-518-0045 FAX: 770-518-8507 WEBSITE: WWW.SUSPENZ.COM