Sureguard ScareCrow[®]

USER INSTRUCTIONS

Model #830



Motion Activated Animal Deterrent

Thank you for purchasing the latest technology in Animal Deterrents.

Sureguard ScareCrow

2

Contents

2How this Repellent World
3Features
3Specifications
4Parts Guide
6Placement Guide
7Animal Control Guide
8Important!
9Problem Solving
10Warranty

How this Repellent Works

Sureguard ScareCrow® Motion Activated Sprinkler is an innovative and humane way to keep most unwanted animals and birds out of an area. It's environmentally friendly and a safe alternative to chemical repellents.

Sureguard ScareCrow uses a Motion Sensor to detect the body heat of animals and birds. Once triggered, it deploys a burst of water combined with unexpected noise and motion, creating a safe and effective deterrent.




Features

- Sureguard's Intelligent Sensing Technology reduces false triggering.
- Multiple Sprinklers can be daisy-chained to extend the protection area.
- Two User Selectable Operating Modes 24 Hours or Night Only.
- Adjustable Sensitivity Range, including OFF position.
- Adjustable Sprinkler Angles Left/Right and Up/Down.
- Adjustable Sprinkler Distance and Spread.
- Metal Ground Spike allows easy placement in your lawn or garden.


Specifications

- Protection Area: Up to about 100 square meters.
- Water Usage per Activation: 2-3 cups.
- Sensor Left-to-Right Angle: 110 Degrees.
- Sprinkler Distance: Up to 10m (depends on water pressure).
- Water Pressure: Maximum 80 psi or 0.6 MPa. Minimum 30psi or 0.2 MPa.
- Two AA Alkaline batteries last up to 1-year; includes low battery indicator.

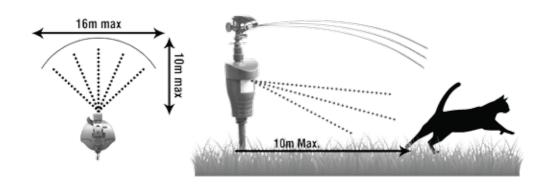

4

Parts Guide

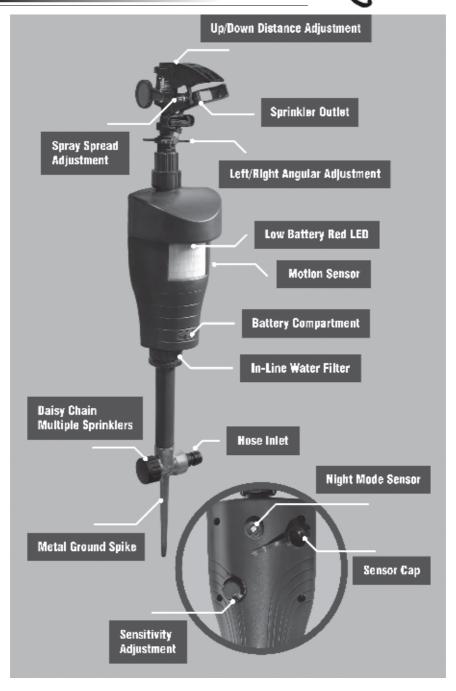

Sureguard ScareCrow



...Parts Guide cont.

Sprinkler Outlet: Screw the Sprinkler-head Outlet to the body of the Controller.

Spray Spread Adjustment: Adjust anticlockwise for a long-throw fine stream.

Up/Down Distance Adjustment: Rotate dial clockwise for maximum distance.

Left/Right Angular Adjustment: Adjust the two rings and check the left and right stop angles by rotating the Sprinkler by hand in each direction, noting where it clicks and stops. Adjust to no more than the Sensors 110-degree viewing angle. Adjust to suit the circumstances; For example, if the animal always enters at a specific point, you could just direct the Sprinkler there.

Motion Sensor: This is behind the sensor window. It detects body heat from the animal or bird as it moves across the viewing area (not cold-blooded animals).

Low Battery: Behind the window is a Red LED to indicate when to replace batteries.

Battery Compartment: Slide the battery door down to open. An extra sealed cover protects the batteries. Pull it free. Insert two **ALKALINE** AA 1.5 Volt batteries before use. Do not substitute other types of battery. Remove batteries for storage.

In-Line Water Filter: The filter is a wire mesh to stop dirt and stones from entering and damaging the Sprinkler valve. Please check the filter regularly and remove any debris. Failure to do so could cause damage. **TIP:** Before connecting the hose to the Sprinkler, run water through the hose to clear any debris carried in by ants, etc.

Hose Inlet: Attach a 12mm hose here and connect to your tap. **Always fully open the tap** so the Sprinkler gets the correct water flow. If your water pressure is low and the spray is weak, try using a shorter hose or larger diameter hose.

Daisy Chain: To install several ScareCrow Sprinklers, you can economise on hoses using this Daisy-Chain feature. Attach another hose to connect any number of Sprinklers in the chain. (Extra hose connector not included). **NOTE:** Each Sprinkler activates independently and responds to the motion in its viewing field.

Metal Ground Peg: Push the entire length into *firm* soil.

Night Mode Sensor: The Sensor responds to light and dark. Remove the **Sensor Cap** so the Sprinkler only activates at night. Attach the Cap for 24-hour operation.

Sensitivity Adjustment: Setting 0 is OFF. Setting 9 is maximum sensitivity (recommended for Night-Mode usage). For 24-hour use, adjust between 1 and 9 according to your circumstances.



Placement Guide

- * For best detection, animals or birds must move **ACROSS** the Motion Sensor's 110-degree viewing area rather than moving directly towards the Sensor.
- * The Sensor has three vertical detection bands. The main one detects horizontal movement. Another points upwards for detecting taller targets or incoming birds. Another points downwards for detecting birds paddling in pools.
- * The Motion Sensor must have an unobstructed view of the detection area. Avoid obstacles and never cover the Sensor.
- * Avoid pointing the Sensor toward foliage as that may cause false triggering during windy daylight hours. (Not applicable if using Night-Mode).
- * Avoid pointing the Sensor towards the sun or dappled sunlit areas.
- * Around pools, place the Sensor at less than 1.5m from the pool's edge so it will detect motion both on the water and around the pool's edge. If you move it further away from the edge, you have to raise the Sensor's height so it can see the water. However, the Sensor may no longer detect motion around the pool's edge.
- * To protect areas larger than 10m x 16m, install several Sureguard ScareCrows facing into the protection area. For example, to cover a large swimming pool, locate them at either end of the pool or elsewhere at no more than 10m intervals.
- * The Metal Ground Peg must be placed firmly in the ground to avoid false triggering due to device movement from strong winds. For non-soil areas, place the Metal Ground Peg into a movable soil-filled heavy pot.
- * Leave the Sureguard ScareCrow switched ON even if the wrong behaviour ceases.
- * Select a 12mm hose in good condition, of sufficient length, and avoid using joiners. Water pressure will decrease with increasing hose length, and this will reduce spray coverage. Check operation with a short hose to become familiar with the performance at typical operating pressure. If necessary, use 18mm hose for more pressure.
- * Before disconnecting the hose, turn the water OFF and activate the Sprinkler with your hand to de-pressurise the hose.
- * To test your installation, connect the hose and switch the water ON. Stand behind or to the side of the Sprinkler. Slowly move your hand left to right about 1m in front of the Motion Sensor. Confirm the Sprinkler sprays where you want. **TIP:** Three activations in 60 seconds will trigger a water-saving feature, disabling the device for 5 minutes. To manually reset, remove the Night Mode Sensor Cap, wait 5 seconds, then re-cap it.

Animal Control Guide

The Sureguard ScareCrow has the ability to modify animal behaviour, but animals have natural behaviours and motivations that should also be considered. It may take longer to get results when an animal has strong motivation. For example, an animal eating your garden plants is probably doing so because little food is available. Persistent behaviours can sometimes take longer to control. For example, deterring a neighbour's dog from visiting will likely get quick results because the dog is aware it's out of its territory. However, *your* dog may not be initially controlled, until the deterrent becomes a nuisance to your dog.

How long the modified behaviour persists can vary. For example, ducks may stop visiting your swimming pool and never return, whereas a possum may stop visiting for a time but return when food is in short supply. Therefore, however quick the result should be, don't be to quick to switch the Sureguard ScareCrow OFF. You want to send a strong message if the animal returns: "this deterrent is always here to protect". An exception might be when the bird or animal visits at a predictable time, for example, at sunrise, and then leaves. You may want to attach a programmed water timer to your hose to more finely control the activation of the Sprinkler.

Bush Turkeys: Leave the device active continually.

Cats: Visiting cats should quickly learn to stay away. Your pet cat may require more time to control. Leave in place for the deterrent effect to persist.

Chickens: Leave the device active continually.

Cockatoos: If the birds are at or close to ground level, the Sureguard ScareCrow can deter them. NOTE: It is not suitable if the birds are in trees or high up.

Dogs: Visiting dogs should quickly learn to stay away because they are intruding on another's territory. Your pet dog may require more time to understand the deterrent, and it should be left in place for the deterrent effect to persist. Don't allow your pet to play with the device as a toy. Some dogs enjoy water on a hot day. So, don't introduce your dog to the deterrent on a hot day, or it may become his/her toy!

Deer: Leave the device active continually.

Ducks & Geese: If these birds are fouling your swimming pool area, you can expect quick results but leave the device active for a few weeks. Pool areas generally require

...Animal Control cont.

two or more Sureguard ScareCrows installed, usually one at either end. If the pool is more than 15m long, install extra ones along the length of the pool.

Foxes: Use the Night-Mode setting with Sensitivity on maximum. Leave switched ON as long as required.

Possums: Use the Night-Mode setting for best results with Sensitivity on maximum and leave the device active continually. If the possum is walking along a fence, up a tree, climbing a building structure, etc., then ensure the Sensor is rigidly mounted at that height. If the possum is at ground level, install it at ground level.

Rabbits: Leave the device active continually.

Seagulls and Pelicans: Place the Sureguard ScareCrow as close to the protected area as practical. Do not point toward moving water, moving boats, etc. Do not fix to a boat because the movement will cause false activation.

Wallabies and Kangaroos: Leave the device active continually.

Important!

- · Inspect and clean the filter mesh whenever attaching a hose
- If temperatures are expected to drop below 0°C move the ScareCrow indoors to prevent damage from freezing.
- DO NOT use with bore water, saltwater, dam water or brackish water. Connect only to clean drinking water.
- The water pressure supplied from taps can vary significantly from location to location. If your **water pressure is too high**, you MUST use a pressure reducer in-line between the tap & hose. Sureguard has tested and recommends the **Pope 300kPa model**, which is available at many hardware stores for around \$10. If you choose another brand, do not go higher than 300kPa. Going lower will reduce the spray distance.



Problem Solving

For more troubleshooting help, visit: www.sureguard.com.au/troubleshooting Sensor does not 'see' animals:

1/ The Sensor needs an unobstructed view of the animal. 2/ Install so the Sensor views animals walking ACROSS the viewing area, not toward the Sensor. 3/ The Sensor must be installed about the same height as the animal. 4/ Clean the Sensor with a damp cloth. 5/ On hot days, the Sensor may not detect the animal's heat. This is unavoidable if the temperature of the animal and surroundings are about equal. 6/ An animal moving very slowly or very fast may not be detected. 7/ Cold-blooded animals can't be detected. 8/ Try a new set of batteries.

Sprinkler is spraying as soon as water is connected.

Install batteries or replace the batteries.

Sprinkler is not spraying:

1/ Your water tap might be switched off. 2/ Water pressure may be too high or too low. 3/ Your hose might be kinked. 4/ Your hose might be blocked. 5/ Check for blockage at the In-Line Water Filter. 6/Try a new set of batteries.

Sprinkler is spraying without much force:

1/ Your water tap MUST be fully on. 2/ Debris may be blocking the In-Line Water Filter. Check and clean. 3/ Your hose may be kinked. 4/ Your hose may be blocked.

Sprinkler is activating when no animal is present:

1/ If the device has moved recently, allow 10 minutes to stabilise to its new heat environment. 2/ Try a lower Sensitivity Control number. 3/ Avoid pointing toward:

- ♦ Areas where people or pets regularly pass by.
- ♦ Foliage that might move about in the breeze.
- ♦ Dappled sunlit areas that might fluctuate in brightness and heat intensity.
- ♦ Upwards toward the sky.
- ♦ Sources of hot air movement, e.g. Air-conditioning equipment, roof areas, etc.
- ♦ Moving water.
- ♦ Car headlights.

Warranty

Manufacturer's Warranty

Sureguard provides a Manufacturer's Warranty to the original purchaser or gift recipient to cover defects in materials and workmanship for a period of 12 month.

Extend your Warranty to 3 Years!

www.sureguard.com.au/warranty-extended

1.0 User Acceptance

- By purchasing or using this product the purchaser agrees they have read and accept and abide by these Terms and Conditions. Full Terms and Conditions at www.surequard.com.au/terms
- Sureguard reserves the right to amend these Terms and Conditions at any time.

2.2 Manufacturer's Warranty

- Sureguard's warranty does not cover damage or loss caused by or resulting from abuse, accidents, breakages, loss of parts, unauthorised alterations or repairs, unauthorised dismantling of the product, normal wear & tear, normal battery ageing, the natural breakdown of colours and materials over time and use, failure to follow recommended maintenance, rust corrosion, lightning strike, abnormal mains voltage fluctuations, battery leakage, insects, vermin, failure to use the product for its intended purpose, incorrect or incomplete installation or usage, theft, and causes beyond the control of Sureguard.
- Sureguard reserves the right to determine whether a fault is caused by faulty workmanship or materials.
- Sureguard reserves the right to repair or replace goods. Replacement parts or goods may be refurbished.
- The warranty published here is the only warranty given by Sureguard and no person has authority to change or add to these obligations & liabilities.
- This warranty shall not apply to any loss (whether direct, indirect or consequential) suffered through or resulting from failure or ineffective operation of the product except as provided by law.
- Nothing in this warranty shall be construed as affecting any rights you may have under State or
 Commonwealth Legislation which gives you rights that cannot be modified or excluded by agreement. Our
 goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled
 to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss
 or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable
 quality and the failure does not amount to a major failure.

2.3 Service & Repairs

• Sureguard's Technical Department provides Service & Repairs for products not covered by the Manufacturer's Warranty.



- Sureguard takes reasonable steps to provide spare parts for a reasonable time after purchase.
- Sureguard reserves the right to refuse Claims when products have been modified, dismantled, repaired or altered without Sureguard's authorisation.

2.4 Return Address

• Sureguard Pty Ltd, 114 Keen Street (Level 2), Lismore NSW 2480

2.4.1 Conditions for Returning Goods

- Before returning goods you must contact Sureguard to Lodge a Claim (under Section 2.5).
- After receiving your Return Authorisation you must cease using the goods and promptly return the goods to ensure they arrive at Sureguard's Return Address (as per Section 2.4 above) within 14-days.
- Returned goods must include a copy of the original Tax Invoice or enough information to identify the original purchaser and seller.
- · Returned goods must be packaged to avoid damage in transit.
- Return shipping and insurance costs are the purchaser's or sender's responsibility. Sureguard will cover return shipping if required by Australian Consumer Law. Sureguard will refuse COD returns.
- Costs associated with quotations, service or repairs must be paid before the goods are returned. Goods will be disposed of if costs are not paid within 90-days of notification that the goods are ready for shipping.

2.5 Lodge a Claim

• To lodge a Claim simply contact Sureguard's Technical Department on 1800-800-044 or email: claims@sureguard.com.au. If the goods are to be returned you will be issued with a Return Authorisation.

3.0 Limitation of Liability

Sureguard will not be liable in any way for any direct, indirect, incidental, special or consequential losses or damages resulting from use of Sureguard's website, products or services or inability to use Sureguard's website, products or services, except as provided by law. Where any State or Commonwealth Legislation prohibits the inclusion of any clause or term set out in these Terms and Conditions, the liability imposed on Sureguard, will be limited, at Sureguard's discretion to any one or more of the following:

- · The replacement of the goods or re-supply of equivalent goods.
- The cost of the goods or the cost to re-supply the equivalent goods.
- · The repair of the goods.
- The payment of cost to repair the goods.

5.0 Safety - Your Responsibility

- All persons who use the purchased product must read the User Instructions prior to operating the product.
- Do not allow children to operate or play with the product.
- Do not dismantle the product.
- Do not alter the product or add non-standard materials to it unless approved in writing by Sureguard.

6.0 Disclaimer Notices

- No performance guarantee is offered for any control device Sureguard sells. Animals, birds, rodents, snakes, etc., all have natural instincts, behaviours or motivations that may be modified by the use of control devices. However, the degree of improvement and how long this may take or persist cannot be predicted or guaranteed.
- The purchaser must not use the product for other than its intended purpose.
- All of Sureguard's published content is subject to change without notice.

Sureguard provides quality animal containment and behaviour solutions that are effective and easy to use. It's always "Better By Sureguard"!

Visit our website: www.sureguard.com.au/shop

Sureguard Pty Ltd
ABN: 20163915964

114 Keen St, Lismore NSW 2480
Tel.1800-800-044

Copyright (c) 2015-2022 Sureguard. All rights reserved.

Video Demonstration:



www.sureguard.com.au/video_scarecrow