 


INSTALLATION INSTRUCTIONS

Doors: for Polaris Ranger® 570



Read instructions and view illustrations before beginning.

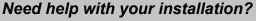



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th 8:00am - 7:00pm EST Friday

9:00am - 2:00pm EST Saturday

Thank You



Liability Statement

M6-1.0 x 30mm Lg. PHMS

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.


Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Raise Cargo Box before beginning.

- Remove Side Nets from both sides of machine.

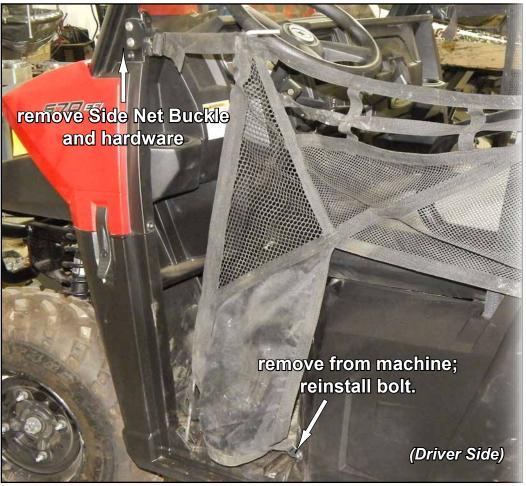



- Remove hardware shown from Floor. Repeat for opposite side.



- Unbolt and remove Seat and Seat Back from Frame.
- Remove hardware shown from each side.



IN-DOOR-P-RAN570 3

Do not tighten hardware completely when installing.

- Secure Door to Roll Cage with hardware shown.




IN-DOOR-P-RAN570

- Seat Back must be trimmed.
- Close Door and mark Seat Back where interference occurs.



- Trim Seat Back.

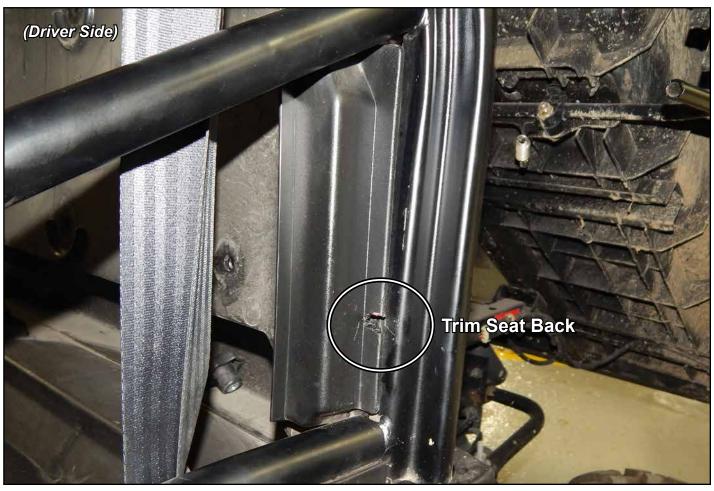

IN-DOOR-P-RAN570

5

- Secure Door to Frame with stock hardware.
- If interference still occurs, continue trimming Seat Back.






IN-DOOR-P-RAN570

6

- Secure Door to Floor with hardware shown.
- Tighten all hardware completely.
- Repeat steps for opposite Door.

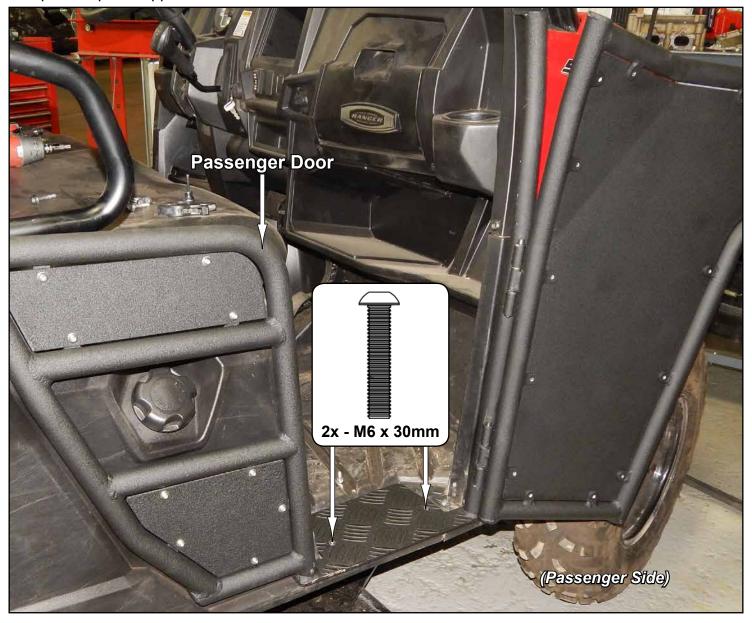

IN-DOOR-P-RAN570 7