

- Do not discard packaging until product has been successfully installed.



(kit contents continue on following page)

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday


Read instructions and view illustrations before beginning.

*Thank You
For Choosing*


SUPERATV.COM

(kit contents continued)


RED = POS "+"
BLACK = NEG "-"
WHITE = 12V switched key-on source

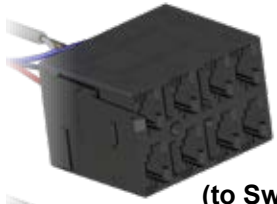

(to Switch)

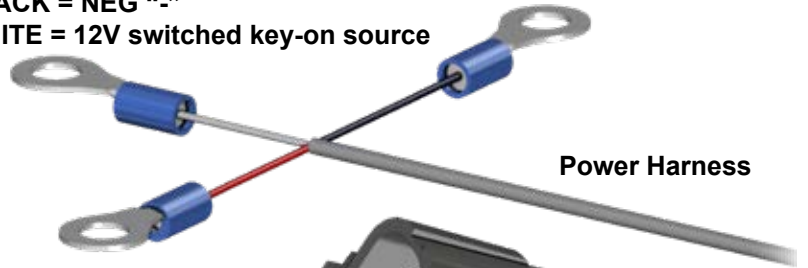


Power Harness

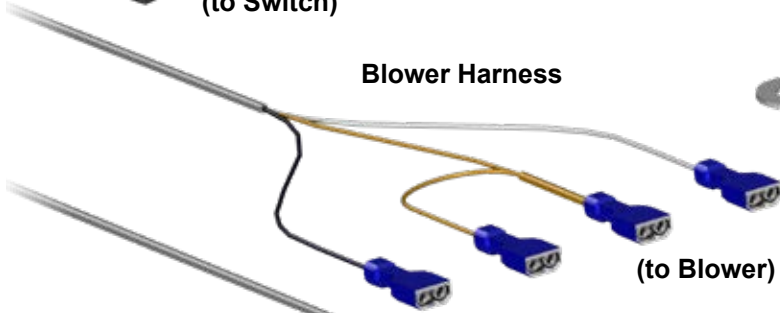


Blower Harness

(to Blower)

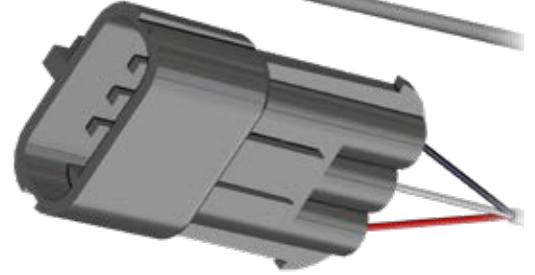


(to Power connections; see page 17)

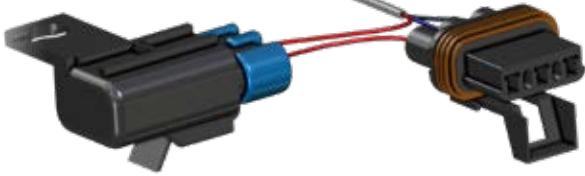


(to Power Harness)

Filler Plate - L

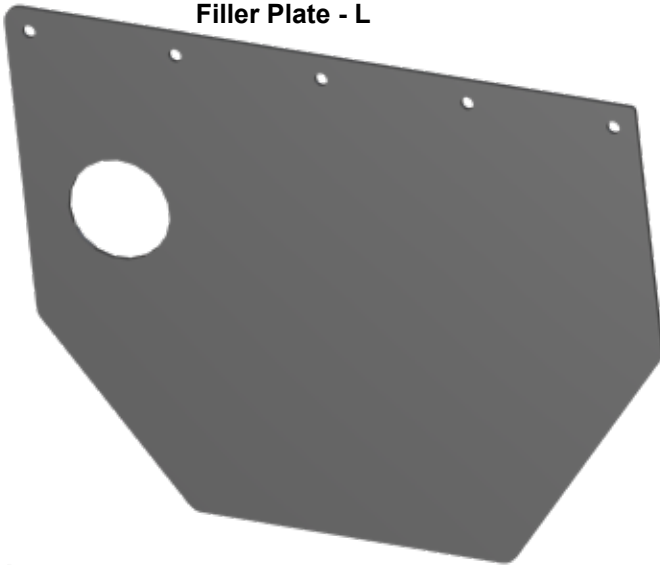


Filler Plate - R

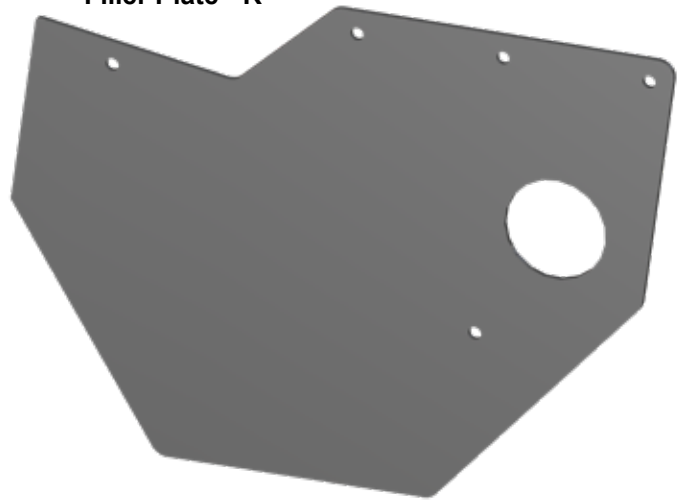

Front Filler



Knob Bracket

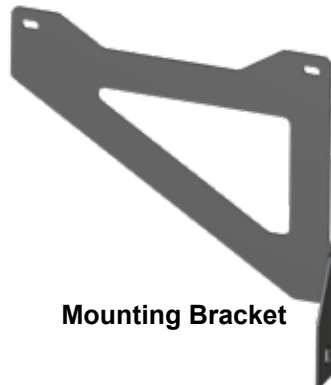

Mounting Bracket




Front Bracket

- **Tubing and Duct lengths are SuperATV recommended. User may install components in other locations. Verify lengths before final installation.**
 - **Check behind areas being drilled for interference.**
 - **Avoid burns and scalding by working on cool vehicles.**
 - **Secure components away from rotating objects.**
 - **Do not tighten mounting hardware until all components are in place.**
 - **Use manufacturers recommended coolant.**
 - **Avoid sharp bends when installing Tubing.**
 - **Verify that no leaks are present after installation.**
-
-

- Separate and place Vent Bottom onto Dash in general area shown below.
- Mark locations for Vent.
- Cut $\text{Ø}2\text{-}1/2$ " hole through plastic.
- Repeat for opposite side.



- Install Front and Mounting Brackets to Heater with hardware shown; tighten.

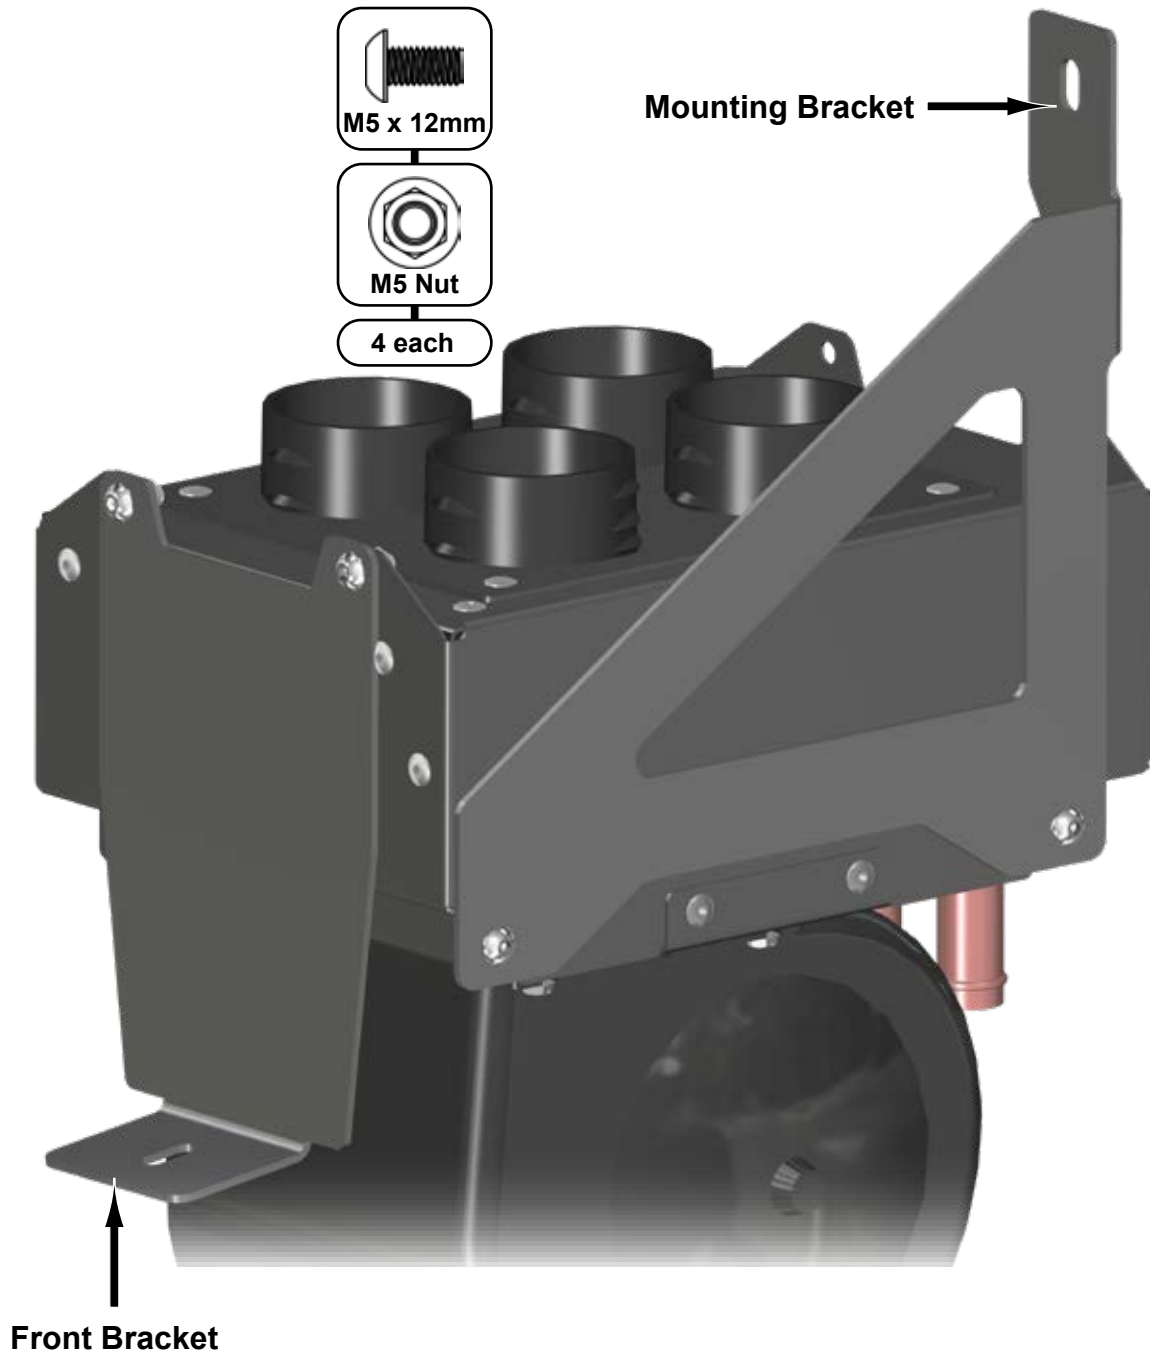


- Remove Seats and Panels shown.




- Remove stock components shown.




- Modify Front Upper Console.
- Reinstall to machine.

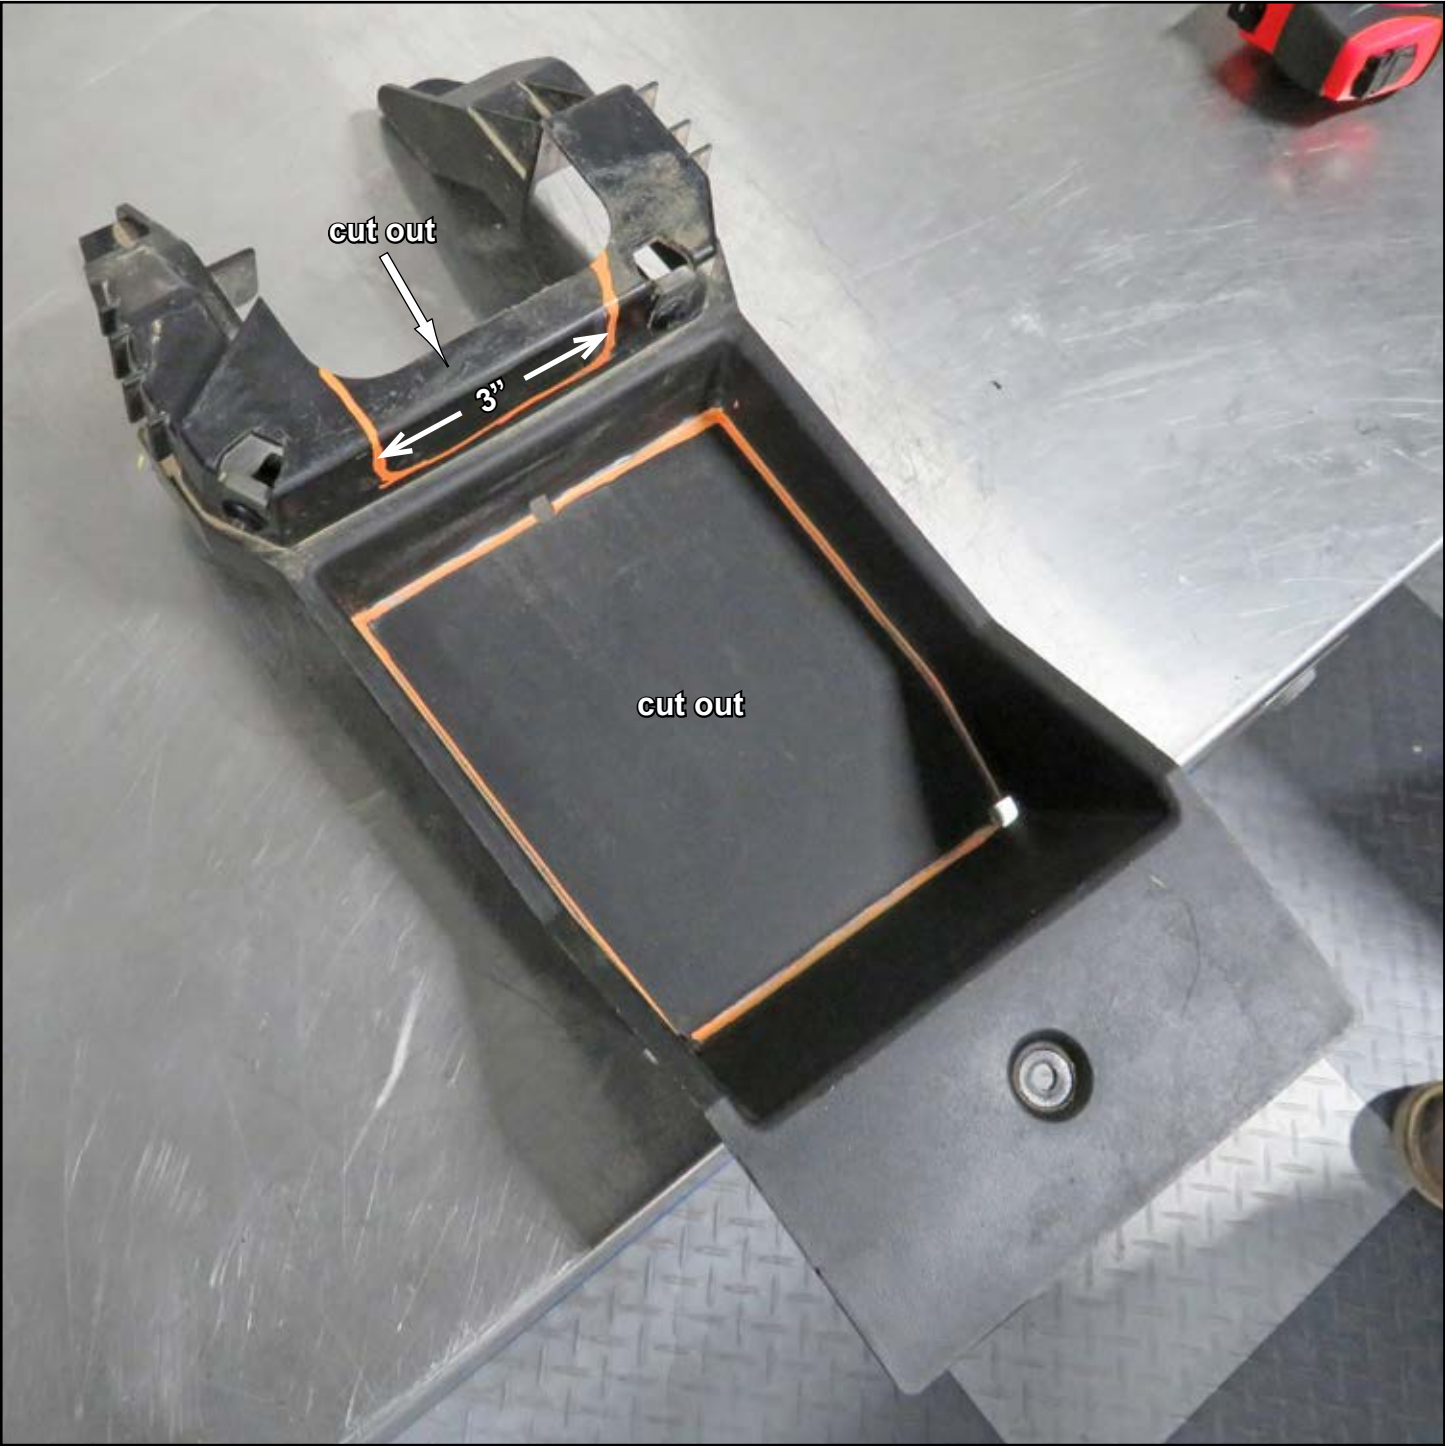


- Install Front Filler to Knob Bracket with hardware shown; tighten.

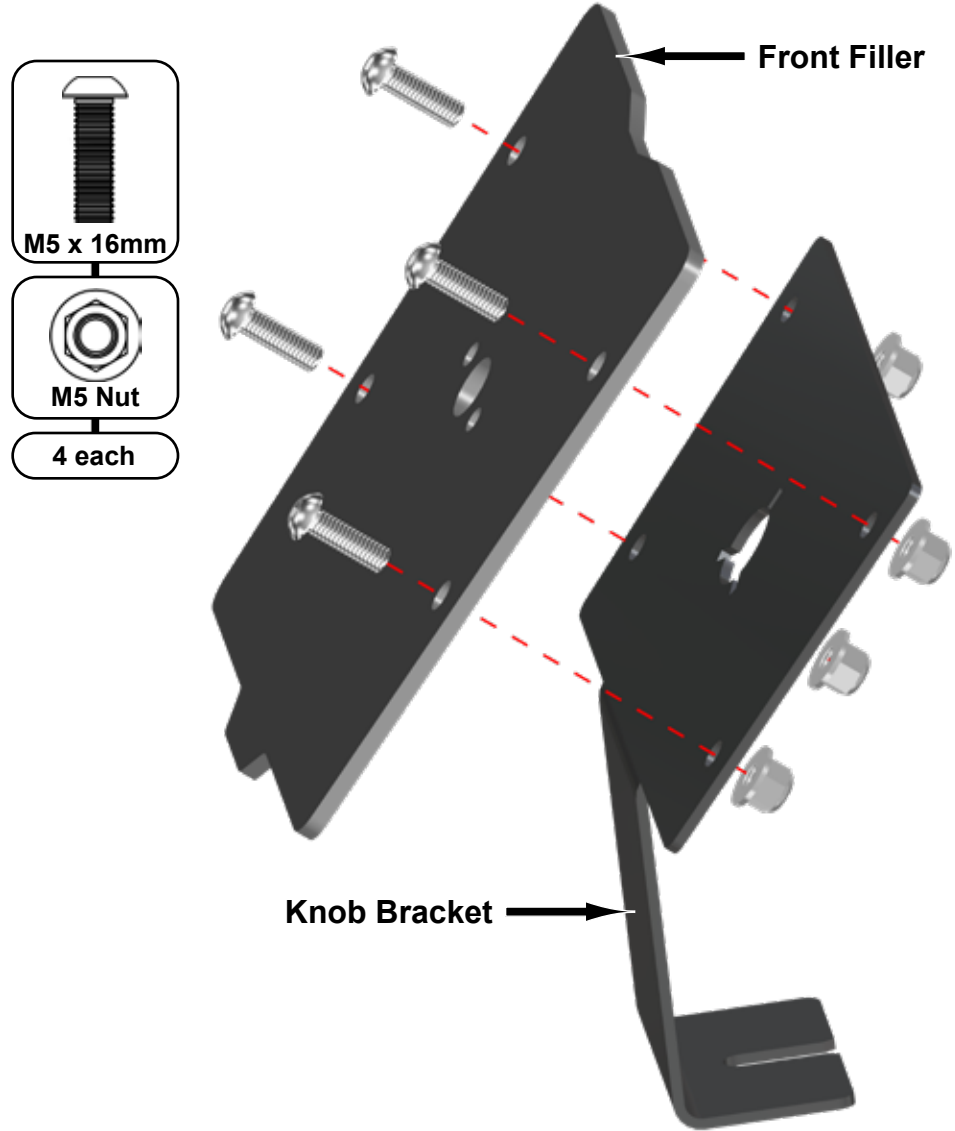

- Connect Blower Harness to Blower.

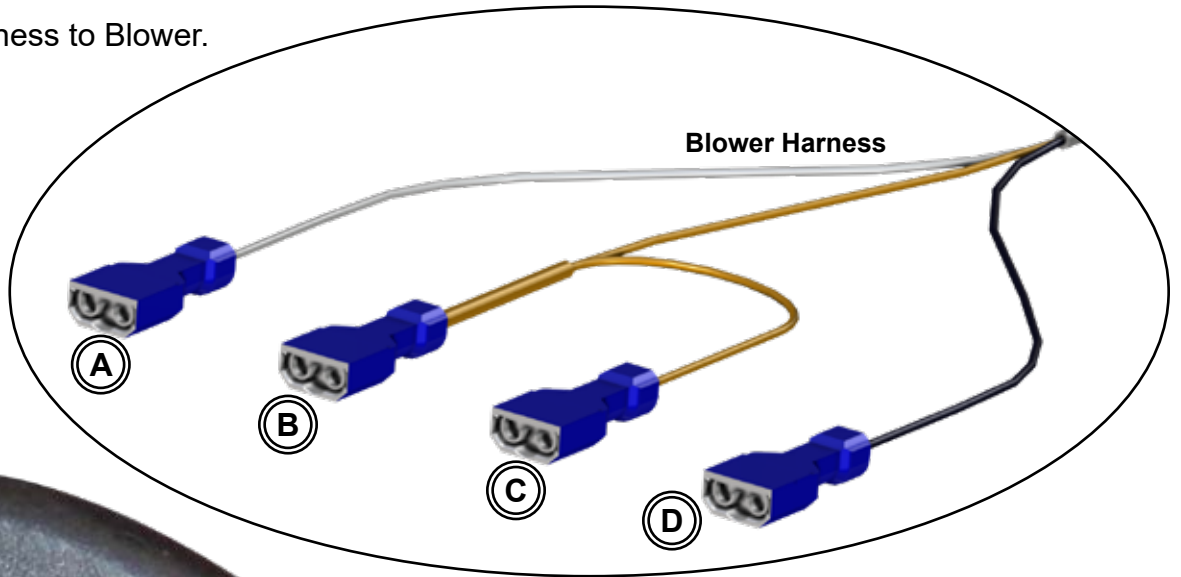

- Install Heater assembly into machine and secure to Front Upper Console with hardware shown.

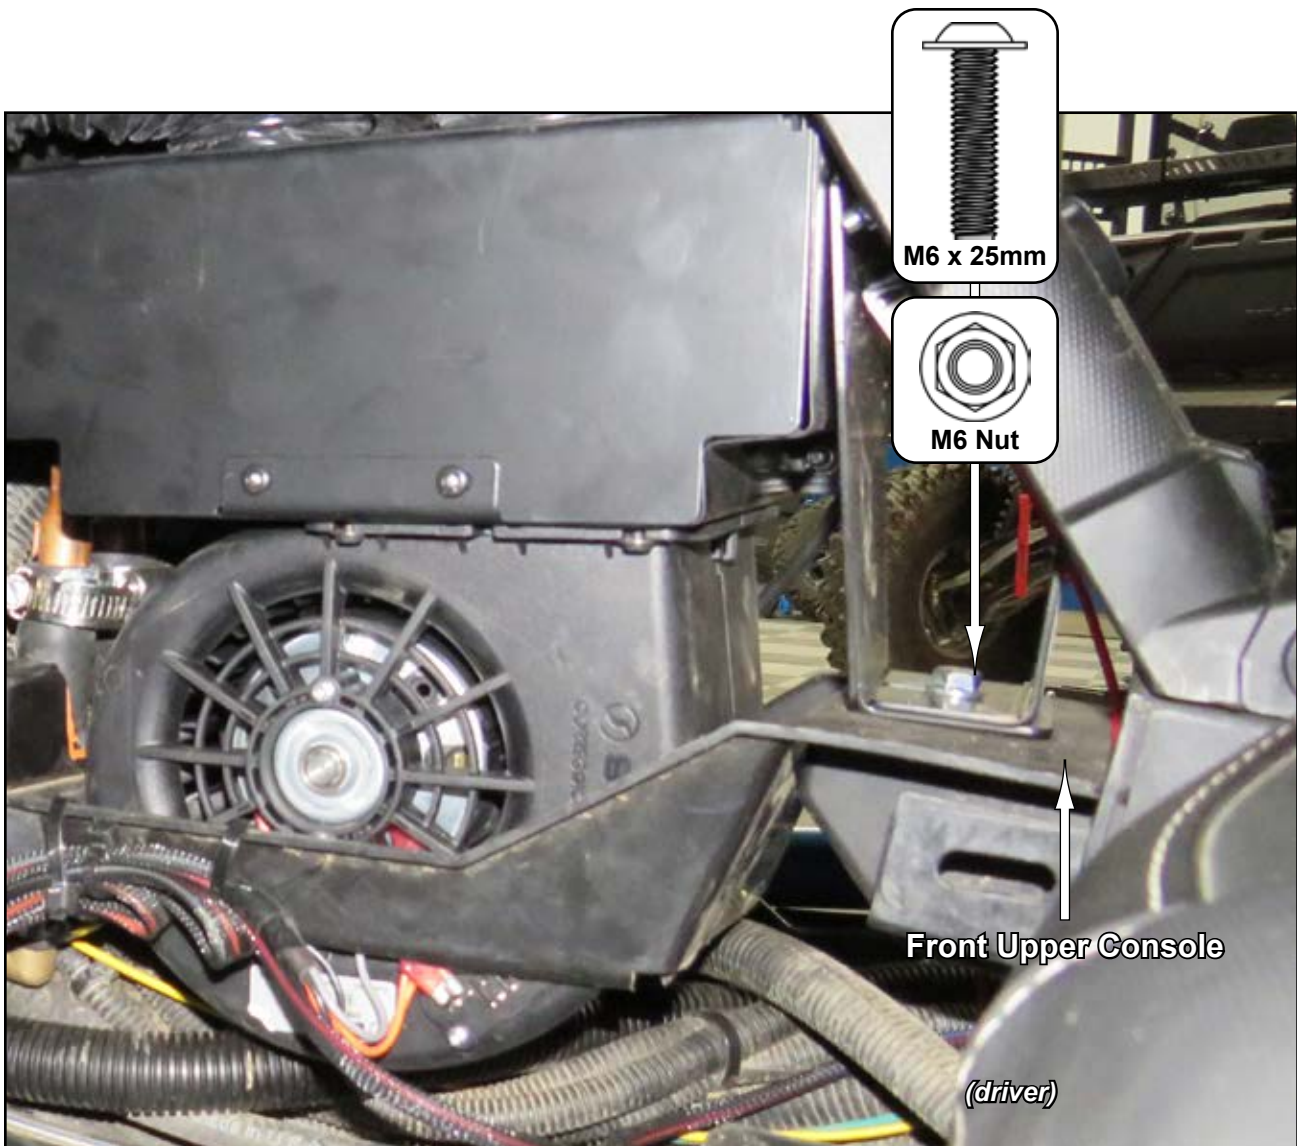

- Separate Knob.




- Connect Cable, from Valve, to Knob.
- Place Valve in passenger footwell.




- Install Knob; tighten.




- Place Tube Clamp around Cage.
- Join Mounting Bracket to Tube Clamp with hardware shown; tighten.

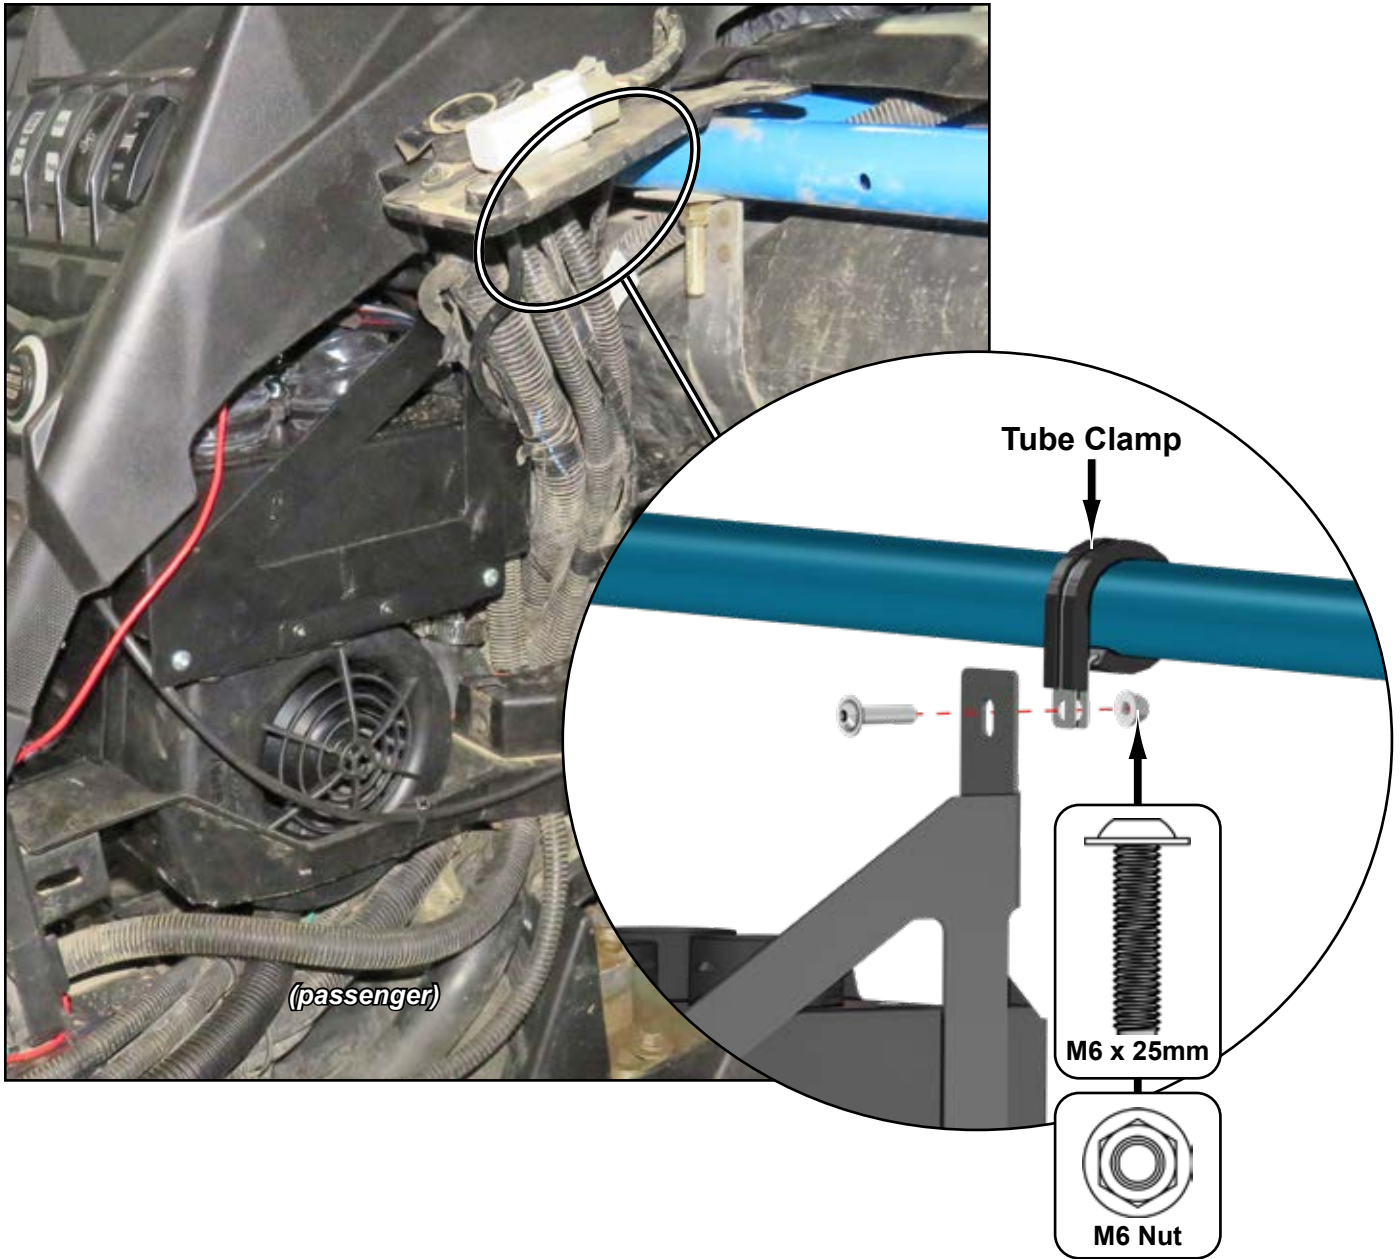

- Cut Ducting for lower Vents to approximately 19-11/16".
- Cut Ducting for upper Vents to approximately 29-1/2".

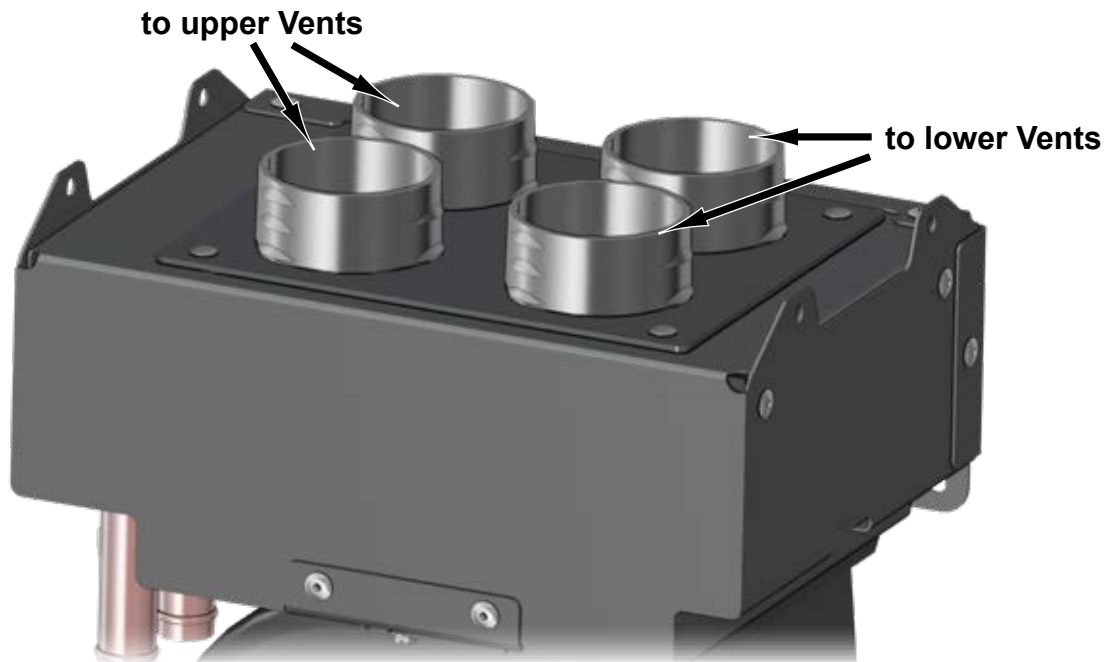

- Secure Ducting to Adapters, on Heater, with Wire Ties.
- Install Vent Bottoms to Ducting.
- Secure with Wire Ties.

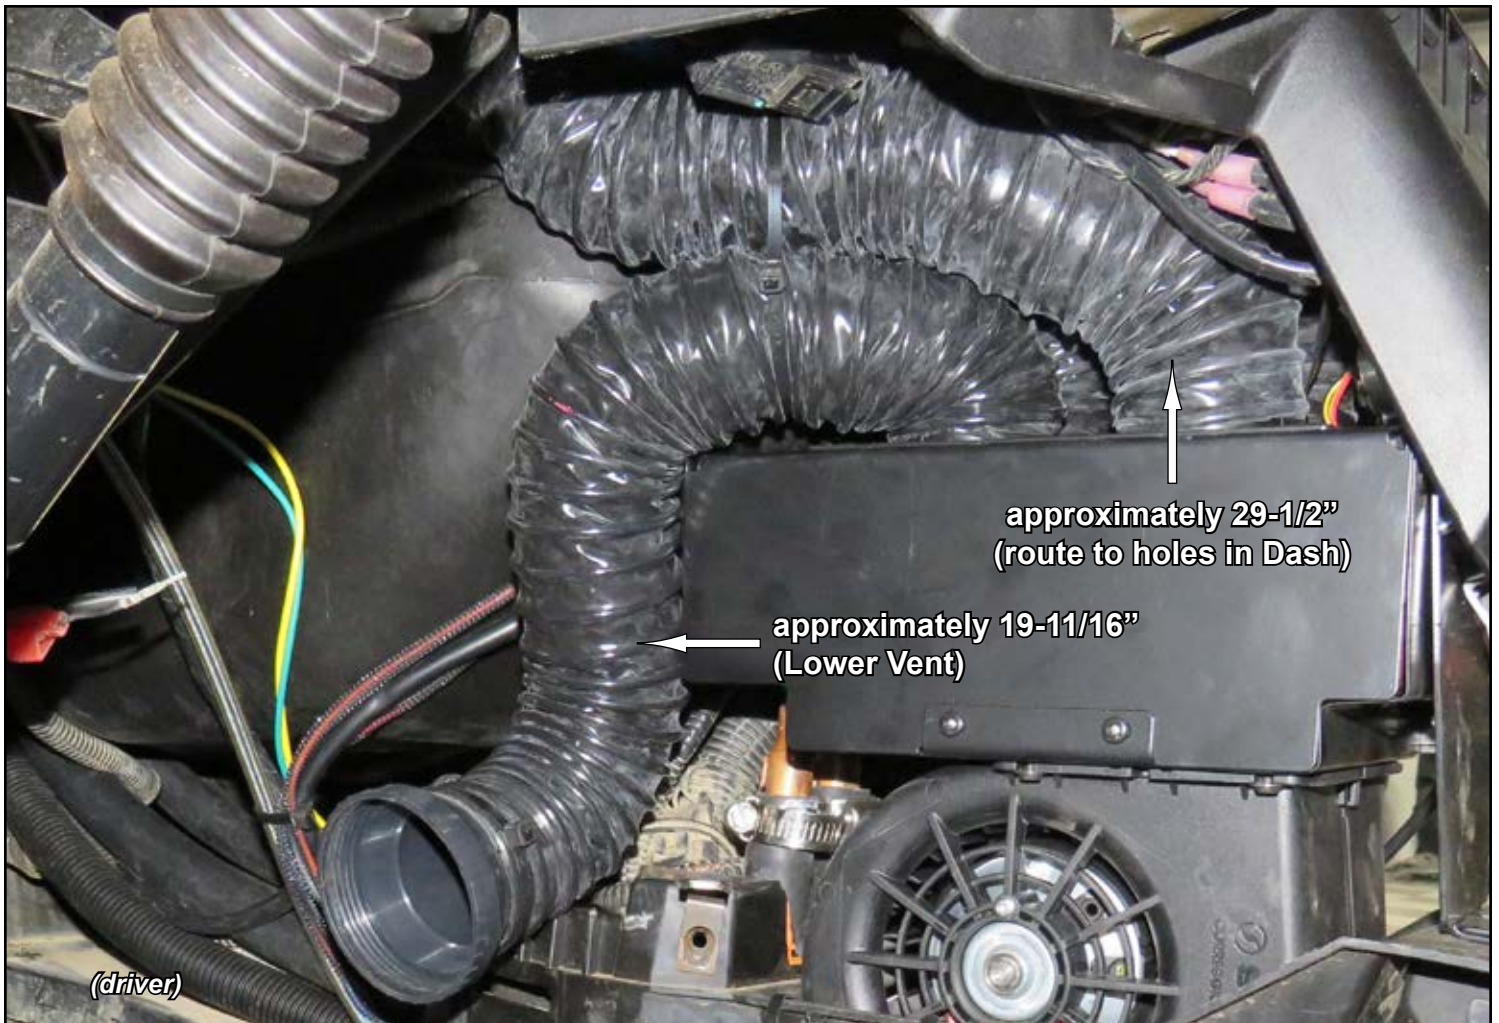

- Screw Vent Top through Filler Plate - R and to Vent Bottom; tighten.





- Place Filler Plate - R into position.
- Use holes in Filler Plate - R as a guide and drill through stock plastic.
- Secure Filler Plate - R with Pins shown.

repeat steps for Filler Plate - L and Vent installation



install Vent Tops to Vent Bottom / Ducting assemblies

(passenger)



remove approximately 3-3/4" x 3-3/4"
from Glove Box in area shown




- Reinstall Glove Box.


- Connect Power Harness to Terminal.



- Connect Blower Harness and install Switch.


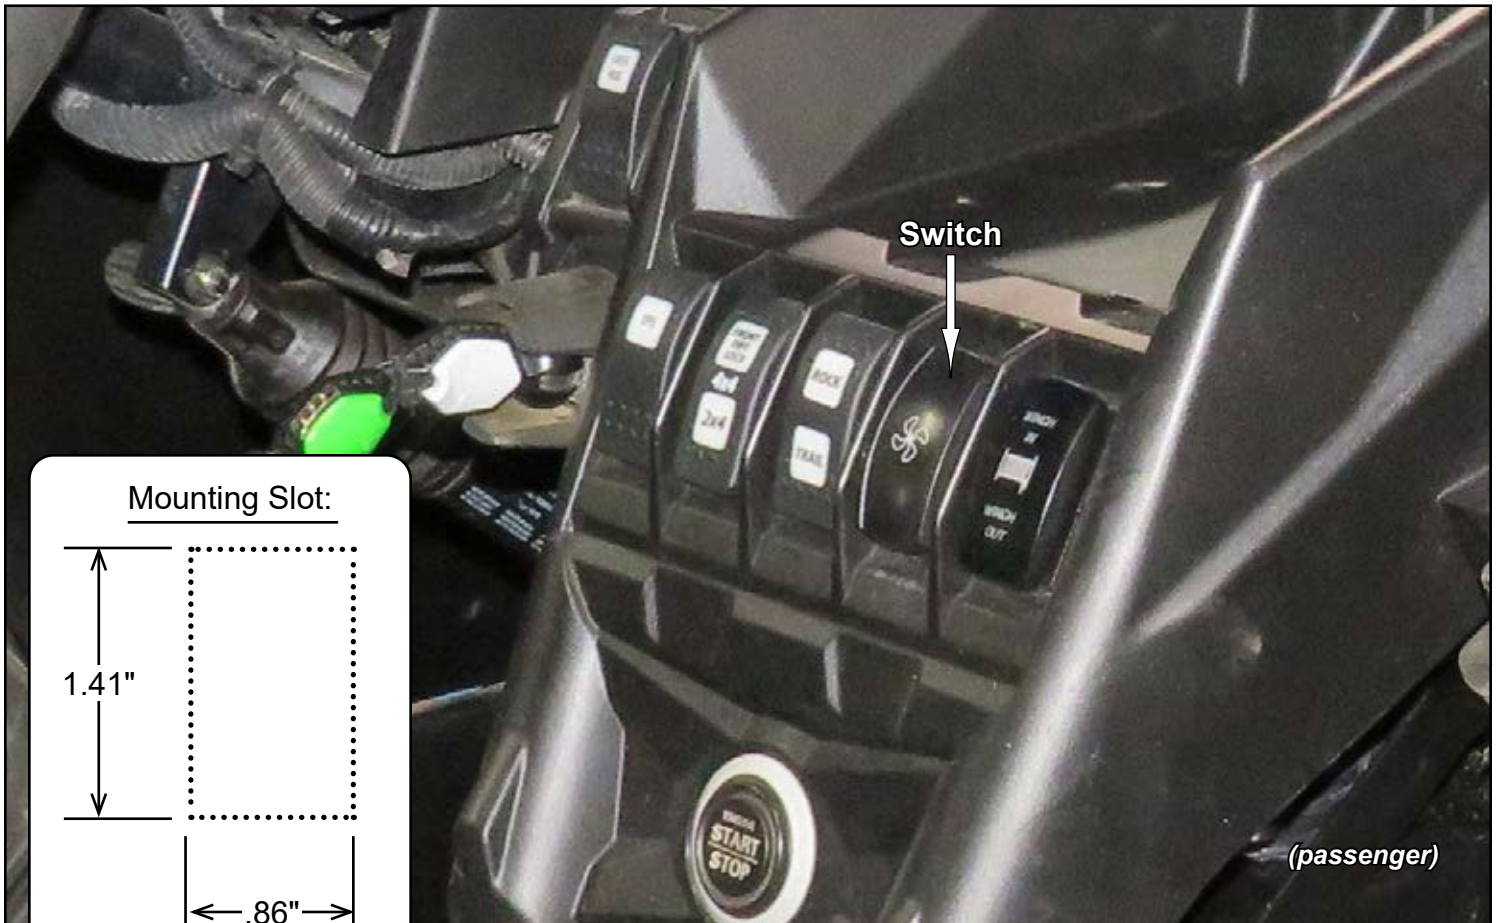


Mounting Slot:

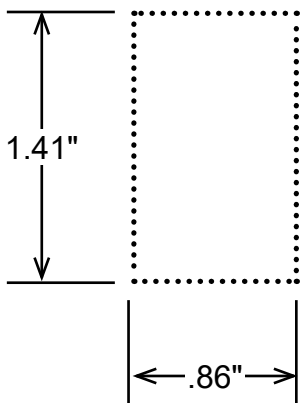


(passenger)


- Raise front of vehicle and place on jack stands.
- Remove Lower Radiator Hose and drain coolant.
- Hold Adapter up to stock Hose and mark locations to be cut.
- Cut stock Hoses and install Adapter with Clamps as shown.

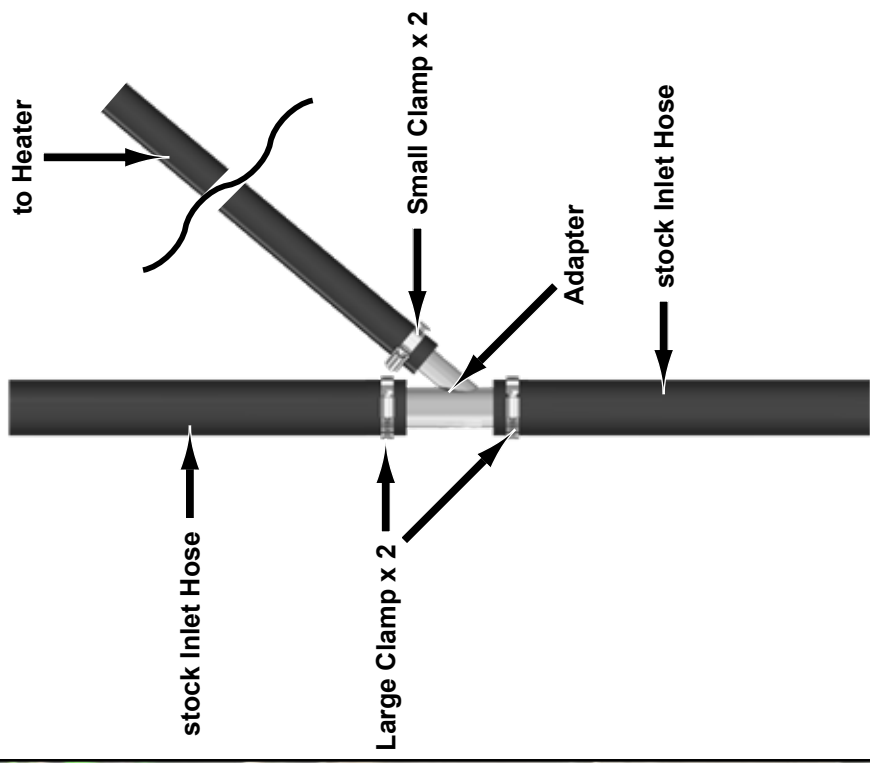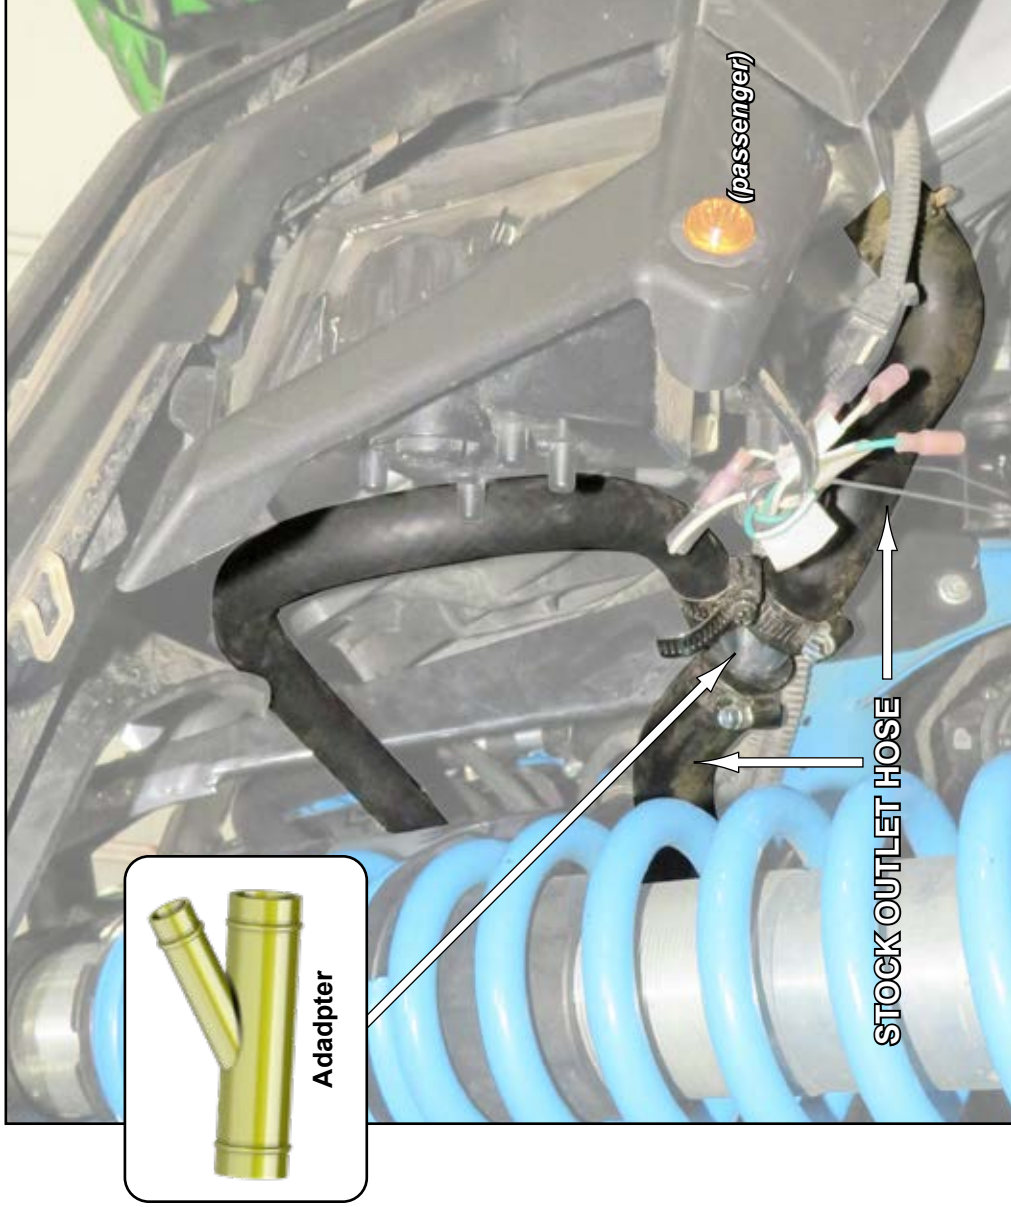




- Hold Adapter up to stock Hose and mark locations to be cut.
- Cut stock Hose and install Adapter with Clamps as shown.

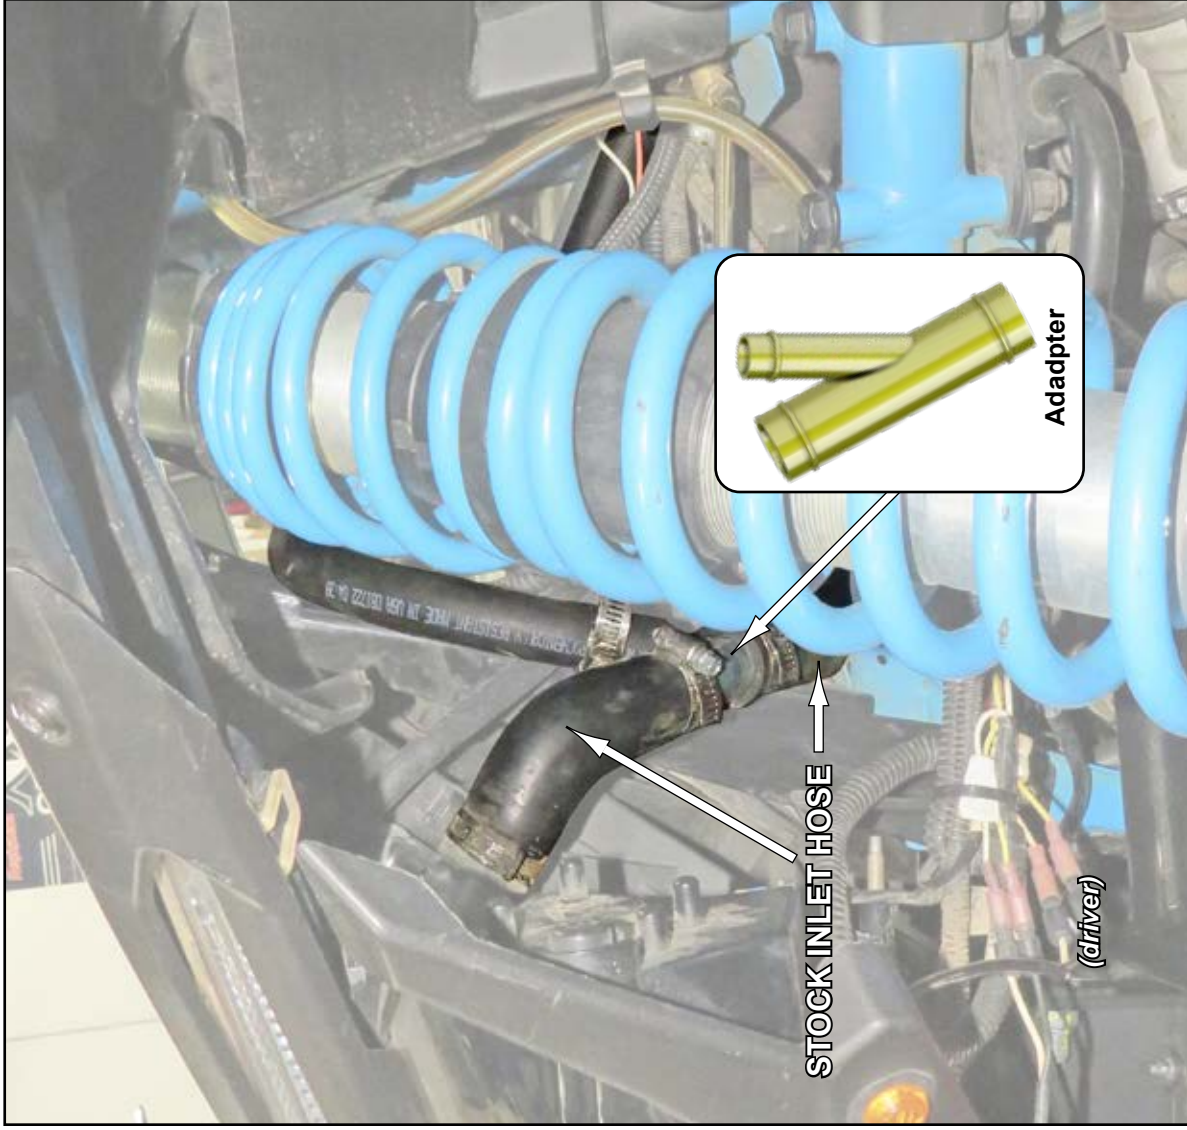


To prevent stock Radiator Hoses from being cut short, use provided Adapters as templates.

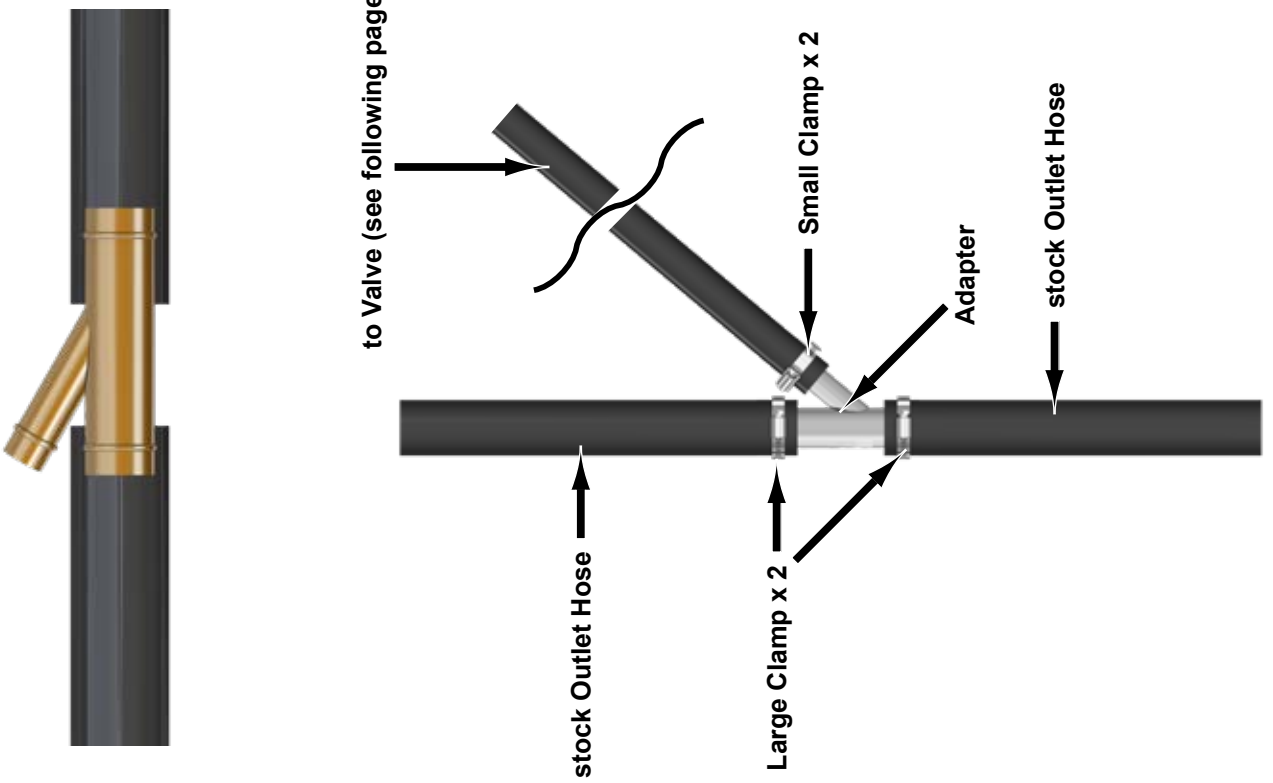

- Connect components shown to new Inlet and Outlet Tubing; tighten Clamps.

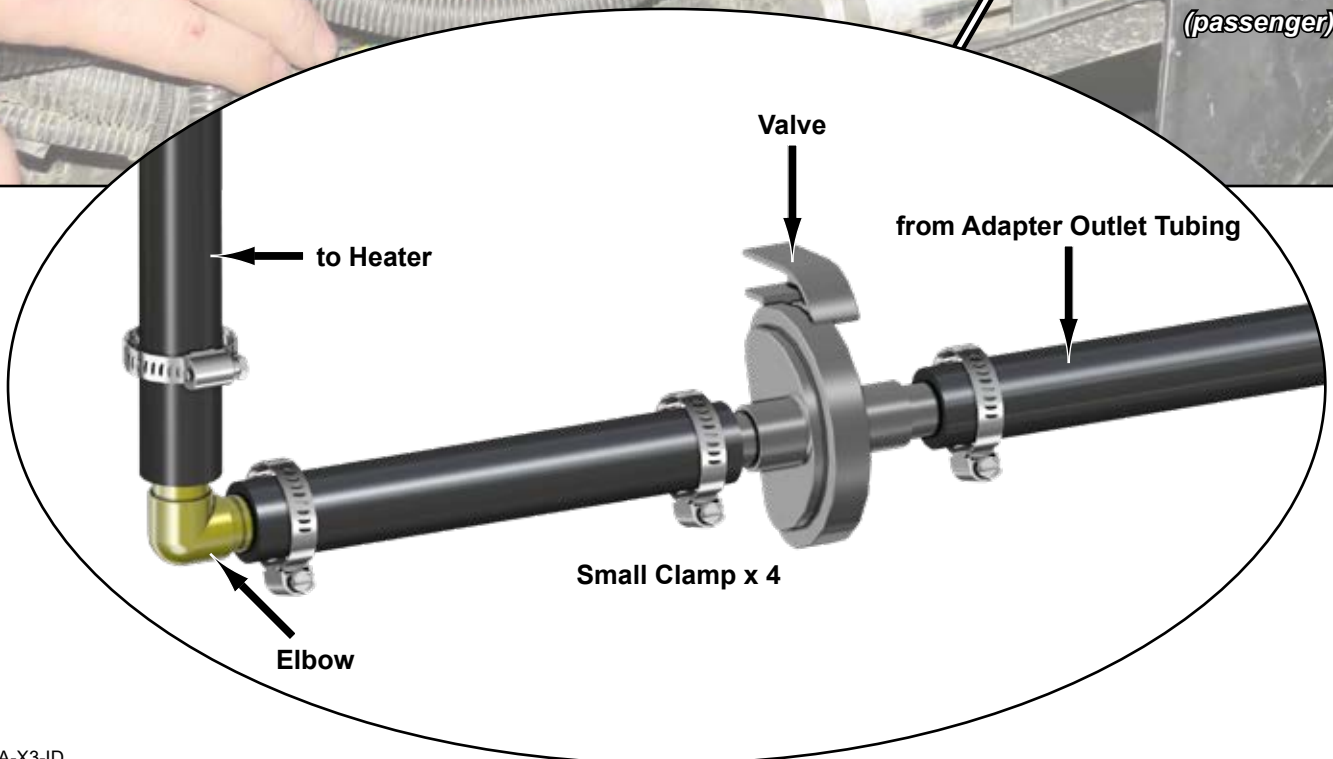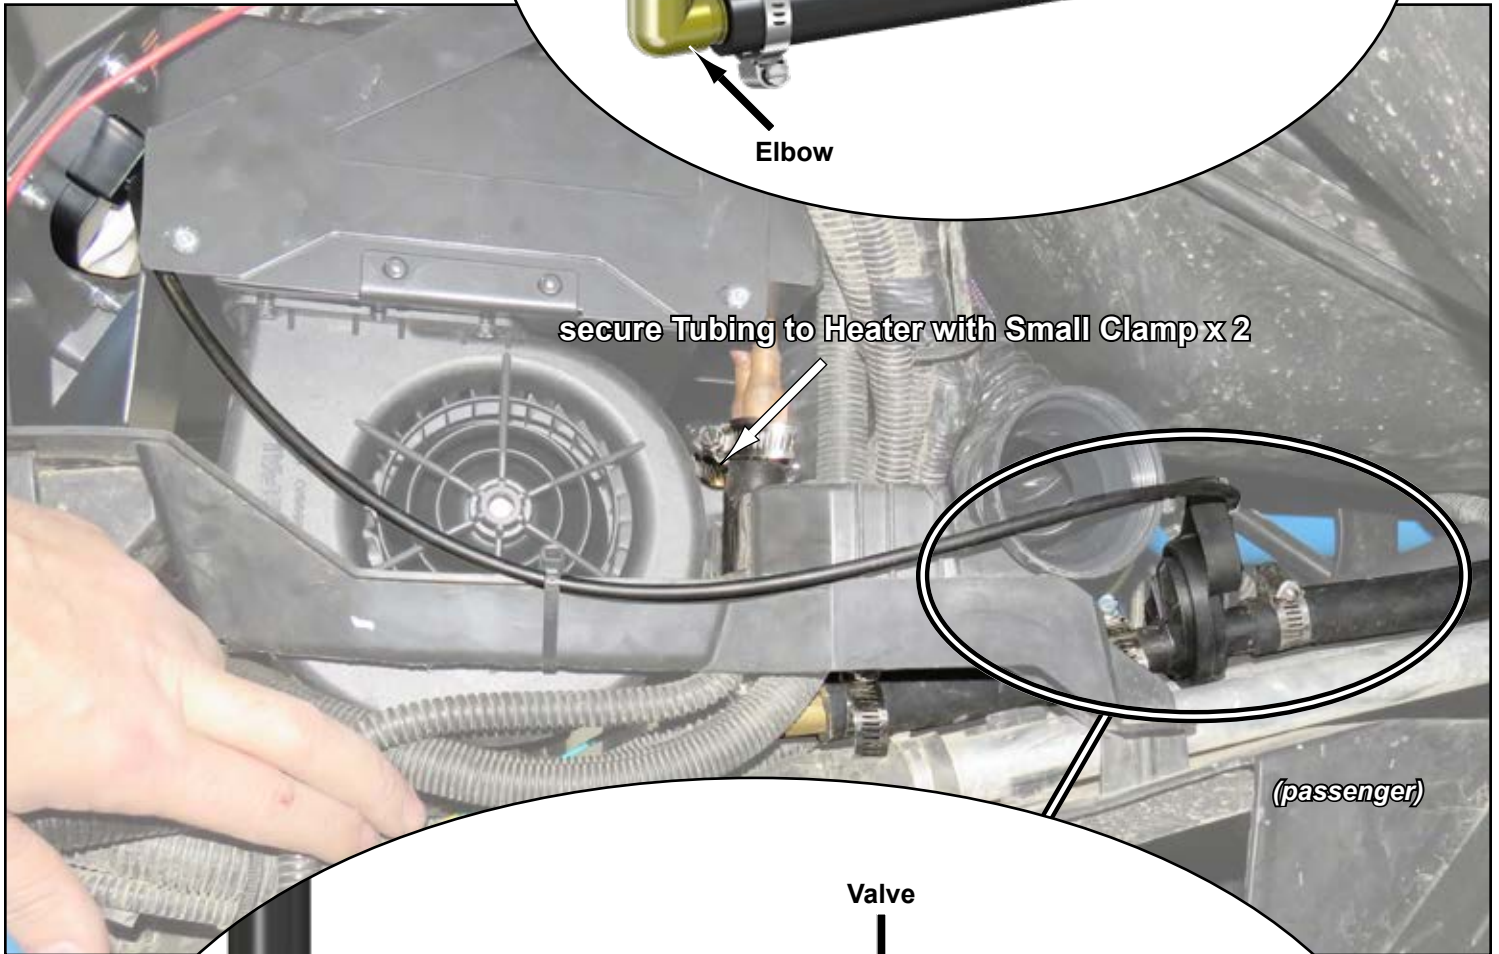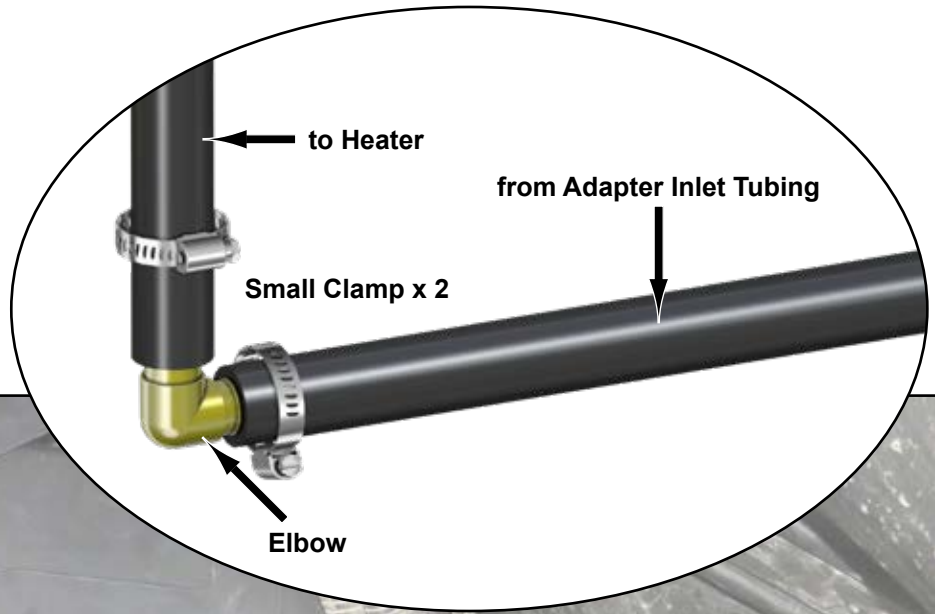

- Place machine back on ground.
- Fill coolant level to manufacturers recommended setting.
- Start machine and run at 3000 RPM until engine is hot.
- Use provided Hose Pliers and pinch off Inlet Hose as shown below.

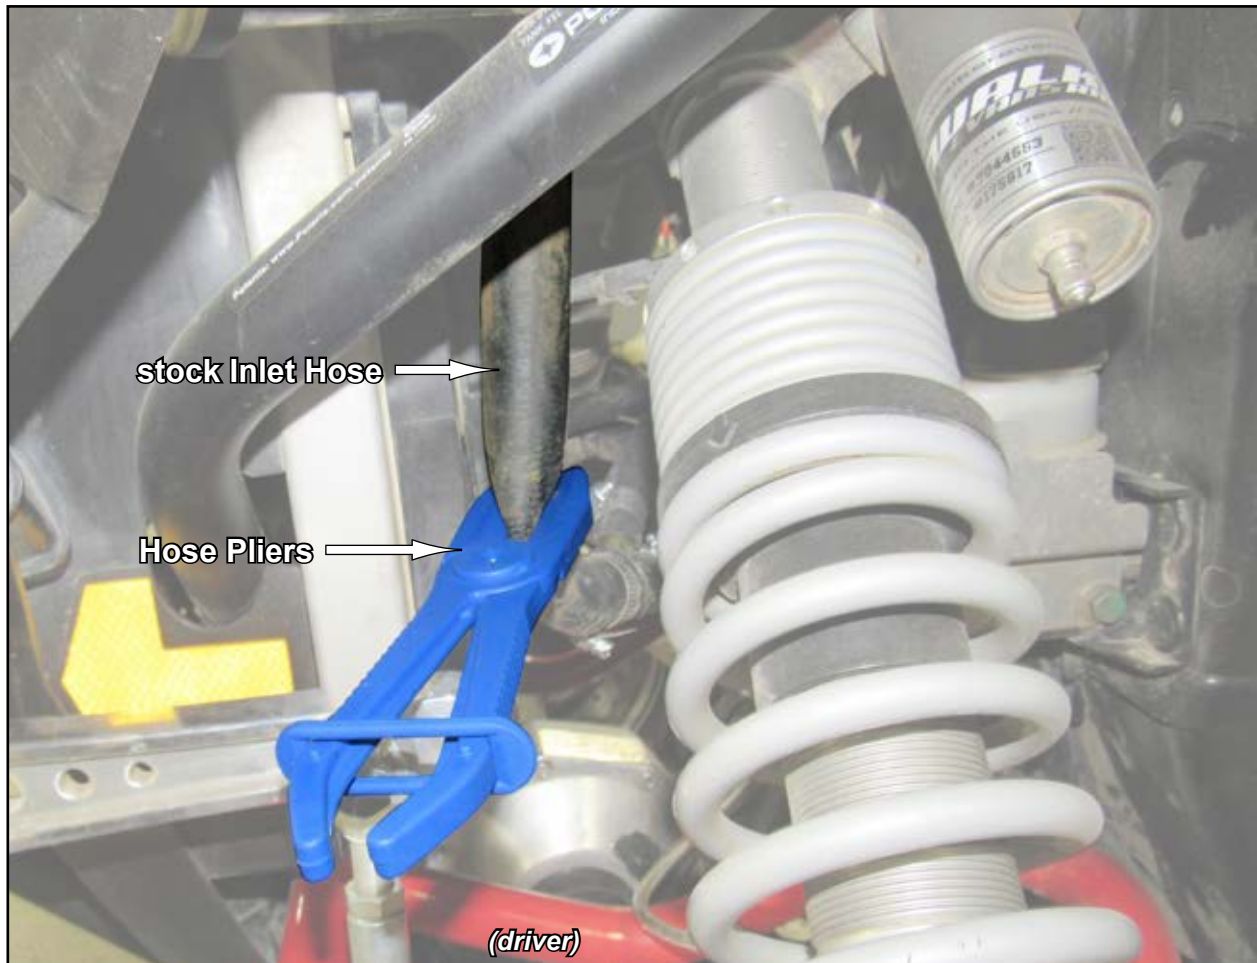

- Remove Hose Pliers after Radiator Fan turns ON.
- After Radiator Fan turns OFF, pinch Inlet Hose again and remove after Radiator Fan turns ON.
- Turn machine off and let engine completely cool; may take several hours.
- Check Coolant Level in Radiator and Reservoir; adjust as needed.
- Start machine and repeat “pinch” steps again.

CUSTOMER NOTIFICATION AND DISCLAIMER LIABILITY

This product is a modification for utility task vehicles and all terrain vehicles. Use this product at your own risk.

Warranty and Liability Limitations. The Buyer hereby assumes all risks associated with the use and/or installation of this product. Buyer waives all liability claims against SuperATV® of any kind or nature, including, but not limited to, liability for penalties, fines, property damage, personal injury or death, to the fullest extent permitted by law. Buyer acknowledges and agrees that SuperATV® is not liable for any direct, indirect, incidental, consequential or special damages, including but not limited to, damage, loss of life, loss of property or equipment, loss of profits or revenue, injury, or claims from any individual or entity arising from the use of this product.

The warranty for this product, if any, may give you ("Buyer") specific legal rights, and Buyer may also have other rights which may vary from state to state. The installation of this product may void or otherwise adversely affect your factory warranty.

Consult your vehicle warranty before using this Product. Under no circumstances will SuperATV® be liable for the voidance of the Buyer's vehicle warranty. Buyer assumes all risk and responsibility if a manufacturer and/or dealer voids the Buyer's vehicle warranty due to use of this Product.

Safety and Laws. Operate your vehicle at all times in a safe manner. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you. The installation of this product may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of this product on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of this product. In no case will SuperATV® be held liable if Buyer violates the law or uses the product in an unsafe manner.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

Installation. The installation of this product on your vehicle indicates that you have had the opportunity to inquire about applicable local, state, and federal laws and ordinances and that you have read and understand, and accept all of the terms of, this Disclaimer.

SuperATV® shall not be responsible for the proper installation, use, and service of this product. Rather, the Buyer shall be solely responsible for the installation of the product and any damage that may be done to the vehicle or vehicle components as a result of modifications made by the Buyer.