



*Need help with your installation?*



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 8:00pm EST M-Th  
 8:00am - 7:00pm EST Friday  
 9:00am - 2:00pm EST Saturday

*Read instructions and view illustrations before beginning.*

*Thank You*

*For Choosing*



- ***Tubing and Duct lengths are SuperATV recommended. User may install components in other locations. Verify lengths before final installation.***
- ***Check behind areas being drilled for interference.***
- ***Avoid burns and scalding by working on cool vehicles.***
- ***Secure components away from rotating objects.***
- ***Do not tighten mounting hardware until all components are in place.***
- ***Use manufacturers recommended coolant.***
- ***Avoid sharp bends when installing Tubing.***
- ***Verify that no leaks are present after installation.***

**CUSTOMER NOTIFICATION AND DISCLAIMER LIABILITY**

**This product is a modification for utility task vehicles and all terrain vehicles. Use this product at your own risk.**

**Warranty and Liability Limitations.** The Buyer hereby assumes all risks associated with the use and/or installation of this product. Buyer waives all liability claims against SuperATV® of any kind or nature, including, but not limited to, liability for penalties, fines, property damage, personal injury or death, to the fullest extent permitted by law. Buyer acknowledges and agrees that SuperATV® is not liable for any direct, indirect, incidental, consequential or special damages, including but not limited to, damage, loss of life, loss of property or equipment, loss of profits or revenue, injury, or claims from any individual or entity arising from the use of this product.

The warranty for this product, if any, may give you ("Buyer") specific legal rights, and Buyer may also have other rights which may vary from state to state. The installation of this product may void or otherwise adversely affect your factory warranty.

Consult your vehicle warranty before using this Product. Under no circumstances will SuperATV® be liable for the voidance of the Buyer's vehicle warranty. Buyer assumes all risk and responsibility if a manufacturer and/or dealer voids the Buyer's vehicle warranty due to use of this Product.

**Safety and Laws.** Operate your vehicle at all times in a safe manner. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you. The installation of this product may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of this product on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of this product. In no case will SuperATV® be held liable if Buyer violates the law or uses the product in an unsafe manner.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

**Installation.** The installation of this product on your vehicle indicates that you have had the opportunity to inquire about applicable local, state, and federal laws and ordinances and that you have read and understand, and accept all of the terms of, this Disclaimer.


SuperATV® shall not be responsible for the proper installation, use, and service of this product. Rather, the Buyer shall be solely responsible for the installation of the product and any damage that may be done to the vehicle or vehicle components as a result of modifications made by the Buyer.

**Verify wiring shown below is connected before installing.**

- Open Vent, insert finger, and pull Controls away from Base.




- If not connected, connect orange wire to Tab shown.

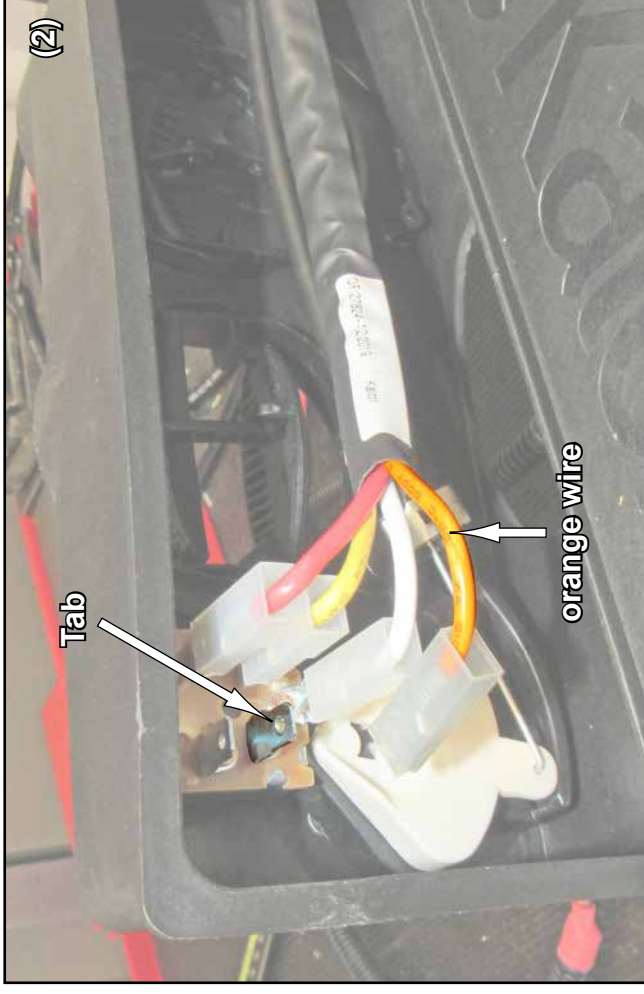

- Verify that all connections shown are connected and secure.
- Push Controls back into Base.




- Install Clip Nuts to Mounting Brackets; set aside.

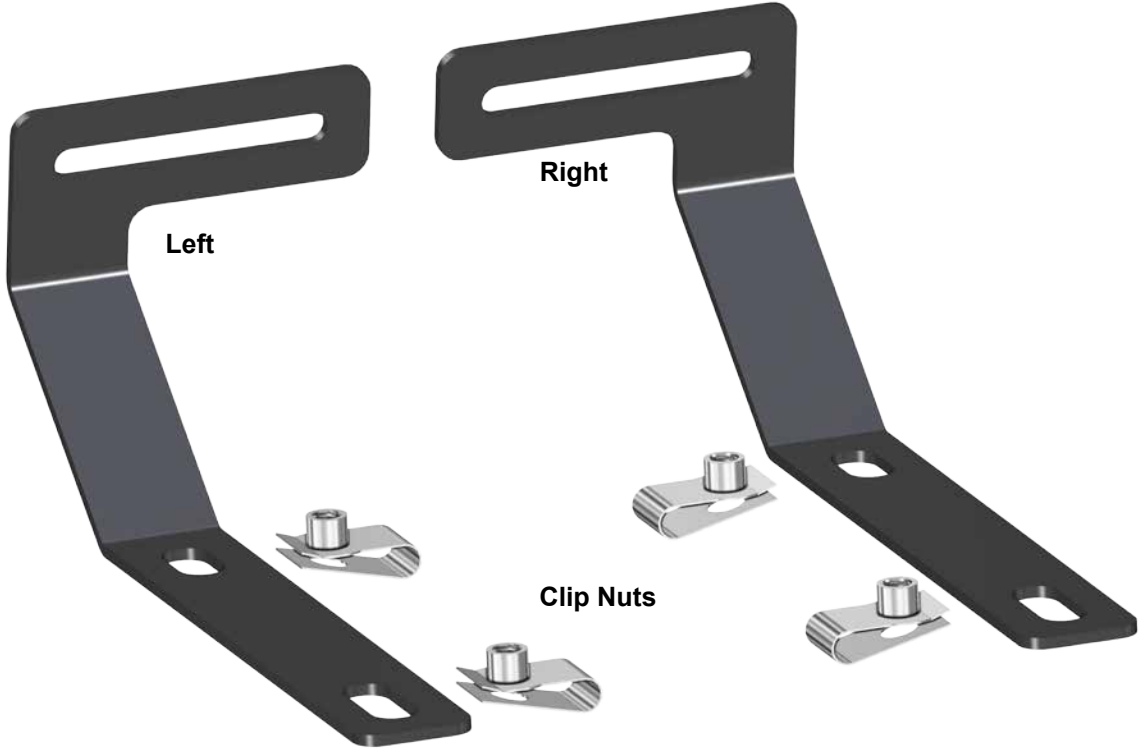


### Tunnel Hose Template

- Follow profile and cut template.
- Attach to location shown with tape. See page 7.
- Mark center, remove, and use provided  $\text{Ø}1\text{-}1/4\text{'}$  Hole Saw to make hole.

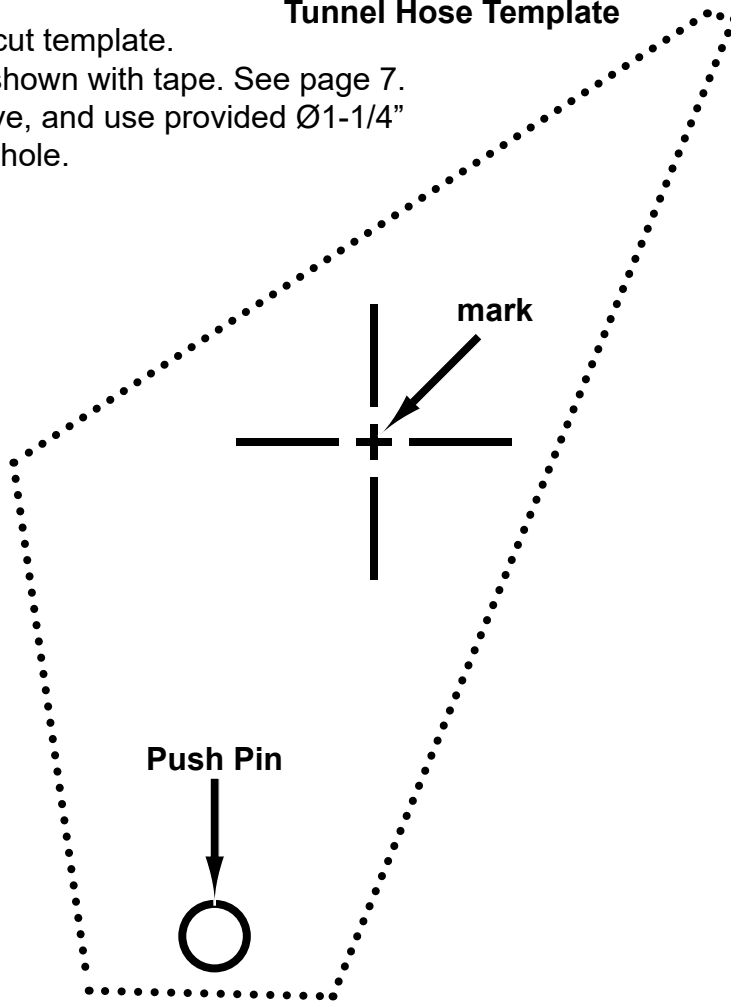

### Firewall Hose Template



- Follow profile and cut template.
- Attach to location shown with tape. See page 7.
- Mark center, remove, and use provided  $\text{Ø}1\text{-}1/4\text{'}$  Hole Saw to make hole.

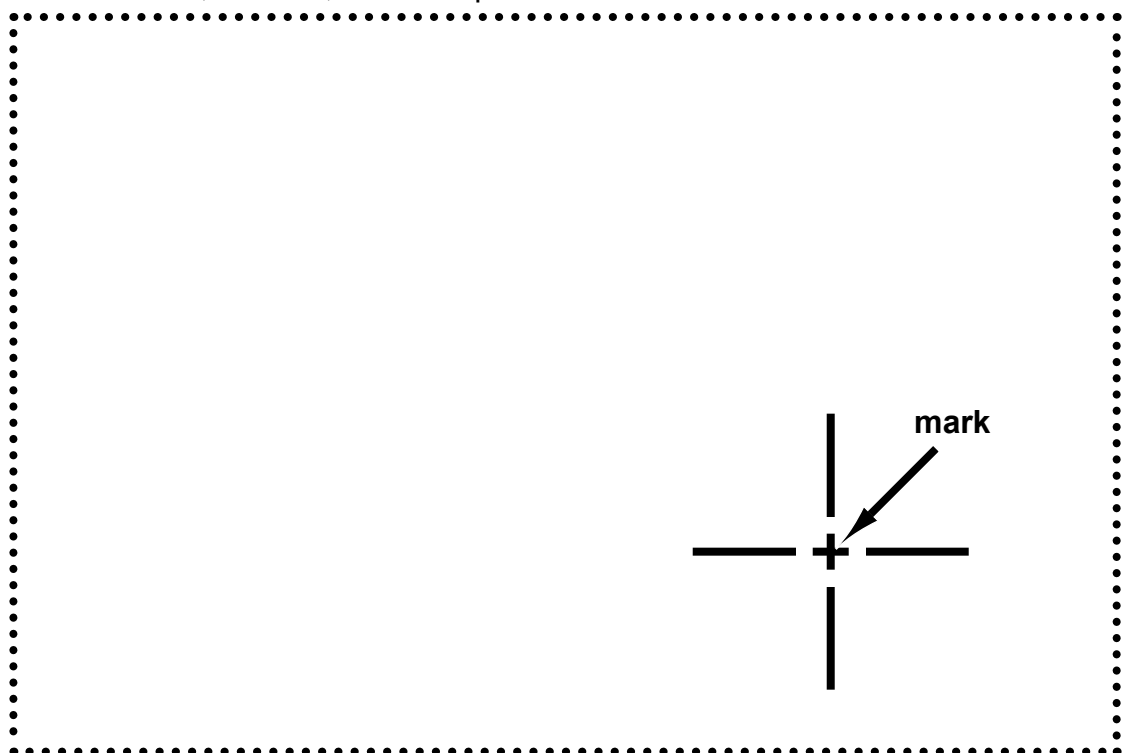

***this page intentionally blank***



Template Locations:

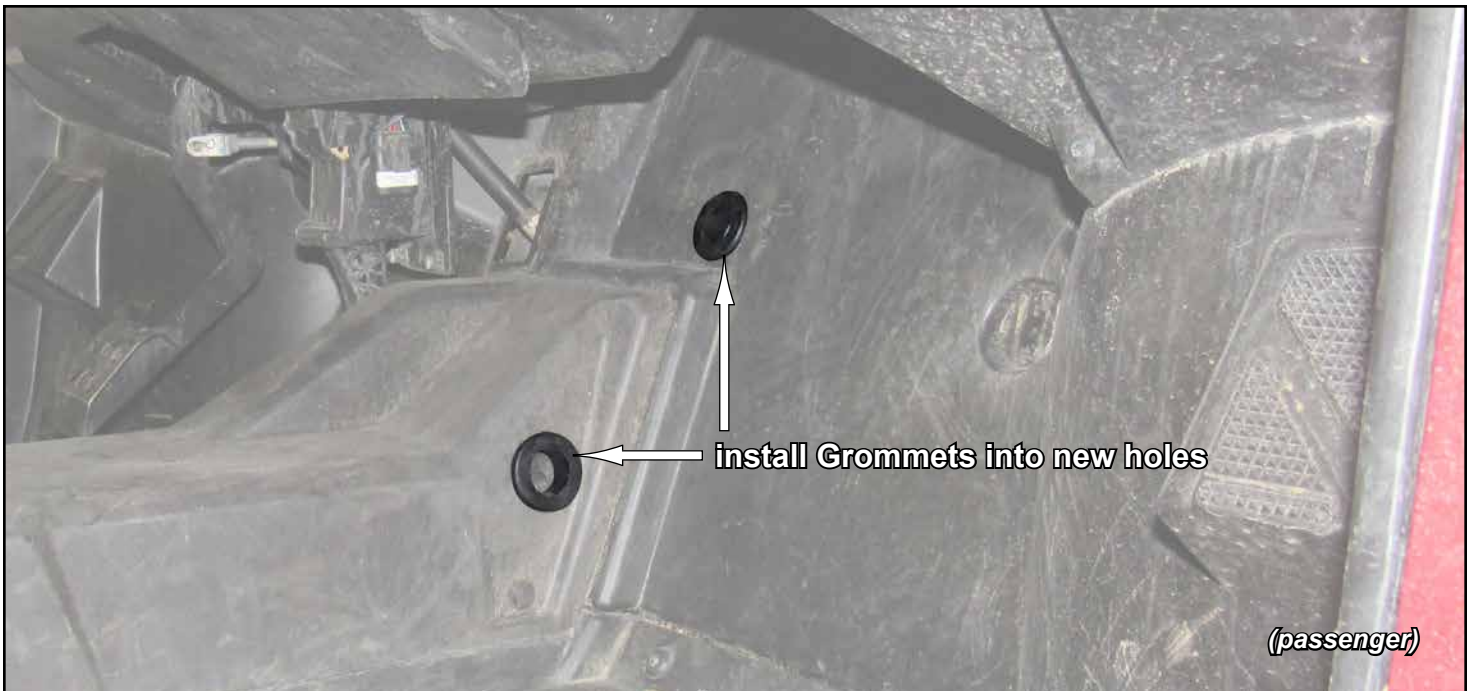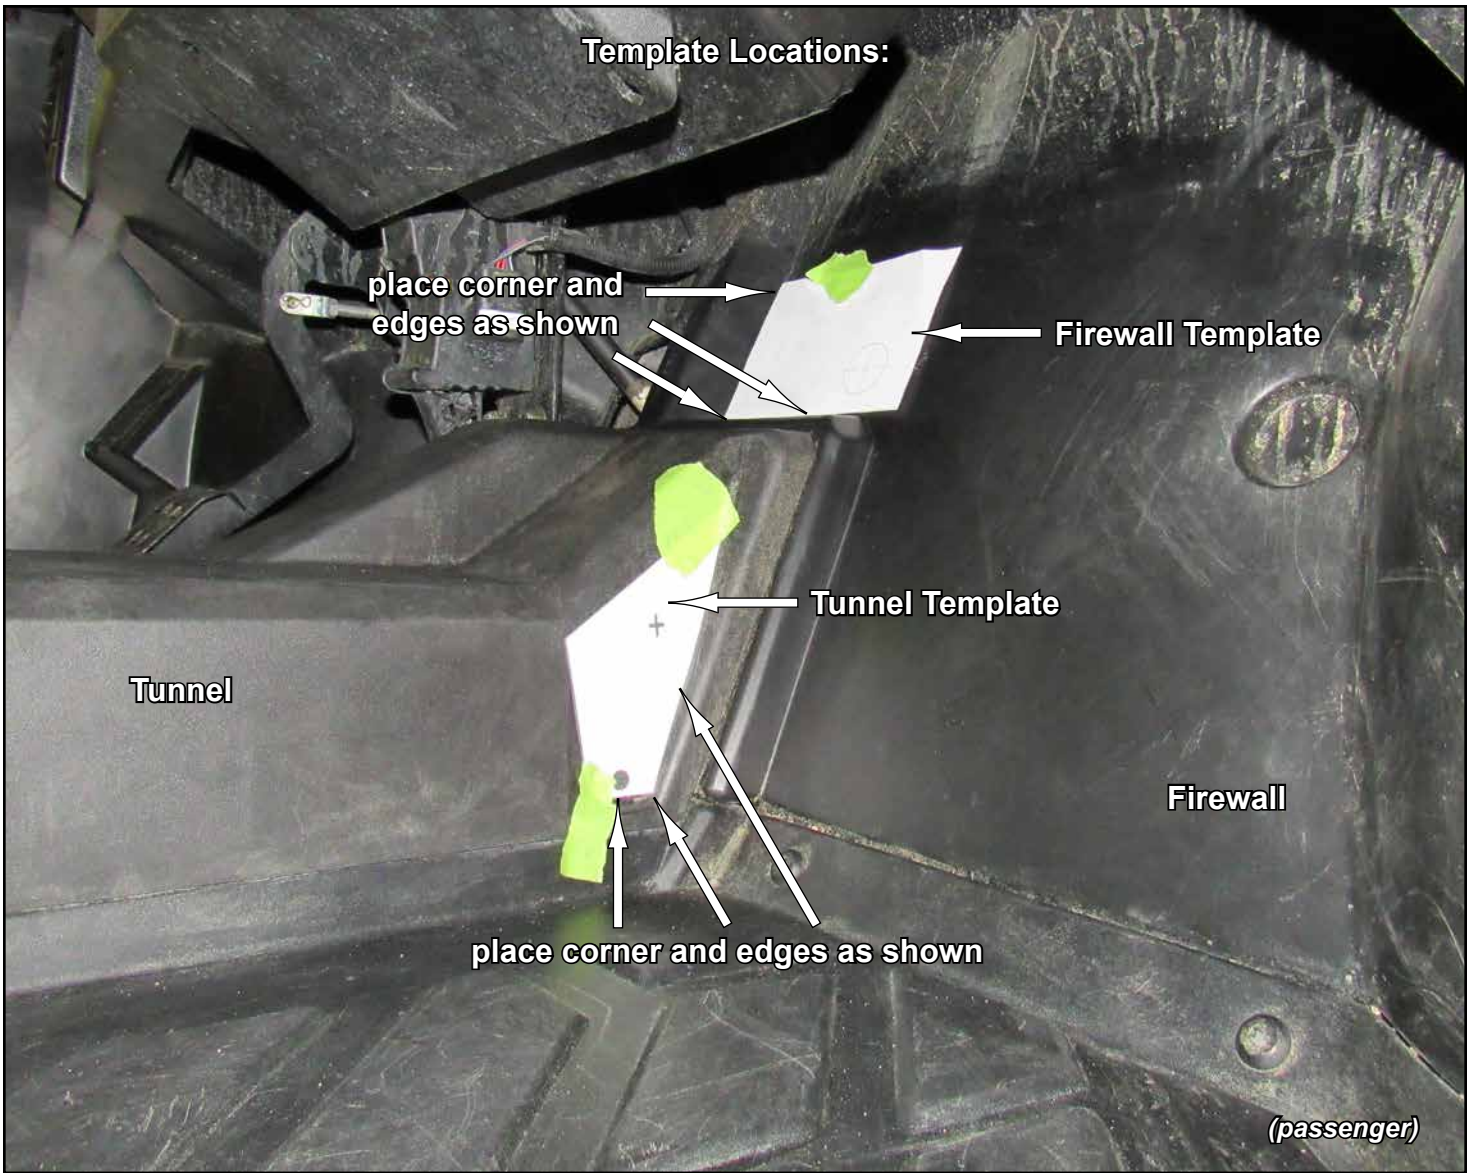




- Remove Tunnel.
- Cut (1) piece of Tubing 32-1/4" long.
- Install into Grommet.
- Reinstall Tunnel.





- Remove Upper Dash.
- Mark locations for Vents and use provided Ø3" Hole Saw to make holes.
- *Installer may locate Vents in a different location. Verify that Ducting will reach before drilling holes; see following page.*

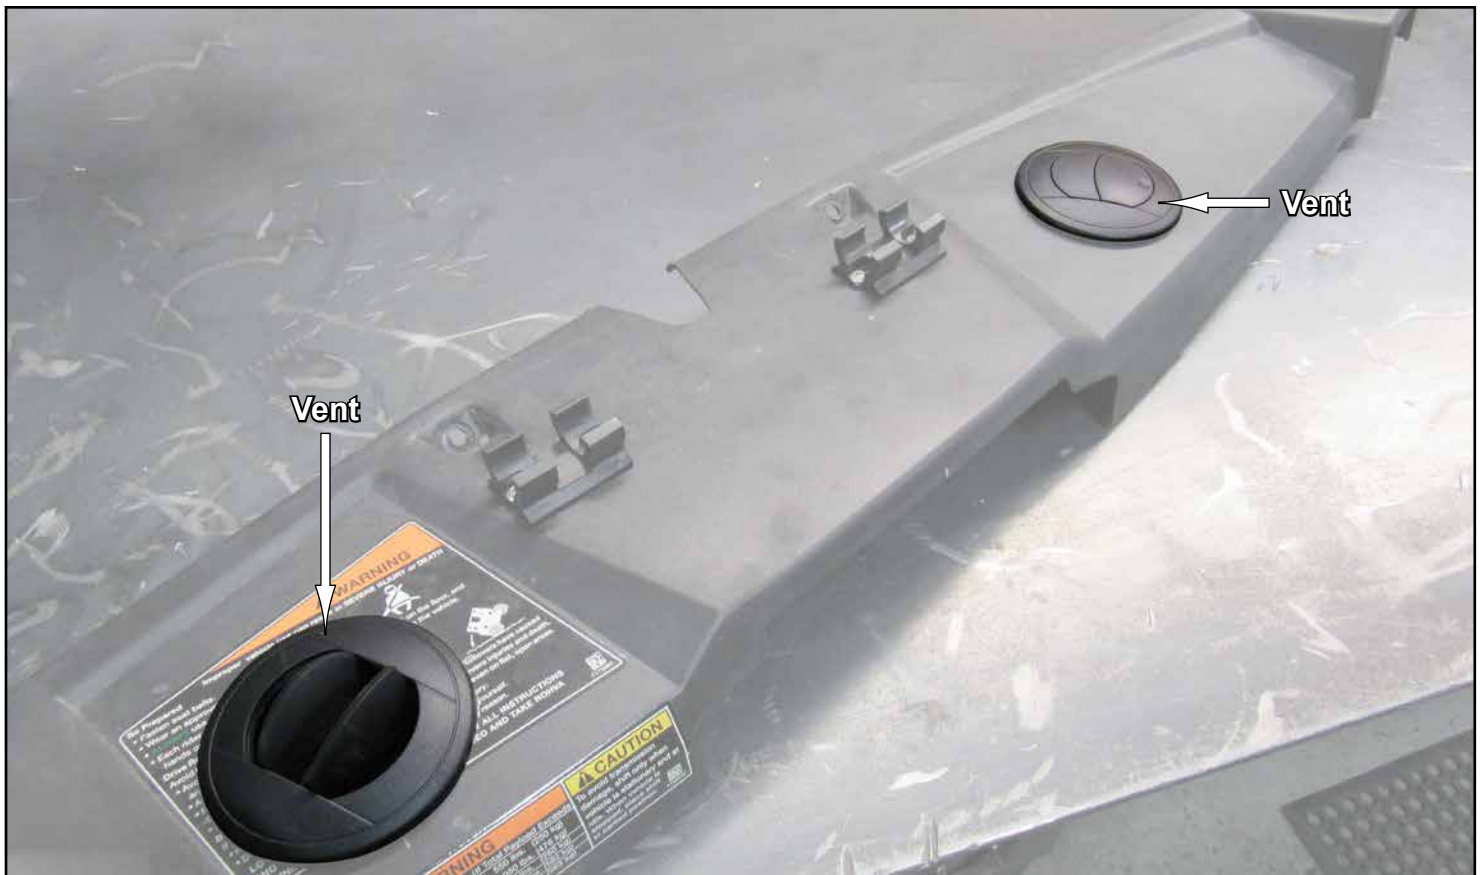

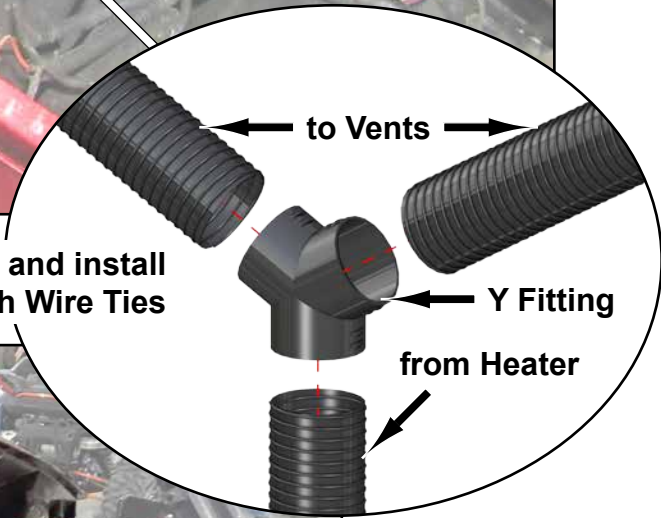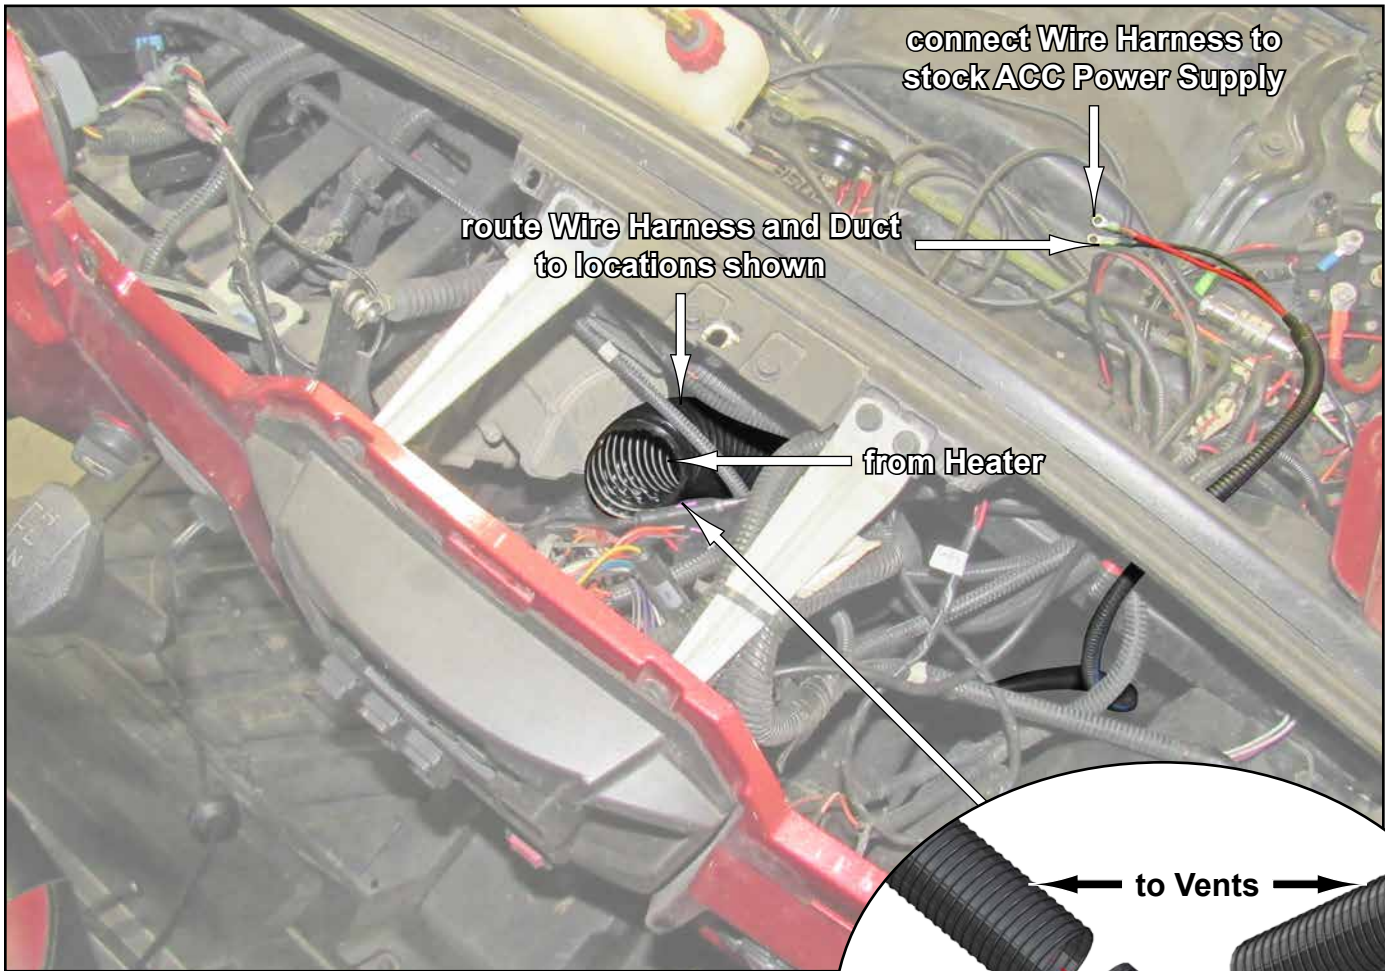


cut (2) pieces of Duct to 23-5/8" and install to Y Fitting; secure with Wire Ties




### Bracket Template

- Follow profile and cut template.
- Place in Pocket as shown on page 14.
- Mark centers and use provided  $\text{\O}1/4$ " Drill Bit to make holes.

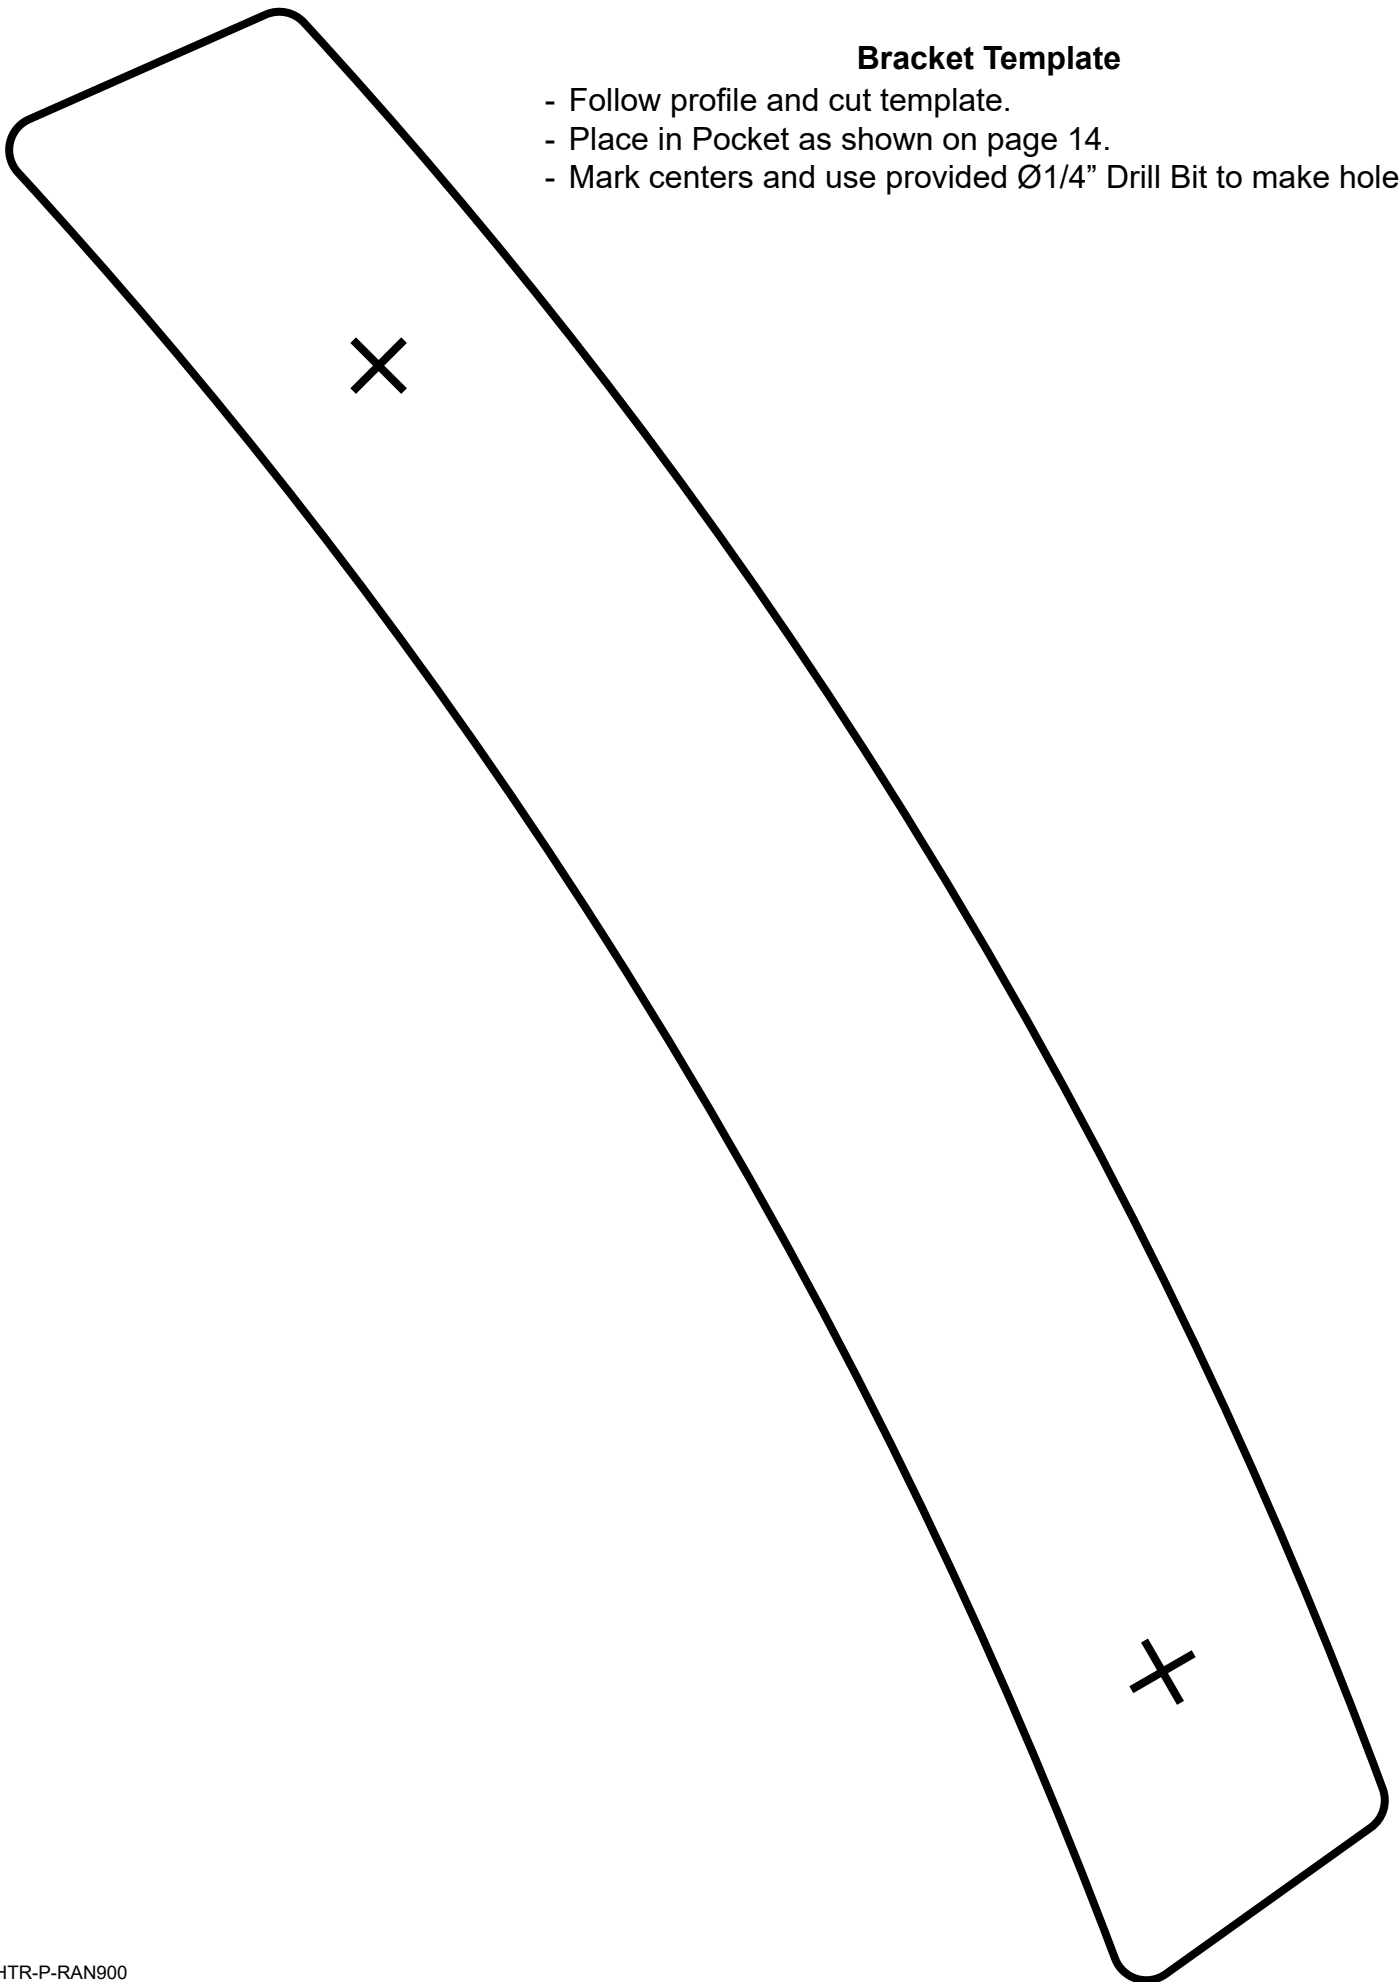

***this page intentionally blank***



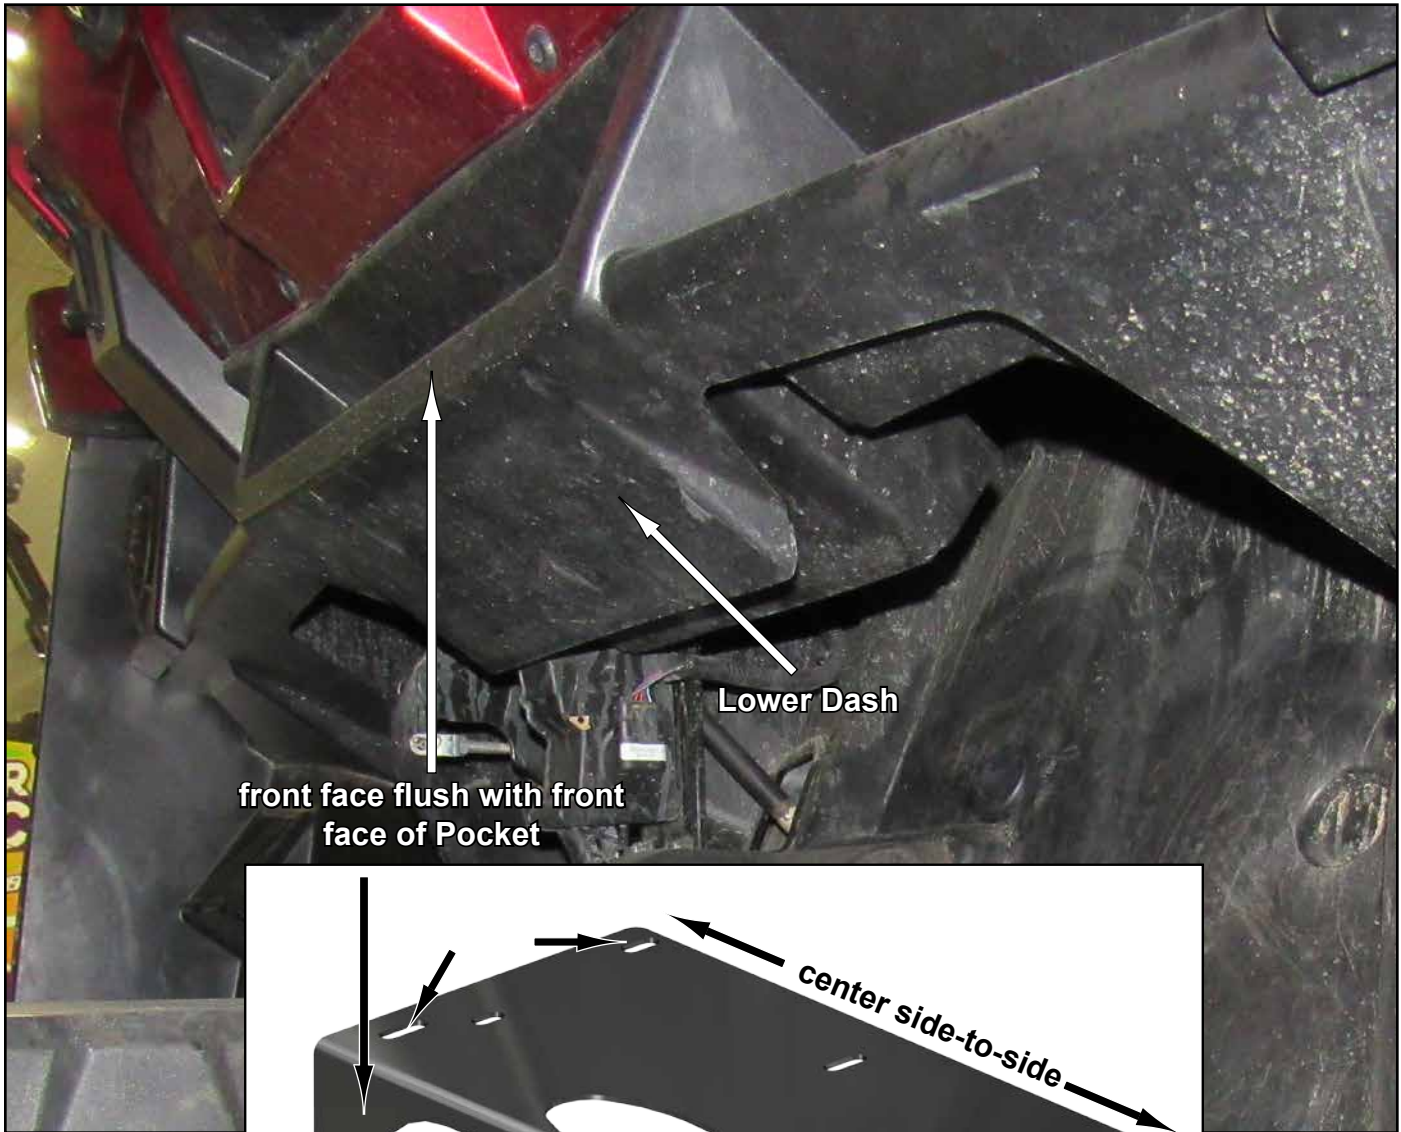




- Place Mounting Bracket against Lower Dash shown.
- Mark center of (4) slots shown.
- Use provided  $\text{Ø}1/4$ " Drill Bit to make holes.




Bracket Template




- Install Left and Right Mounting Brackets.
- Secure with hardware shown.

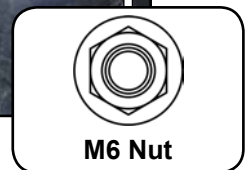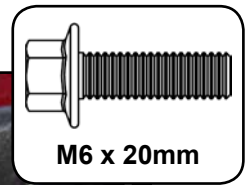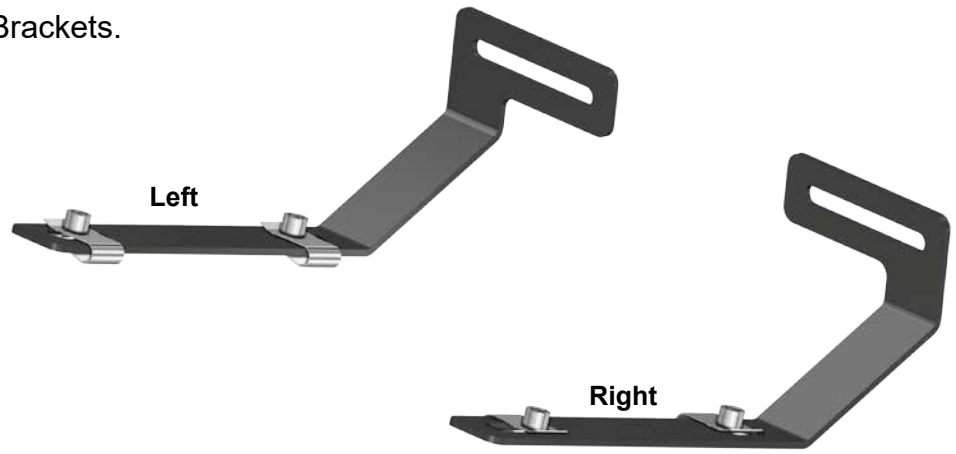




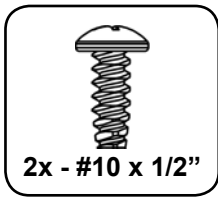

install Bracket to Heater with hardware shown

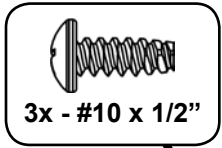

insert Elbow into Defrost Bracket

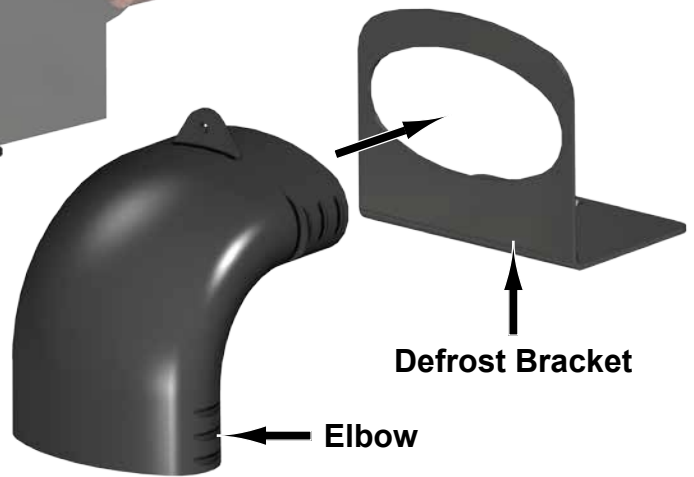

insert Elbow into opening in Heater

secure Defrost Bracket with hardware shown





cut Duct to 32-1/4" and install to Elbow and secure with wire-tie





- Make connections and secure Bracket to Mounting Brackets with hardware shown.




- Raise front of vehicle and place on jack stands.
- Remove Lower Radiator Hose and drain coolant.


To prevent stock Radiator Hoses from being cut short, use provided Adapters as templates.

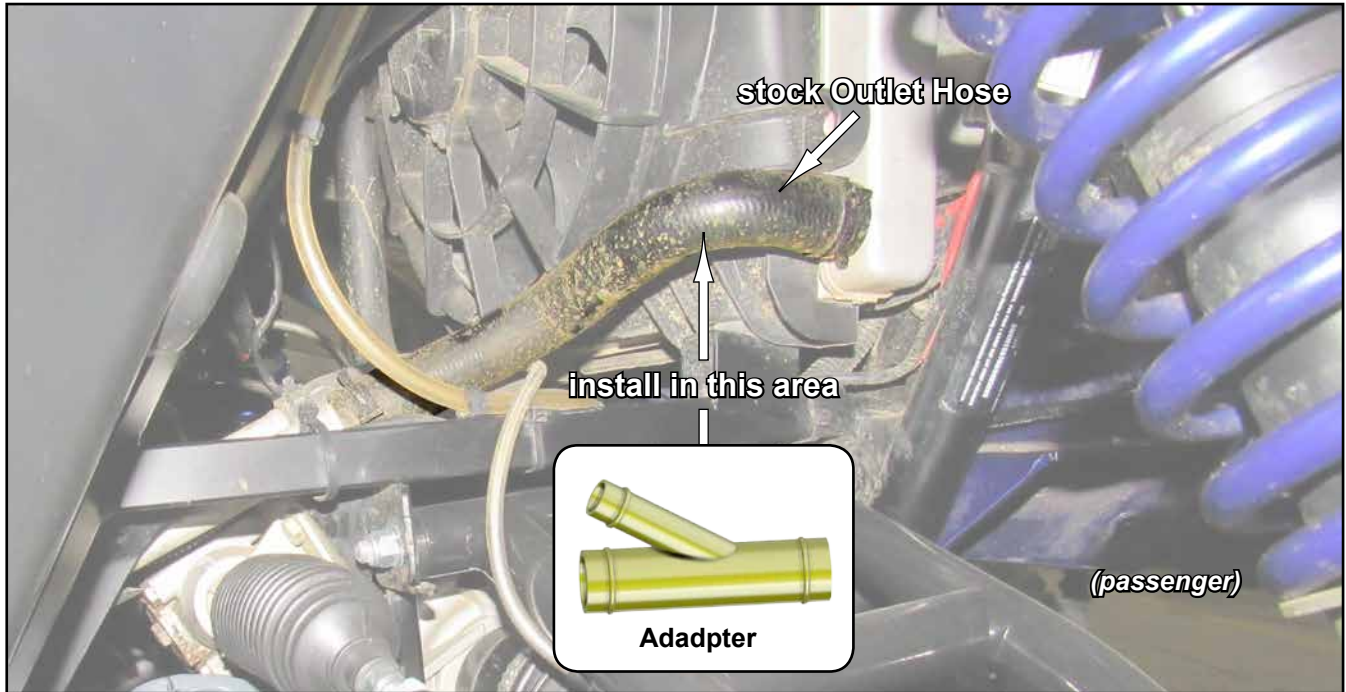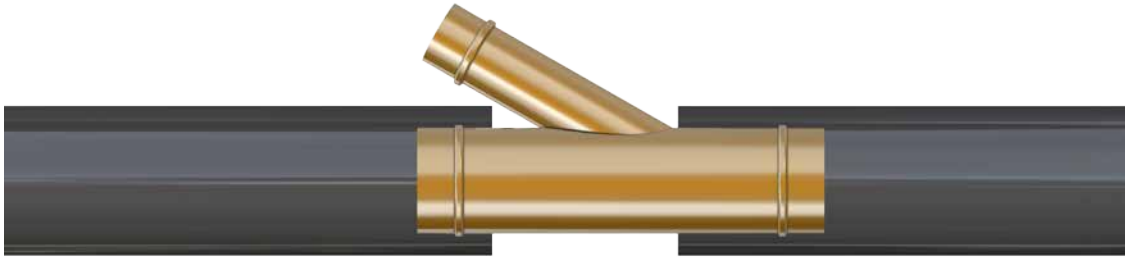


- Mark locations to be cut.
- Cut and install Adapter.
- Secure with provided Large Clamps.

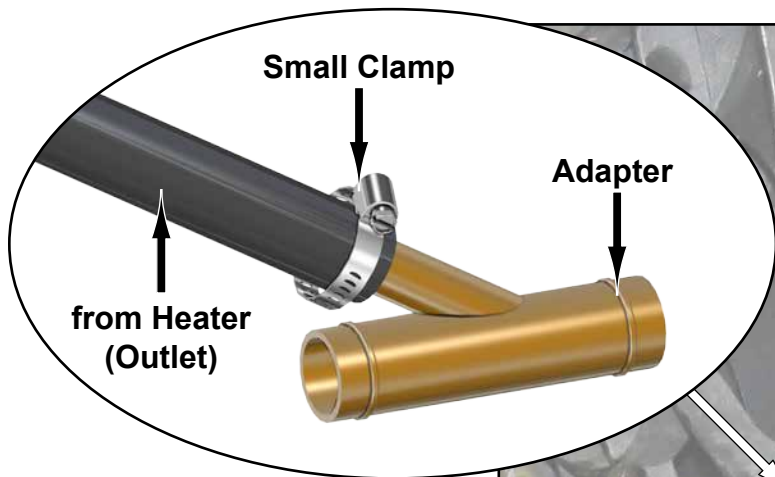

- Connect Tube (that was routed through Tunnel) from Heater to Adapter and secure with Small Clamp.

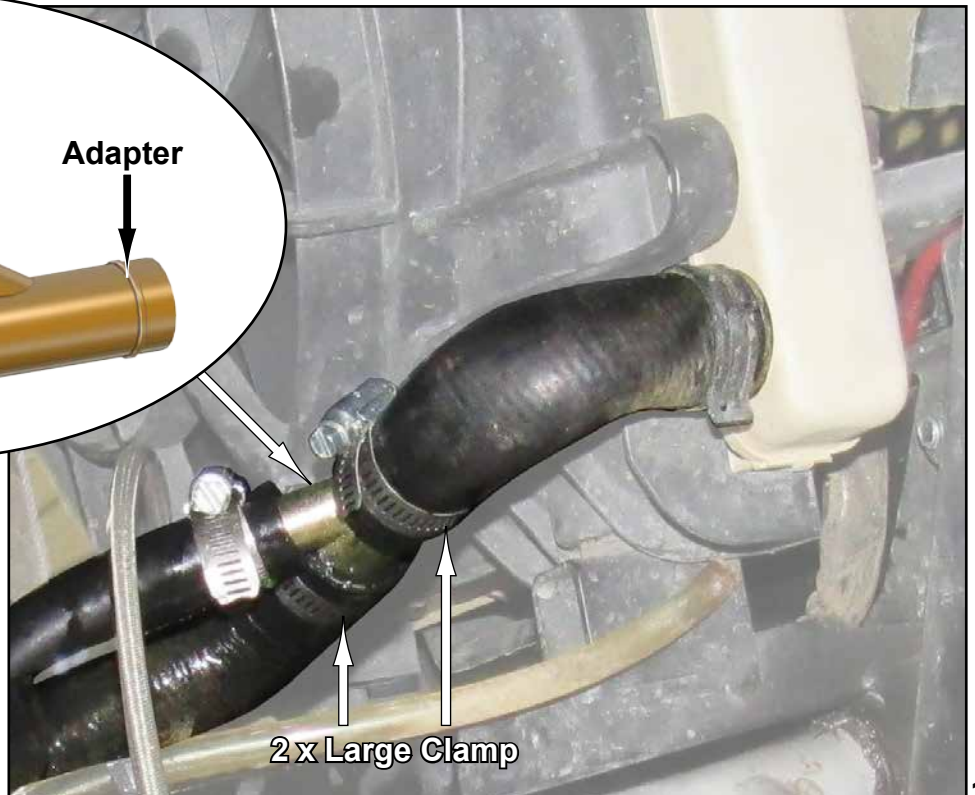




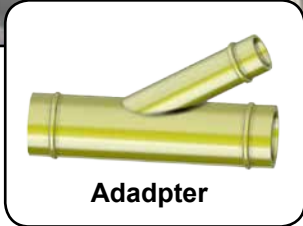

- Mark locations to be cut.
- Cut and install Adapter.
- Secure with provided Large Clamps.

- Connect Tube (that was routed through Firewall) from Heater to Adapter and secure with Small Clamp.

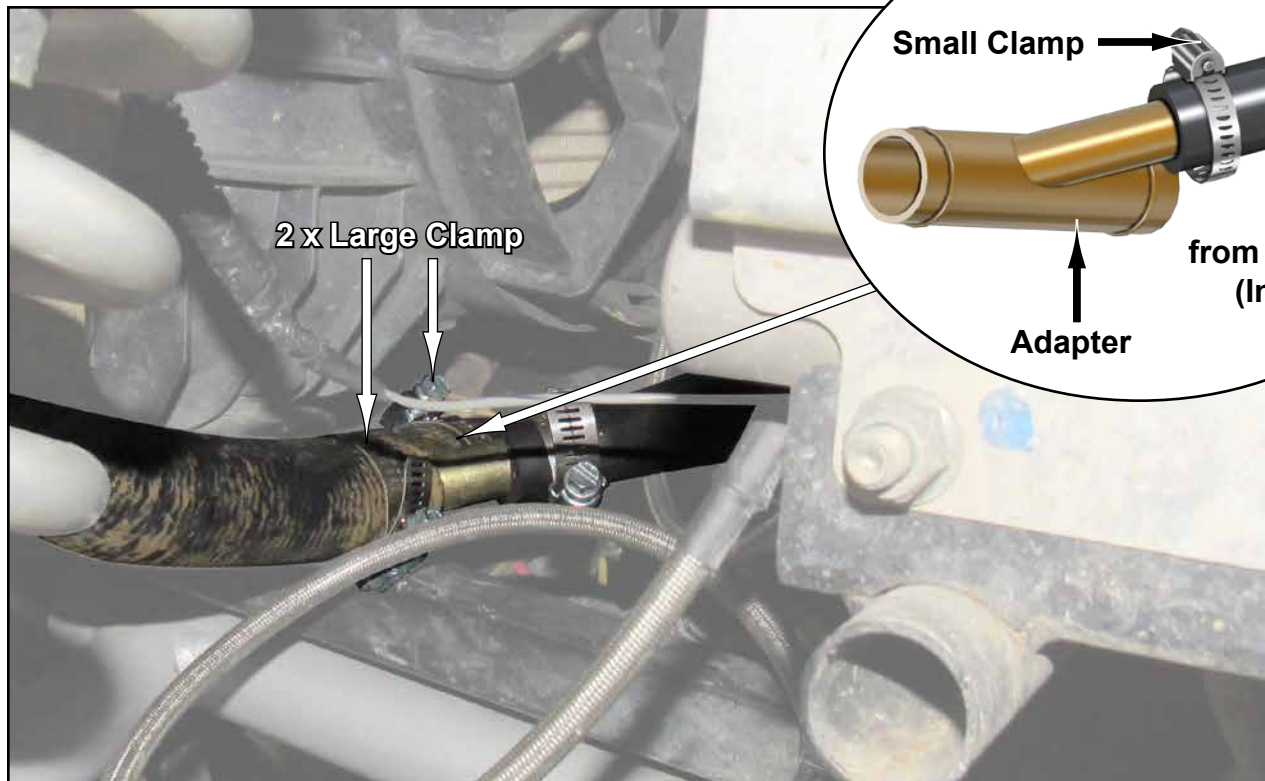



- Place machine back on ground.
- Fill coolant level to manufacturers recommended setting.
- Start machine and run at 3000 RPM until engine is hot.
- Use provided Hose Pliers and pinch off Inlet Hose as shown below.



- Remove Hose Pliers after Radiator Fan turns ON.
- After Radiator Fan turns OFF, pinch Inlet Hose again and remove after Radiator Fan turns ON.
- Turn machine off and let engine completely cool; may take several hours.
- Check Coolant Level in Radiator and Reservoir; adjust as needed.
- Start machine and repeat "pinch" steps again.