



# APPLIANCES FOR LIVING

Congratulations, you are now the proud owner of an ARTUSI cooking appliance. Thank you for purchasing ARTUSI and welcome to the ARTUSI Family.

This instruction manual has been specially created to inform you of the full range of features your ARTUSI appliance has to offer and serves as an introduction to getting the very best out of your ARTUSI appliance.

We present detailed information on each of the features your ARTUSI appliance consists of. Once you have read this section you will be able to choose the most appropriate settings for your appliance when cooking different types of food.

We ask you to read the instructions in this booklet very carefully as this will allow you to get the best results from using your appliance. KEEP THE DOCUMENTATION OF THIS PRODUCT FOR FUTURE REFERENCE.

TO REGISTER YOUR PRODUCT WITH ARTUSI, PLEASE FILL OUT THE WARRANTY CARD AT THE END OF THIS BOOKLET AND POST IT TO: **REPLY PAID 83617**  
**LEICHHARDT NSW 2040**

Dear Artusi Customer, please read this user manual carefully before using the product and, keep it permanently at your disposal.

Note: This user manual is prepared for more than one model. Some of the features specified in this Manual may not be available on your appliance.

All our appliances are only for domestic use, not for commercial use. Products marked with (\*) are optional.

“THIS APPLIANCE SHALL BE INSTALLED IN ACCORDANCE WITH THE REGULATIONS FORCE AND ONLY USED IN A WELL VENTILATED SPACE. READ THE INSTRUCTIONS BEFORE INSTALLING OR USING THIS APPLIANCE”

“Conforms with the WEEE Regulations.”

## Welcome to the world of simple handling and no worries

Thank you for choosing us . This manual contains all the information you will need to safely and correctly use your Under Zero Bar Fridge . Please read all the instructions prior to using the appliance, and keep this manual in a secure place for future reference.

Do not remove the attached adhesive identification label containing code, model number, manufacturer and other information from the Under Zero Bar Fridge .

## Contents

Safety .....	2
Description .....	5
Installation .....	6
How to use .....	8
Cleaning and maintenance .....	11
Troubleshooting .....	13

## Safety



The Under Zero Bar Fridge you have just purchased may be slightly different from the one shown in the drawings in this manual, but its overall design is the same.

Please read the information referring to its operation. This Under Zero Bar Fridge is intended for domestic use only.

The plug on the Under Zero Bar Fridge you have purchased may be different from the one shown in the manual, as the plug that accompanies the product meets your country's electrical specifications.

Problem	Cause	Solution
<b>Vibrations</b>	<ul style="list-style-type: none"> <li>The appliance is not level</li> </ul>	<ul style="list-style-type: none"> <li>Certify that the Under Zero Bar Fridge is level with 2 feet flat on the floor.</li> </ul>
<b>Noises</b>	<ul style="list-style-type: none"> <li>Squeak / bubbles.</li> <li>Crunches.</li> <li>The appliance is not level.</li> </ul>	<ul style="list-style-type: none"> <li>You can hear a squeak from the flow of refrigerant in the system. That is normal.</li> <li>Contraction and expansion of the internal walls can generate small crunches. That is normal.</li> <li>Certify that the Under Zero Bar Fridge is level with 2 feet flat on the floor.</li> </ul>
<b>Condensation on the front of the door</b>	<ul style="list-style-type: none"> <li>The environment where the beer cave is located is with a high humidity (over 70%).</li> </ul>	<ul style="list-style-type: none"> <li>Wipe the condensation with a clean, dry cloth. If possible, change the device to a less humid and ventilated place.</li> </ul>

 **Attention**

Check the voltage (V) correct mains before turning on the appliance.  
If necessary, use a transformer with no power of less than 1000 VA.

- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, except those recommended by the manufacturer.
- **WARNING:** Do not damage the cooling circuit (evaporator, compressor and condenser).
- **WARNING:** Do not use electrical appliances inside the appliance food storage compartments, unless they are of the type recommended by the manufacturer.
- **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **WARNING:** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not store explosive substances, such as aerosol cans with a flammable propellant in this appliance.
- Do not use sharp, pointed objects to remove ice or to separate frozen food inside the appliance, it can cause damage to the evaporator and cause serious damage to the appliance.
- Do not use materials like sprays to effect or accelerate the thaw, as such materials may contain harmful substances that can react and damage the plastic parts.
- Do not use steam cleaners for cleaning. Steam pressure may cause moisture on electrical components, causing a short circuit.
- **The environment and personal safety should be considered when the appliance disposal. Make sure the appliance is transported to an appropriate place for disposal and safe recycling. DO NOT LEAVE appliance abandoned in landfills or waste land, as the foam used in insulation and the cooling gas contained in this appliance are flammable. Follow the instructions:**

- Disconnect the unit from the mains.
- Cut the power cord at the point where it leaves the Under Zero Bar Fridge and destroy the plug or make it unusable to prevent misuse and do not pose a danger.
- Remove the doors and shelves so that children to rise and enter into the cabinet, do not catch and have no risk of suffocation.
- Make sure that the appliance presents no danger to children while being stored temporarily for disposal.
- Before and during transport to disposal, ensure that the pipe cooling system is not damaged.
- Cooling gas leakage can cause damage and fire hazard.
- This appliance contains polyurethane foam insulation formed by flammable gas bubbles. Avoid any security threat, following the proper disposal procedures above.
- Make sure that the appliance is disposed of in accordance with the guidelines and appropriate place for appliances containing hydrocarbon cooling gas (isobutane: Formula usual name: R600a).
  - **This appliance is intended for household and similar applications such as: - use of the kitchen staff group in shops, offices and other working places:**
    - farm houses and by clients in hotels, motels and other places type residential;
    - half-board places;
    - catering and similar applications not intended for retail.

## Troubleshooting

### Consumer Assistance

If your Under Zero Bar Fridge shows any malfunction, check the possible causes and solutions. If the corrections suggested are not sufficient, contact an Authorized Service.

Problem	Cause	Solution
<b>Beer cooler does not work</b>	<ul style="list-style-type: none"> <li>• Switch is off</li> <li>• The cable is not properly plugged.</li> <li>• Do not turn on after a rapid drop of electric power.</li> <li>• Panel locked.</li> <li>• Panel off.</li> </ul>	<ul style="list-style-type: none"> <li>• Turn on the switch. The beer cooler must be connected to an exclusive outlet.</li> <li>• Certify that the cable was properly attached.</li> <li>• Wait 5 minutes before turning the Under Zero Bar Fridge after the return of power.</li> <li>• Check how to unlock the panel in this manual.</li> <li>• Check the power saving mode. If the panel still does not work, unplug it for 20 seconds and plug it in again.</li> </ul>
<b>Does not cool enough / compressor turns on and off frequently.</b>	<ul style="list-style-type: none"> <li>• Wrong temperature setting.</li> <li>• High ambient temperature.</li> <li>• The door is opened frequently.</li> <li>• The door was not closed completely.</li> <li>• Were not respected the minimum distances for installation.</li> <li>• The rubber door is not sealed properly.</li> </ul>	<ul style="list-style-type: none"> <li>• Set the temperature as indicated in this manual.</li> <li>• When the ambient temperature is very high the Under Zero Bar Fridge needs to be adjusted to a lower temperature.</li> <li>• Open the Under Zero Bar Fridge door only when necessary.</li> <li>• Certify that the door was completely closed.</li> <li>• You must leave a space of 12 cm on each side, on top and in the back to ensure air circulation.</li> <li>• Contact the Authorized Service.</li> </ul>
<b>The door does not close</b>	<ul style="list-style-type: none"> <li>• The appliance is not level.</li> <li>• The rubber door is dirty.</li> <li>• The trays are misplaced.</li> </ul>	<ul style="list-style-type: none"> <li>• Certify that the Under Zero Bar Fridge is level with 2 feet flat on the floor.</li> <li>• Clean the rubber door.</li> <li>• Certify that the trays are well embedded in the guides.</li> </ul>

## Product description

### Holidays period

Short holidays: Let Under Zero Bar Fridge working during vacations of less than three weeks.

Long holidays: If the appliance will not be used for a few months, remove all items from inside the Under Zero Bar Fridge and disconnect the power cord. Clean and dry all internal surfaces. To prevent the formation of odors and mold, leave the door slightly open.

### Transporting the Under Zero Bar Fridge

- Remove all items from inside the Under Zero Bar Fridge .
- Secure the shelves with tape on the inside of the Under Zero Bar Fridge .
- Turn the leveling feet to the minimum position to prevent them from being damaged.
- Secure the door to keep it closed.
- Make sure that the Under Zero Bar Fridge will be upright during transport. Protect the exterior surfaces with a cover or some similar coverage.

### Tips for saving energy

- The Under Zero Bar Fridge must be installed in the coldest part of the room, away from heat sources and out of direct sunlight.
- Minimize the number of times that the Under Zero Bar Fridge door is open. Each door opening, part of the inner cold air is lost to the environment and the system uses power to reach the set temperature again.
- For the same reason, when you open the door Under Zero Bar Fridge, try not to leave it open unnecessarily.



### Parts names

- 1 Control panel
- 2 Door
- 3 Shelves
- 4 Leveling feet

 
## Installation

Artusi has a highly qualified Authorized Service Network to install your Under Zero Bar Fridge. For this service a setup fee will be charged. Consumer responsibility are site preparation and materials for installation (ex .: masonry, electricity, socket, circuit breaker, ground, etc.).

### Installation site conditions

Place the Under Zero Bar Fridge on a flat floor and sturdy enough to support the weight of the fully loaded machine. To flatten your Under Zero Bar Fridge, adjust the front leveling feet, located on the bottom of the unit.

Leave a space of 10 cm on the back, and 3cm on the top and side of the device to permit the correct circulation of air, ensuring the cooling of the compressor.

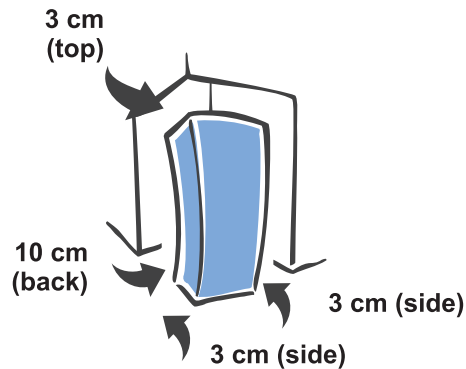

### Attention

This Under Zero Bar Fridge cannot be inlaid.

## Cleaning and maintenance

To avoid electrical shock, remove the plug from the outlet before performing any cleaning or maintenance service.

Never clean your Under Zero Bar Fridge with cleaning agents such as alcohol, kerosene, gasoline, bleach, paint thinner, solvents, acids, vinegars, abrasive or other chemicals not recommended in this manual.

### General cleaning

For light cleaning, e.g., pass a cloth on the panel, lock the control panel to prevent any function is activated undesirably.

Clean the inside surfaces with a 250 ml solution of warm water and 2 tablespoons of sodium bicarbonate.

Wash the shelves with water and mild detergent.

Clean the outside of the Under Zero Bar Fridge with warm water and mild detergent. Rinse well and dry with a clean soft cloth.

Remove the excess water from the sponge or cloth when cleaning the areas near the control panel or any electrical part.

### Replacing the lamp

The Under Zero Bar Fridge has a modern interior lighting system with LED's, i.e., a white "lamp" light is formed with a set of small light emitters of solid state (electronic components).

Replacing these lamps can only be done by a technician.

### Lack of Electricity

Most of the time the electric power failure is corrected within minutes and should not affect the internal temperature of your Under Zero Bar Fridge as long as you avoid opening the appliance door.

If there is a power failure for a long period, you need to take some precautions to protect stored items, as described in "holiday period".

After 6 hours, an alarm will sound beeping 3 times and the Party button flashes 3 times the control panel and off, indicating that the Party function is automatically canceled. Then, the Under Zero Bar Fridge back to operate in the previously set temperature.

To cancel the Party function before 6 hours, press the Party button again. Party mode and Turbo function cannot be connected simultaneously.

### **Door open alarm**

When Under Zero Bar Fridge door is open, the indicator lights on the control panel. If the door is left open for more than 4 minutes, the door open indicator will begin to flash and the device will beep. To stop the alarm, close the door.

### **Celsius and Fahrenheit Alternation**

Press and hold the + and - buttons simultaneously for 2 seconds to alternate between Celsius and Fahrenheit display.

 
Install the Under Zero Bar Fridge in a place where there is no direct sunlight and away from heat sources (stove, oven, heater, etc.).

The sun's rays can affect the machine's finishing and hot surfaces can cause the increase in electricity consumption.

Rooms with very low temperatures can also affect the machine's performance.

Avoid installing the Under Zero Bar Fridge in humid places to prevent the formation of mold and fungi.

After moving the system to the installation site, wait at least two hours before you plug it into the outlet so that the engine oil (compressor) to stabilize avoiding damage to the unit.

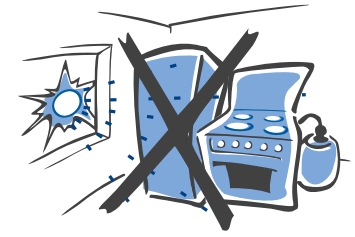


### **Door reversal**

Due to the electronic control panel is located on the door, you cannot perform the reverse side opening the door.


 
## How to use

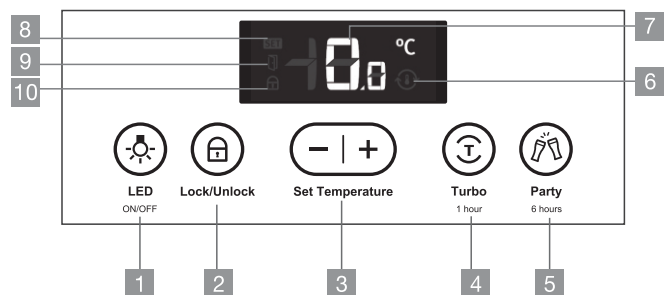

- |                                  |                                  |
|----------------------------------|----------------------------------|
| 1 Light Button                   | 6 Temperature Reaching Indicator |
| 2 Lock Panel Button              | 7 Temperature Indicator          |
| 3 Temperature Adjustment Buttons | 8 Temperature Setting Indicator  |
| 4 Turbo Button                   | 9 Open Door Indicator            |
| 5 Party Button                   | 10 Locked Panel Indicator        |

### Operating the Under Zero Bar Fridge

When the power cord is plugged in, the Under Zero Bar Fridge beeps and all the display lights up for 1 second.

The preset temperature is 10°C. Once the device is plugged in, the indicator of reaching temperature light on the control panel and stays on until the internal temperature of Under Zero Bar Fridge reaches the set temperature.

### Temperature adjustment

Press “+” or “-” button to select the desired temperature. Each key press increases or decreases the temperature by 1 °C. To increase or decrease the temperature more quickly, keep your finger on one of the buttons. The setting indicator stays on the panel while you are programming the temperature.

The temperature to be programmed is -5 °C and the maximum temperature is 22 °C.

After 5 seconds without touching the keys, programming is completed, the setting indicator is off, confirming that the programming was accepted.

Every time the internal temperature of Under Zero Bar Fridge is different from the set temperature, the Temperature Reaching Indicator will light up on the panel, stating that the appliance is working to reach the set temperature. This indicator will turn off once the set temperature is reached.

### Indoor lighting

Whenever the Under Zero Bar Fridge door is opened, the interior light comes on.

Touch the Light button to light internal lamp with the Under Zero Bar Fridge door closed.

The key remains on the panel.

To turn off, touch the Light button again.

### How to lock / unlock the control panel

To lock the control panel and prevent the programming to be undone, keep your finger on the Lock button for 2 seconds.

The device will beep, the control panel buttons will be locked and the icon will light up on the display. To unlock the panel, touch the Lock key again for 2 seconds and the icon will delete the display.

### Turbo Function

This feature allows faster cooling drinks. The maximum time of this function is 1 hour.

To activate, press the Turbo button. The temperature indicator displays -5 °C and the Temperature Reaching Indicator will remain on the panel for one hour even if the temperature of -5° C has been achieved.

After one hour, an alarm will sound beeping 3 times and the Turbo button flashes 3 times the control panel and off, indicating that the Turbo function is automatically canceled. Then, the Under Zero Bar Fridge back to operate in the previously set temperature.

To cancel the Turbo function before one hour, press the Turbo button again.

The Turbo function and Party mode cannot be connected simultaneously

### Party mode

The party function, when activated, keeps the maximum cooling capacity for 6 hours, even with several door openings.

To activate the function, press the Party button. The temperature indicator displays -5°C and the Temperature Reaching Indicator will remain on the panel for 6 hours. If the temperature achieved -5°C before 6 hours, the thermal cycling indicator will turn off and stay party mode.



Worldwide Appliances Pty Limited

A.B.N. 45868077422

Office:

48-50 Moore Street, Leichhardt N.S.W 2040

Post:

Locked Bag 3000, Annandale, N.S.W 2038

P: 1300 694 583

#### WARRANTY REGISTRATION

Your ongoing satisfaction with your artusi product is important to us. We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the artusi product purchased by you.

#### PRIVACY

Worldwide Appliances respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the Worldwide Appliances Privacy Policy is available at [www.artusi.com.au](http://www.artusi.com.au). Worldwide Appliances will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless required by:

1. law;
2. any Worldwide Appliances related company;
3. any service provider which provide services to artusi or assist artusi in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is

to keep a record of the artusi product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your artusi product. Worldwide Appliances may contact you at any one or more of the address, email address or telephone numbers set out in the Warranty Registration

Card. Please contact artusi on 1300 694 583 should you not wish to be contacted by Worldwide Appliances.

#### WARRANTY

##### 1. Warranty

Worldwide Appliances warrants that each artusi product will remain, for a period of either 12 months or 24 months of warranty. All Warranties are valid from the original date of purchase, And warranty claims must be accompanied by the proof of purchase.

24 months warranty products:

All Built-in Appliances – Limited to Ovens, Gas, Induction and Electric Cooktops, and All Rangehoods

Freestanding Cookers - Gas and Electric Models (900mm Width)

Dishwashers - Freestanding, Fully Integrated, Semi Integrated and built-in

12 months warranty products:

Freestanding Cookers - Gas and Electric Models in 50cm, 54cm and 60cm Widths

Portable Appliances\* – Benchtop Models and Portable Gas Models

##### 2. What is not Covered by the Warranty.

The Warranty does not apply if an artusi product is defective by a factor other than a defect arising in the manufacture of the artusi product, including but not limited to:

- (a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);
- (b) use for purpose for which the artusi product was not sold or designed;
- (c) use or installation which is not in accordance with any specified instructions for use or installation;
- (d) use or operation after a defect has occurred or been discovered;
- (e) damage through freight, transportation or

handling in transit (other than when Worldwide Appliances is responsible);

(f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control or Worldwide Appliances;

(g) repair, modification or tampering by the purchaser or any person other than Worldwide Appliances, an employee of Worldwide Appliances or an authorised artusi service contractor\*;

(h) use of parts, components or accessories which have not been supplied or specifically approved by artusi.

(i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the artusi product handbook provided to the purchaser upon purchase of the artusi product;

(j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or

(k) damages, dents or other cosmetic imperfections not affecting the performance of the artusi in respect of an artusi product purchased as a "factory second" or from display. The Warranty does not extend to light globes used in artusi products.

##### 3. Domestic Use

Each artusi product is made for domestic use. This Warranty may not extend to artusi products used for commercial purposes.

##### 4. Time for Claim under the Warranty

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

***Continued over...***

### 5. Proof of Purchase

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an artusi product.

### 6. Claiming under the Warranty

Customers will bear the cost of claiming under this Warranty unless Worldwide Appliances determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to Worldwide Appliances at the address on the Warranty Registration Card.

### 7. Statutory Rights

(a) These terms and conditions do not affect your statutory rights.

(b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:

- (i) contravene the law of the relevant jurisdiction; or
- (ii) cause any part of the Warranty to be void.

(c) Worldwide Appliances excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the artusi product) and (other than expressly provided for in these terms and conditions) subject to all terms,

conditions and warranties implied by custom, the general law, the Act or other statute.

(d) The liability of Worldwide Appliances to you for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of Worldwide Appliances to:

- (i) replacing or repairing the defective part of the artusi product;
- (ii) paying the cost of replacing or repairing the defective part of the artusi product;
- (iii) replacing the artusi product; or
- (iv) paying the cost of replacing the artusi product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a

major failure.

### 8. Defects

Any part of an artusi product deemed to be defective and replaced by Worldwide Appliances is the property of Worldwide Appliances. Worldwide Appliances reserves the right to inspect and test artusi products in order to determine the extent of any defect and the validity of a claim under the Warranty.

\*To locate your closest artusi authorised service agent please contact us on 1300 652 100 or visit [www.artusi.com.au](http://www.artusi.com.au)

ALL SERVICE CALLS MUST BE BOOKED THROUGH AN AUTHORISED DEALER OR WARRANTY DEPARTMENT ON 1300 652 100 OR [stokesaps.com.au/artusi-service](http://stokesaps.com.au/artusi-service) 01032014



Warranty Card tear off

### WARRANTY REGISTRATION CARD 01052013

Please complete and send to ARTUSI at: REPLY PAID 83617  
LEICHHARDT NSW 2040

Last Name:		First Name:	
Address:			
State:	Postcode:	Email:	
Home Phone:		Mobile:	
Purchase Date:    /    /		(Please attach proof of purchase to validate warranty)	

MODEL NUMBER	SERIAL NUMBER <small>(if you cannot locate the serial number please call ARTUSI on 1300 694 583)</small>
1	
2	
3	
4	





#### DISCLAIMER

Worldwide Appliances PTY LTD, trading as ARTUSI, is continually seeking ways to improve the design specifications, aesthetics and production techniques of its products. As a result alterations to our products and designs take place continually. Whilst every effort is made to produce information and literature that is up to date, this brochure should not be regarded as an infallible guide to the current specifications, nor does it constitute an offer for the sale of any particular product. Product dimensions indicated in our literature is indicative only. Actual product only should be used to define dimension cutouts. Distributors, and retailers are not agents of ARTUSI and are not authorised to bind ARTUSI by any express or implied undertaking or representation.

ARTUSI OFFICES ARE OPEN DAILY FROM 9AM-5PM AND SATURDAYS 10AM-4PM

NSW & ACT (HEAD OFFICE)  
48-50 MOORE STREET  
LEICHHARDT  
F 02 8569 4699

VIC, TAS & SA  
1211 TOORAK ROAD  
CAMBERWELL  
F 03 9809 2155

QLD  
1/42 CAVENDISH ROAD  
COORPAROO  
F 07 3397 0850

WA & NT  
UNIT 10/55 HOWE STREET  
OSBORNE PARK  
F 08 9201 9188

NZ  
PO BOX 11160  
SOCKBURN CHRISTCHURCH  
F 03 344 5906

**P: 1300 649 583**

**ARTUSI.COM.AU**