
# EC25L Cordless Vacuum Cleaner User manual

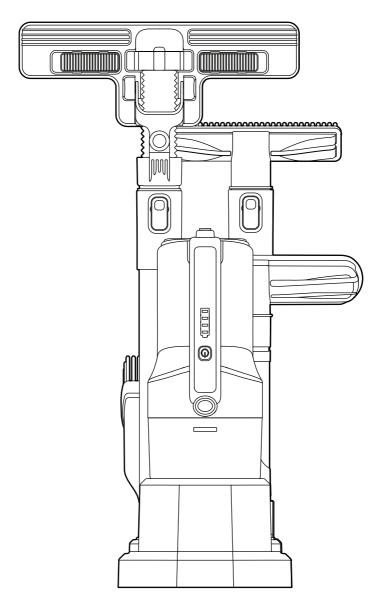








Thank you for purchasing EC25L Pro-Cyclone<sup>TM</sup> System vacuum cleaner. This user manual will walk you through the operational instructions, safety precautions and any other important information that you will need to know.


### **Product View**

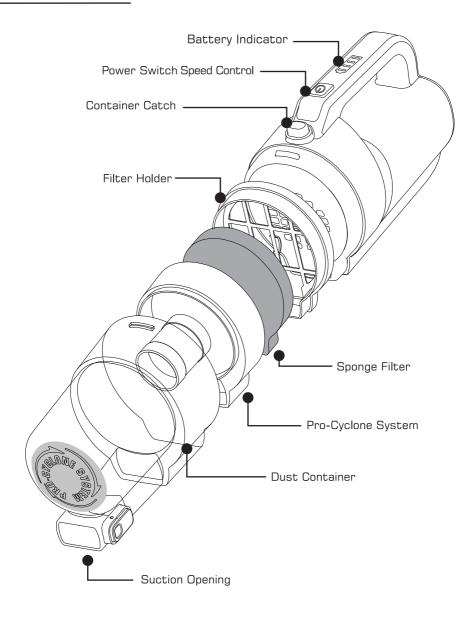



#### Accessories

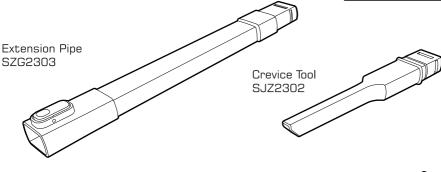


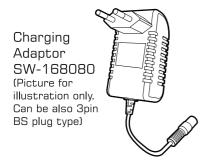


 

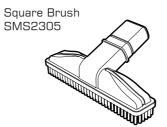

 

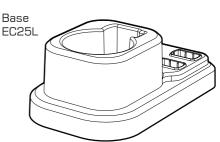

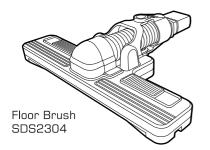

### Specifications

Model: EC25L

Item: Handheld Vacuum Cleaner


Voltage: DC14.8V Max power: 60/120W

Max Vacuum Degree: 3.0/5.5kPa Lithium Ion Battery: 2000mAh

### **Basic Operation**

Attach the appropriate tools to the appliance, then press to on or off.

Press once - Low Power Press twice - Max Power Press again - Switch Off

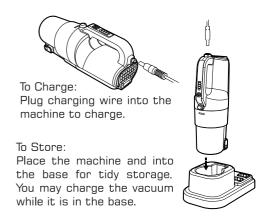


Please switch off the appliances before changing accessories or clearing dirt.

When the light indicator of the charging adaptor changes from red to green, the vacuum has been fully charged.


In order to save power and extend the lifespan of the adaptor, please cut the power from the adaptor after charging.


### Cleaning Tools Assembly

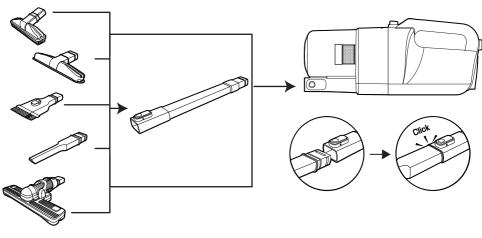


### Floor Brush Variation



 

 


 

Interchangeable between Carpet Brush for carpets and Bristle Brush for hard floorings.

### Cleaning Up


Please make sure the appliance is switched off and unplugged before cleaning up.

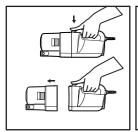



 





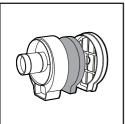







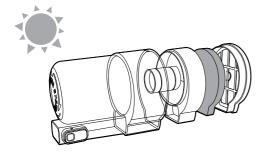

Dry thoroughly before use. (Odour may occur if used with damped filter)

Cleaning tools can be wiped and cleaned by wet cloth but no immersing in water as it may cause damage.

Cleaning tools must be completely dry before putting into operation.



Keep this away from any liquid.

Do not operate appliance with wet hands.

In view of personal safety, wipe only with dry cloth.

Do not use corrosive liquid or cleaning agent to wipe or clean machine and accessories.

## **△ WARNING** △

IMPORTANT: READ CAREFULLY BEFORE ASSEMBLY AND USE. THE PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. IF USED COMMERCIALLY WARRANTY IS VOID.

#### IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

### Warning: To reduce the risk of fire, electric shock or injury:

- Fully assemble before operating.
- · Operate cleaner only at electrical data specified on data plate on the back of cleaner.
- Do not use on wet surfaces. Do not expose to rain. Store indoors.
- This appliance is not intended for use by persons (including children) who is physically, sensory
  or mentally challenged, or lack of experience and knowledge, unless they have been given
  supervision or instruction concerning use of the appliance by a person responsible for their
  safety.
- This appliance is not designed for children. Do not allow to be used as a toy. Close supervision is necessary when used near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this manual. Use only manufacturer's recommended attachments and products.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior using.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before cleaning or servicing.
- Do not handle plug or appliance with wet hands.
- Do not put any objects into openings. Do not use with any openings blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- · Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or fine wood dust or in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters and/or dust canister in place.
- The dust filter must be cleaned periodically.
- If the supplied cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The cord could be electrically live.
- Do not use to suck up water and any other liquid.
- Do not immerse in water when cleaning.
- The cord should be checked regularly and must not be used if damaged.
- Do not use outdoors.

#### WASH HANDS AFTER USING

# **CAUTION: TO REDUCE THE RISK OF DAMAGE:**

- Avoid picking up hard, sharp objects with this product, as they may cause damage.
- Store appropriately indoors in a dry place. Do not expose machine to freezing temperatures.
- Put the product away after use to prevent tripping accidents.
- When cleaning the car, vehicle should be located in a garage.

#### SAVE THESE INSTRUCTIONS



When there is a decrease in suction, loss of suction or absent of suction, switch off the machine and proceed as follows:

- 1. Empty dust canister.
- 2. Check suction opening, dust canister inlet and filter. Clear any obstructions.
- 3. Wash sponge filter.

If there is no obvious improvement after following the above steps, your cleaner needs servicing.