



HOP HOUSE INSTRUCTIONS & SAFETY RULES

HOP HOUSE INSTRUCTIONS & SAFETY RULES

PRODUCT INFO

Product	Hop House Small	Hop House Large	Hop House Slide
Product Dimensions	6' x 8.7' <i>(6' x 6' netted area)</i>	8' x 11' <i>(8' x 11' netted area)</i>	10.5' x 9.2'
Product Height	7'	7.5'	6.8'
Maximum Number of Children	2	3	3
Total Weight Limit	180 lbs	240 lbs	300 lbs
Individual Weight Limits	50 lbs	70 lbs	80 lbs
Maximum Height of Individual	5'	6'	6'
Recommended Ages	2-8	3-8	3-8

- No wrestling, rough play, tumbling, or flipping.
- No head first sliding.
- No shoes, no glasses, no jewelry or other sharp objects.
- No hands or feet on net.
- No jumping or bouncing on the slide structure.
- Do not use or leave out in rain, wind, or extreme weather.
- Do not allow children to touch blower or electrical cord.
- Prevent choking: do not eat or drink in play area.
- Adult supervision required at all times, do not leave children unattended.
- This product must be effectively anchored to the ground using provided stakes when used outdoors and/or with proper anchoring equipment when used indoors.

WARNING

- Failure to follow these instructions could result in serious injury or death.
- Read all instructions before assembling and using this unit.
- Adult set up only.

Questions about the Hop House? Email us at support@rooandyou.ca

HOP HOUSE INSTRUCTIONS & SAFETY RULES

OPERATING RULES

- Adult supervision is required at all times, including set up and take downs.
- Ensure proper set up prior to use. Adult set up only.
- Do not place product near potential fire hazard areas.
- To avoid injury, ensure that the maximum occupancy is observed and controlled.
- Keep Children away from the blower at all times.
- Check product periodically for damage or potential hazards.
- When moving the product, do not drag it across any surface.
- Keep pets away.
- Do not use product in rain, windy conditions, or extreme weather. CAUTION: Sudden gusts of wind may lift the product off the ground.
- Go down the slide feet first only. No more than 2 riders at a time. No climbing up the slide the wrong way, no jumping onto the slide area.
- Intended for domestic family use only. Not for use in public areas or rentals.
- Instruct children on proper use of this product. Do not use in a manner other than intended.
- Toys and other objects should never be allowed inside the unit.
- Bounce away from others and slides, especially the opening.
- Keep your hands and feet away from netting at all times.
- Do not jump onto or off the product, including the slides and supports.
- Thoroughly dry the product before rolling up and storing. Store in a coll dry area away from directly sunlight.
- Place on dry and level ground, at least 6.6 feet (2 meters) away from any other objects.
- Objects to be avoided include, but not limited to: fences, buildings, trees, branches, walls, furniture, sources of water, ceilings.
- Set up as close to power source as possible. Keep blower and power cord away from water, children and traffic. Electrical cord should not be passed under the product and interfere with its operation. Do not use an extension cord.
- Product is heavy, use caution when lifting.
- Stakes should be places straight into the ground, not at an angle and should be driven to ground level to prevent tripping.
- If using indoors, anchor with at least 120 lbs, evenly distributed and tied down to stakeholder.

Questions about the Hop House? Email us at support@rooandyou.ca

HOP HOUSE INSTRUCTIONS & SAFETY RULES

OPERATING RULES



ADULT SET UP ONLY



DO NOT USE IN WINDY
CONDITIONS



NEVER LEAVE CHILDREN
UNATTENDED

NOTE: Air leakage from the product is normal to prevent from over-inflating while under constant airflow. Do not try to seal or repair seams. For fabric tears, use the included patch kit.

WARNING: Follow staking instructions. Users must use and follow staking instructions to ensure proper number of stakes used, soil conditions, and stake installation.

INFLATING, STAKING, AND SET UP: Read warning label on bounce house and blower before set up and use.

ADULT SET UP ONLY

1. Remove Hop House from the box or storage bag and unfold completely onto a flat surface, 6.6 ft (2 meters) away from any objects.
2. Tie fabric tube securely to the blower. Make sure the fabric tube isn't obstructed or twisted in any way and that the cord is not under the unit. Tubes should be kept straight to allow proper airflow.
Please note that Hop House - Slide has an additional, shorter fabric tube that must be securely tied closed to ensure the Hop House properly remains inflated.
3. Plug blower into GFCI protected receptacle.
4. While the bounce house is unoccupied, ensure the blower is away from any debris and switch power ON. Blower should remain on and continuously inflate bounce house while in use and occupied. Airflow through seams is normal.
5. After fully inflating, ensure the bounce house is still 6.6ft (2M) away from objects on all sides and begin staking.*
6. Hop Around!

**Secure the bounce house with 6 provided stakes to flat ground with firm soil or grass. Stakes should be placed straight into the ground, not at an angle and should be driven to ground level to prevent tripping. For indoor use, use at least 120 lbs of anchoring equipment evenly distributed and tied down to stakeholders.*

Questions about the Hop House? Email us at support@rooandyou.ca

HOP HOUSE INSTRUCTIONS & SAFETY RULES

OPERATING RULES

DEFLATING AND STORAGE

Adult Deflation Only

1. Ensure Hop house is unoccupied and turn the blower OFF. Untie fabric tube from blower to allow air to escape. For Hop House - Slide, untie both tubes to allow this.
2. Once the bounce house is deflated completely, remove stakes or indoor anchoring equipment.
3. Allow bounce house to dry completely before rolling up and storing
4. Store in provided bag in a cool dry place away from direct sunlight until next time.

REPAIR

Warning: Repair patches must be applied by an adult only. Keep out of reach of children. Repair patch is not a toy.

Airflow through seams is normal. Do not try to repair on seams.

Repair Patch Instructions

1. Deflate the bounce house, clean the area and allow to dry thoroughly.
2. Cut a portion of the patch to the size needed and round the corners into a circle or a square with four rounded corners.
3. Position the patch over the damaged areas and remove any bubbles. Hand sew the outer edge of the patch using a small needle & thread.

MAINTENANCE

- Store in a cool dry place in provided bag, away from direct sunlight or extreme weather.
- Check product periodically for any damage or potential hazards such as but not limited to: damaged cord, plug, housing, parts, worn or deteriorated fabric. In the event such damage is found, the product should not be used until properly repaired.
- Cleaning: use a dry or damp cloth with a non-flammable, non-toxic cleaner or water. Allow the product to fully dry before rolling up and storing.
- Store blower with cord loosely coiled.

HOP HOUSE INSTRUCTIONS & SAFETY RULES

OPERATING RULES

BLOWER MAINTENANCE

- Check product periodically for any damage or potential hazards.
- To clean, make sure the unit is unplugged and wipe with a damp cloth but never immerse in water.
- When not in use, store the blower inside, unplugged, on a flat stable surface.
- Store cord loosely coiled next to blower.
- Do not operate blower with a damaged cord or plug.
- Do not cover cord and be aware of tripping hazard.

BLOWER INFO

- Do not attempt to service the blower.
- Caution: electrically operated product.
- Warning: use only on GFCI protected receptacles. Use standard grounding standards to prevent electric shock.
- Keep away from water, traffic, fire hazards, or debris including but not limited to leaves and dirt.
- Adult operation only. Keep children away from the blower at all times.
- Do not use an extension cord.
- To reduce the risk of fire or electric shock, do not use this blower with any solid states or speed controlled devices
- Do not drop or hit the blower, this may result in malfunction
- Warning: electrocution risk - keep all electrical lines, radios, speakers, and other electrical devices away from the constant air inflatable. Do not place the constant air inflatable near or under the overhead electrical lines.
- Danger: to prevent electric shock, do not immerse in water, wipe clean with a damp cloth after unplugging the unit.

HOP HOUSE INSTRUCTIONS & SAFETY RULES

OPERATING RULES

KEEP INSTRUCTIONS FOR FUTURE USE.

ONCE PRODUCT IS USED, RETURNS ARE NOT ACCEPTED.

Warning: read all instructions before assembling this unit.

Warning: Failure to follow these instructions can result in serious injury or death.

Caution: Electrically operated product. Blower must be operated by adults only. As with all electronic products, precautions should be observed during handling and use to prevent electric shock. Do not use an extension cord with this product.

Warning: Electrocution Risks: Keep all electrical lines, radios, speakers and other electrical devices away from the bounce house. Do not place the bounce house near or under overhead electrical lines.

Only use on GFCI protected receptacles. Use standard grounding standards to prevent electric shock.



 
Adult supervision required at all times. Do not leave children unattended.




Max # of children
Slide: 1 | Climbing: 1
In total: 3



Do not use or leave out in rain, wind, or extreme weather.

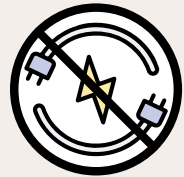

 Do not allow children to touch blower or electrical cord.

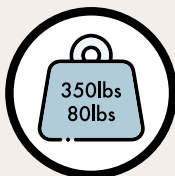

Weight limit total: 350lbs
Individual: 80lbs



 
Prevent choking: do not eat or drink in play area.



No wrestling, rough play, tumbling, or flipping.



No shoes, glasses, or jewelry.

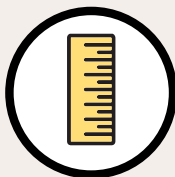

Height limit 5ft.



No hands or feet on net.



No sharp objects.



No head-first sliding.

Questions about the Hop House? Email us at support@rooandyou.ca