


Hello !

Congratulation!
You are about to experience an
excellent product from
agegracefully 


Smart Umbrella CarbonBond

model : #WS-13 #WS-14 #WS-15

Warranty

Limited one year warranty against
manufacturing defects.
Please keep the receipt as proof of purchase.

The Walking Stick and Umbrella can
be used separately

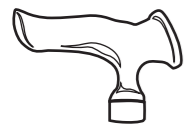


#WS-13

Ergonomic

Handle:


- Ease of use
- Elegantly crafted

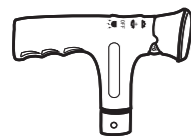

#WS-14

Essential Handle:

- **Manual Alarm**
- LED Headlights
- Safety Red Flashing Lights
- Built-in Rechargeable Battery

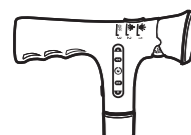

#WS-15

MP3 Handle:

- **Auto Fall-Alarm**
- LED Headlights
- Safety Red Flashing Lights
- Built-in Rechargeable Battery
- MP3 Player
- FM Digital Radio


Using CarbonBond



Self-Standing
Umbrella



Detach Umbrella from
the Self-Standing
Tip.


: Step on the Self-Standing
tip for easy removal.



Open the Umbrella,
and **detach** Walking Stick
from Umbrella.




Insert Walking Stick
into the Self-Standing
Tip.

: Step on the Self-Standing
Tip
for easy alignment.


Opening the umbrella:

Hold the umbrella handle with one hand and the
walking stick handle with the other, push the umbrella
handle forward to open the umbrella fully.

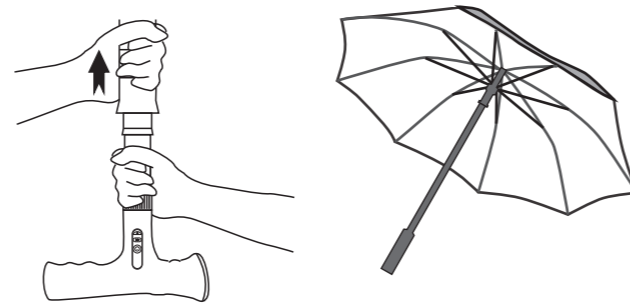

Detaching the walking stick from the umbrella:

1. Press the spring-catch to unlock the
walking stick from the umbrella.
2. Pull the walking stick handle out from the
umbrella tubing.

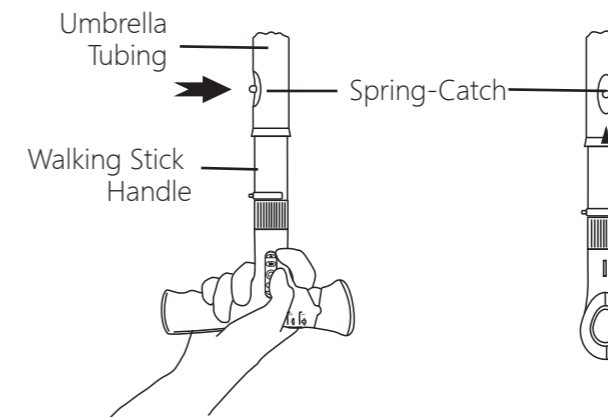

Keeping the walking stick into the umbrella:






Charging

Essential and MP3 model comes complete with USB charging cable. It is recommended that you charge the built-in battery before using it.

- Connect the USB Cable to Charging Port and Power Source.
- Charging indicator emits red light on while charging.
- Charging indicator light turns off when charging is completed.

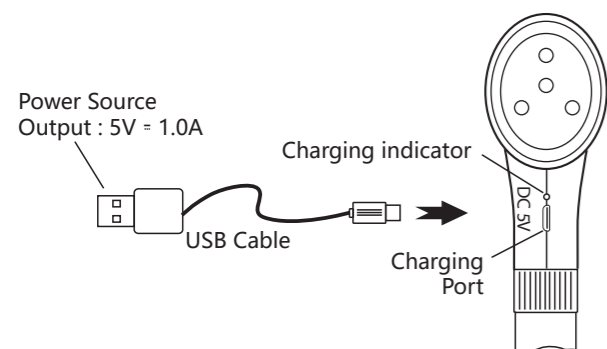

Battery


(Rechargeable Lithium-ion battery : 3.7v 550mAh)

- When the built-in battery is fully charged:
- The LED Headlight can last up to 10 hrs.
- The LED Headlight & Red Flashing Light can last up to 5 hrs.
- The Alarm can last up to 5hrs.
- The MP3 Player/Radio can last up to 5hrs.

⚠ Do not charge battery in damp or wet environment.


Essential Handle #WS -14

Sliding Switches

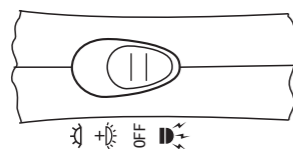

- ☀ LED Headlight
- ☀ Safety LED Headlight & Red Flashing Light
- OFF OFF
- ☀ Alarm

MP3 Handle #WS-15

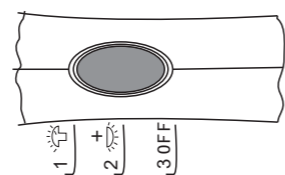

1. LED Lights
2. LED Lights & Red Flashing Lights
3. OFF

Auto Fall-Alarm activation


Press and hold the red button for 3 sec (Beep Sound) to activate the Auto Fall-Alarm.

Alarm will automatically be triggered when the walking stick is in horizontal position.

Press the red button to stop the alarm.


Press and hold the red button again for 3 sec (Beep Sound) to de-activate the Auto Fall-Alarm.

Selection Key:

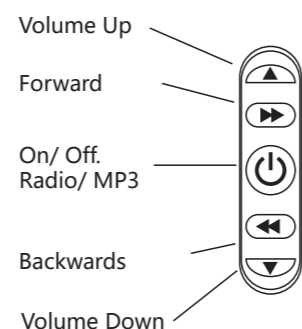

Press **⏻** to switch on the Radio/ MP3 functions.

Press and hold **⏻** to switch between Radio and MP3 mode

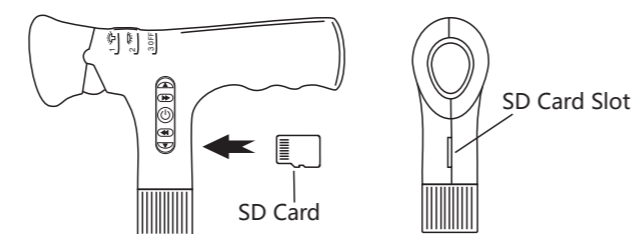

SD Card


The SD Card is located in the SD Card Slot.

Press the SD Card to unlatch it before removal.


Only MP3 format is recognised for the MP3 Player.

LED Head Lights Angle Adjustment

There are 4 different pivoting angle available for adjustment.

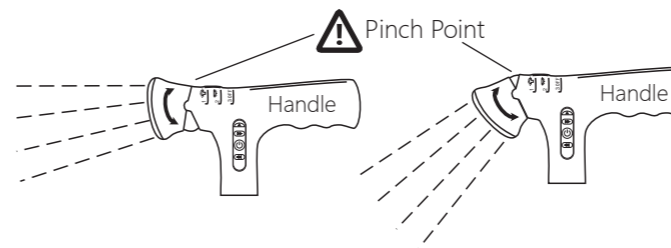


Holding Handle The Right Way

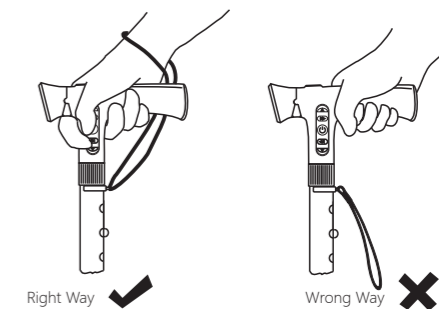


Safety Red Flashing Light

Red flashing light improve visibility of user to traffic

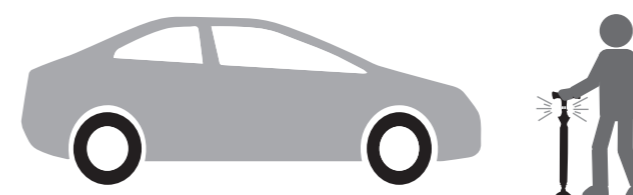

Auto-Detachment in emergency

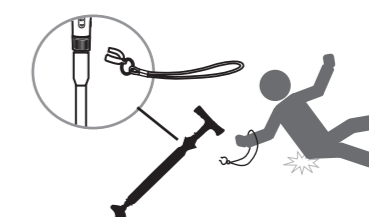

Smart Walking Stick collections developed in Singapore

