

KooWheel D3M Quick Start Guide

User must fully charge remote and board before first ride.

1. Press button 3 times to turn on the remote.
Then turn on the board.

2. LED will be green when board's battery charge is between 40% and 100%. LED will be red when board's battery charge is below 40%. LED will blink red when the board's battery charge is below 12.5%.

3. LED will blink green when the board and the remote are actively connected.

4. LED will be green when remote's battery charge is between 25% and 100%. LED will be red when remote's battery charge is below 25%. LED will blink red when remote's battery charge is below 2.5%.



KOO WHEEL
USA

1-866-469-3698

www.KooWheelElectricSkateboard.com