



**WICKED
BRICK**




PLEASE NOTE:
All acrylic parts have protective film applied on both sides.

Some pieces appear with slightly translucent film, this will need to be removed before assembly.

Ensure all engraved lines face outwards.




INSTRUCTIONS FOR: Display podiums for LEGO® Minifigures

LDS902.3.3 & LDS902.5.3

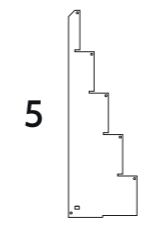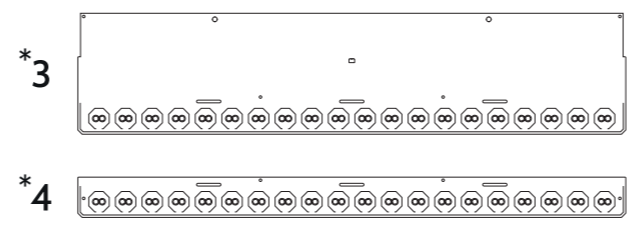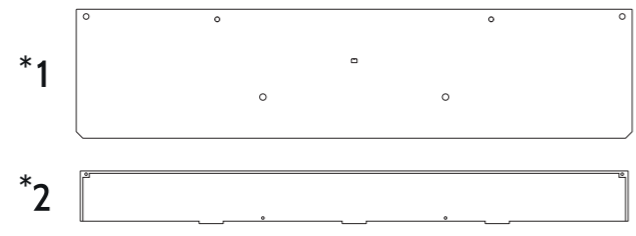

- 1 - Base
- 2 - Backplate
- 3 - Add on
- 4 - Shelf
- 5 - Side panel
- 6 - Cubes and screws

*While the process remains the same, some parts found in LDS902.3.3 and LDS902.5.3 are different widths, therefore requiring additional screws. LDS902.3.3 requires x9 cubes and screws. LDS902.5.3 requires x11 cubes and screw.

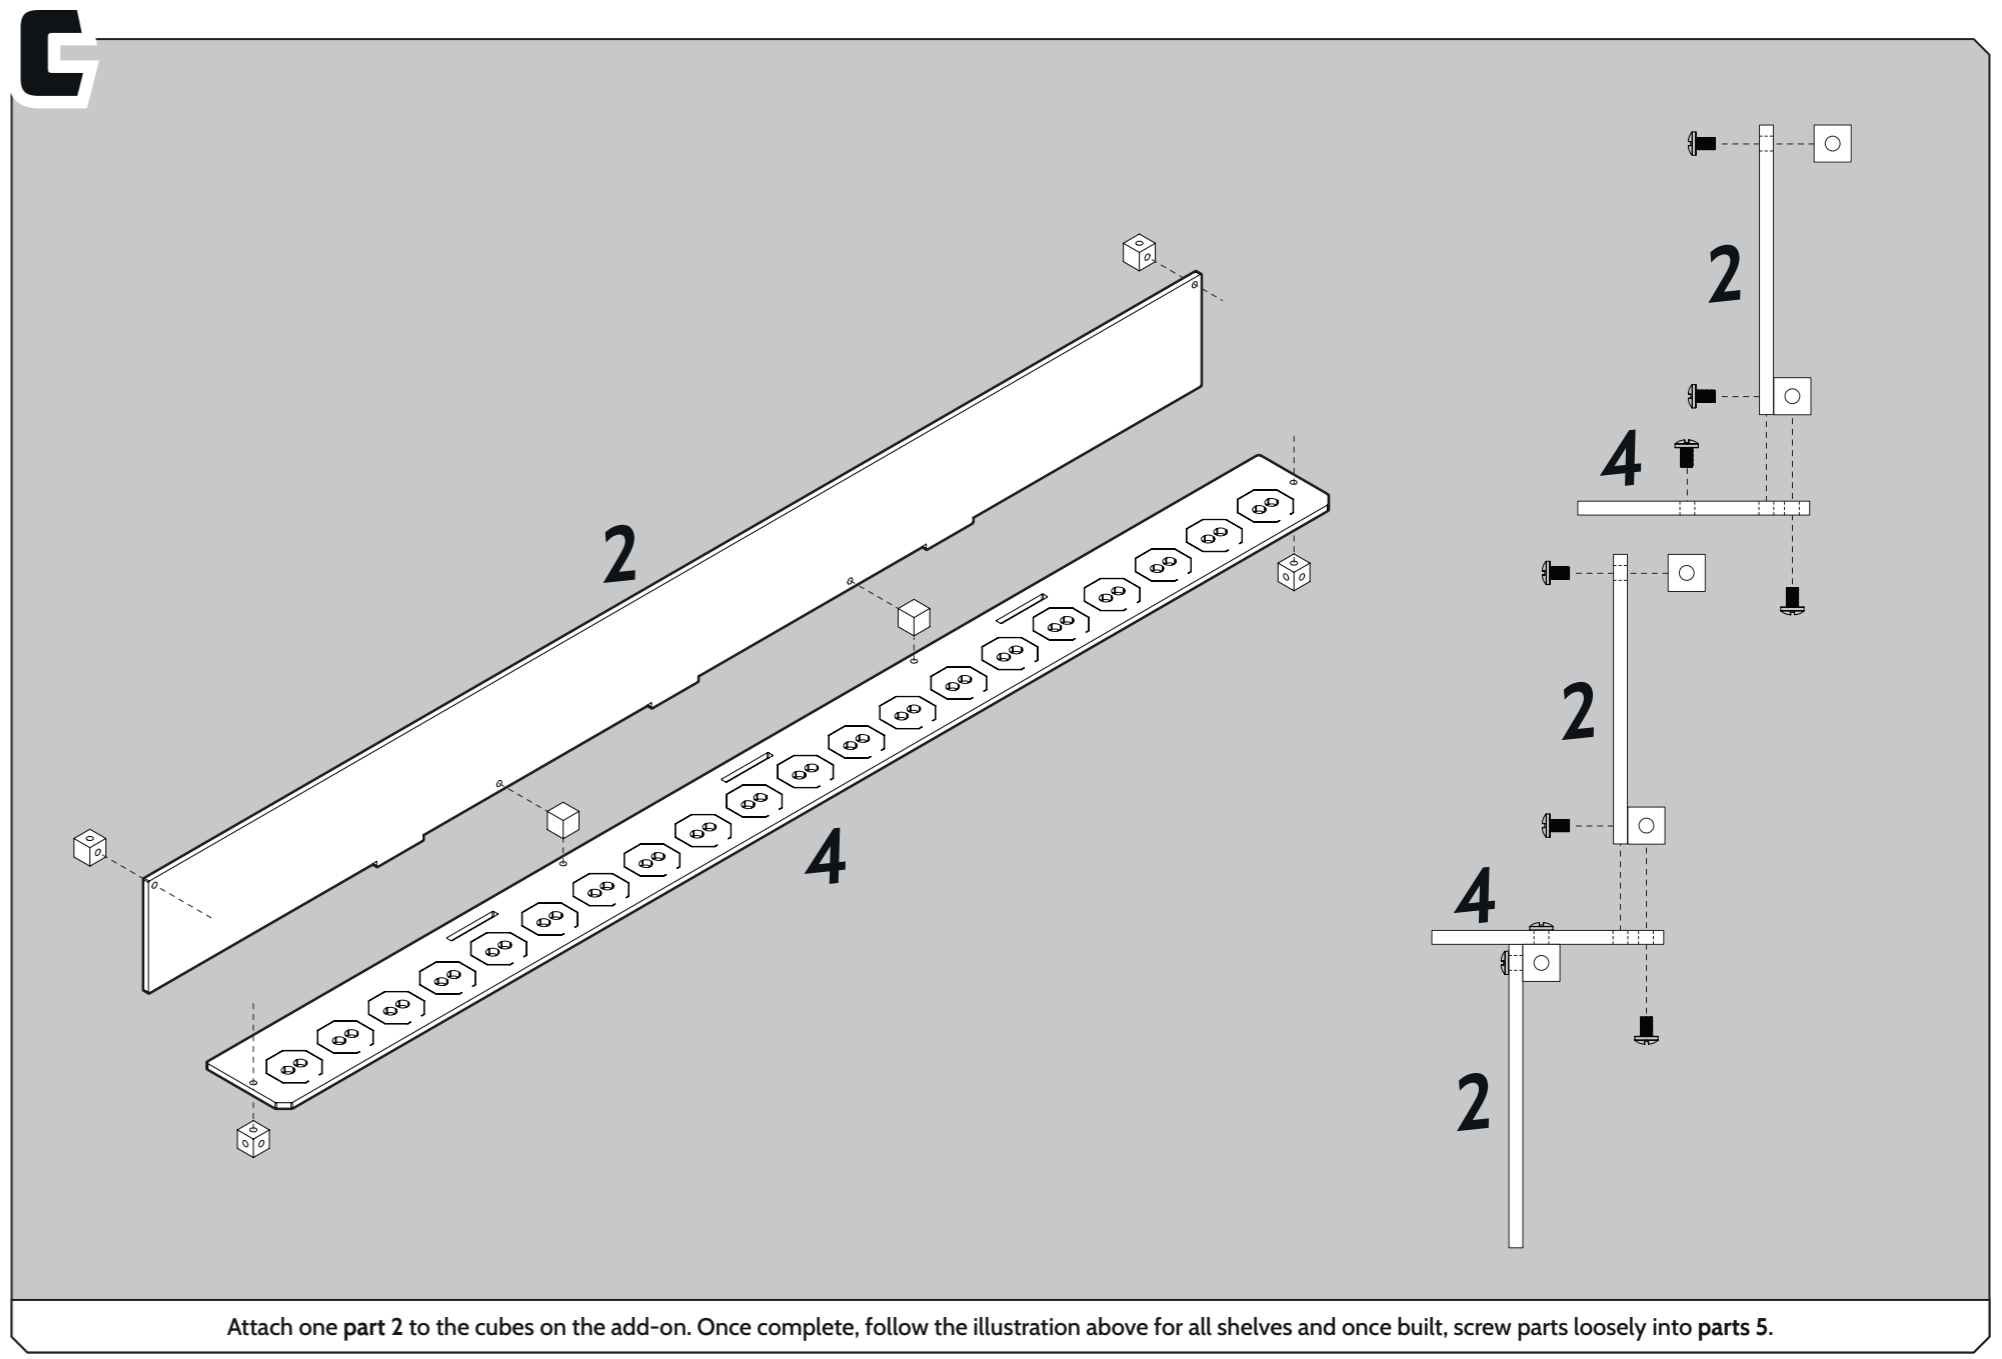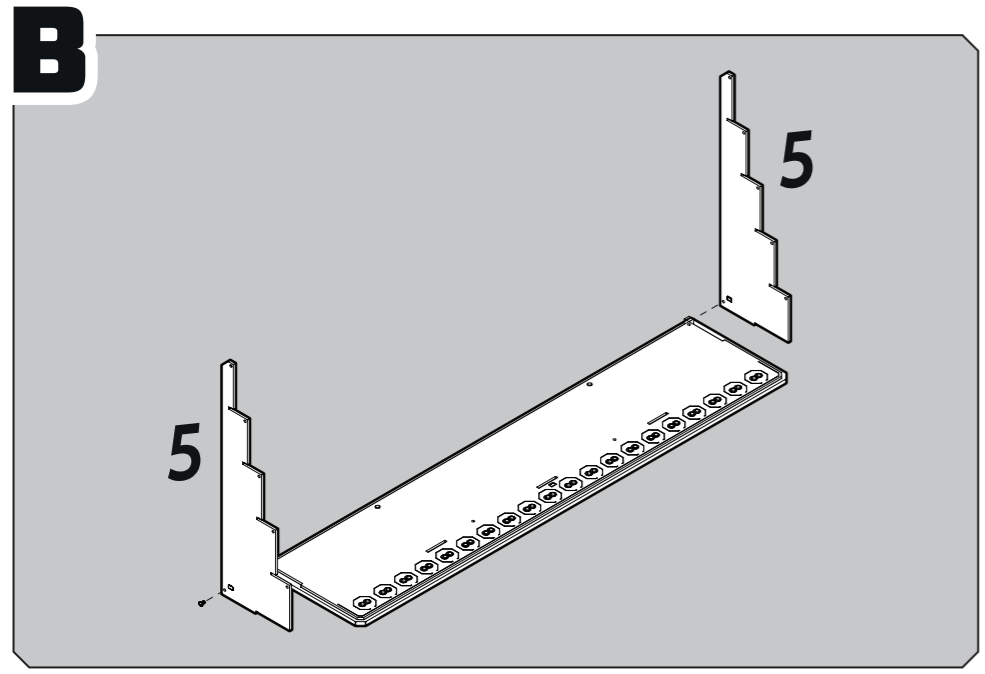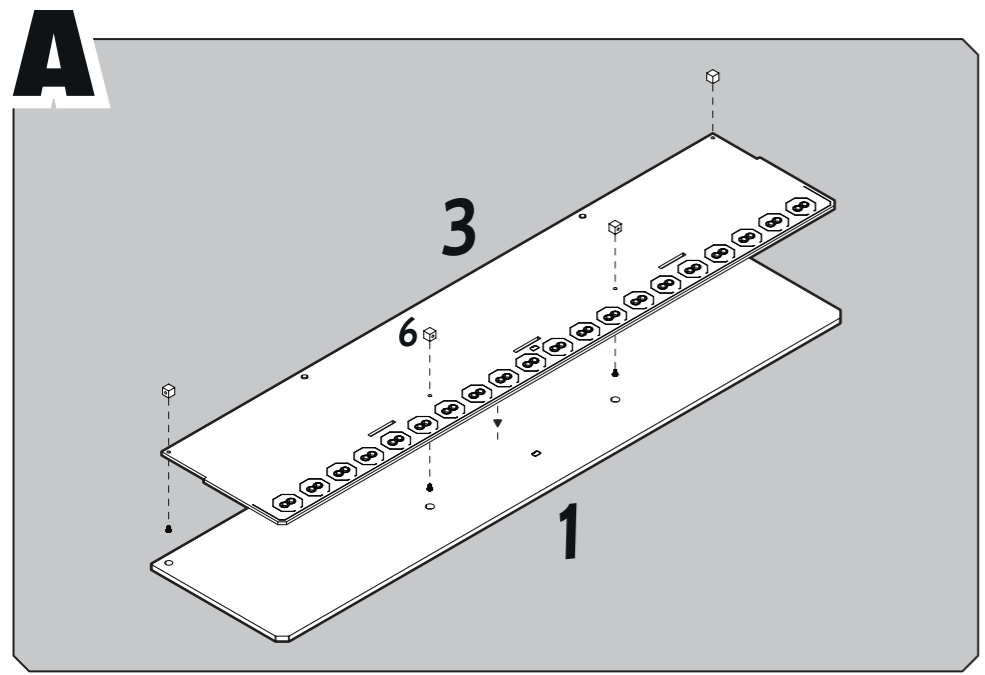

Attach one part 2 to the cubes on the add-on. Once complete, follow the illustration above for all shelves and once built, screw parts loosely into parts 5.



**WICKED
BRICK**

PLEASE NOTE:


All acrylic parts have protective film applied on both sides.

Some pieces appear with slightly translucent film, this will need to be removed before assembly.

Ensure all engraved lines face outwards.

INSTRUCTIONS FOR: Display podiums for LEGO® Minifigures



LDS902.3.3 & LDS902.5.3

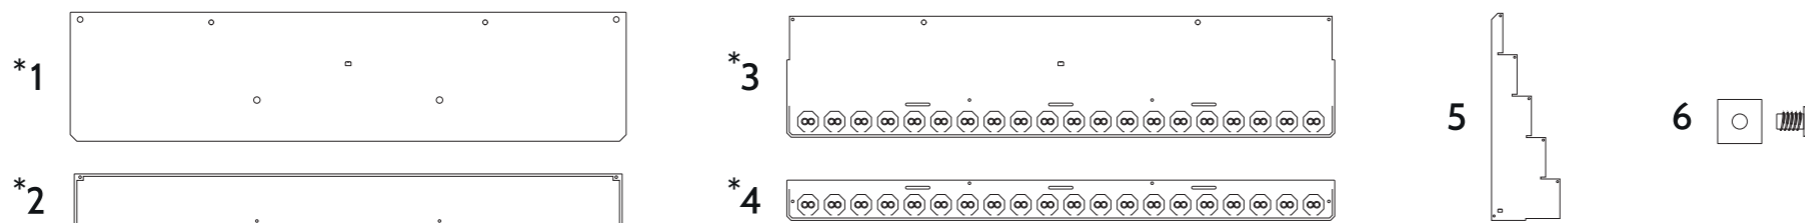


- 1 - Base
- 2 - Backplate
- 3 - Add on
- 4 - Shelf
- 5 - Side panel
- 6 - Cubes and screws

*While the process remains the same, some parts found in LDS902.3.3 and LDS902.5.3 are different widths, therefore requiring additional screws. LDS902.3.3 requires x9 cubes and screws. LDS902.5.3 requires x11 cubes and screw.

D

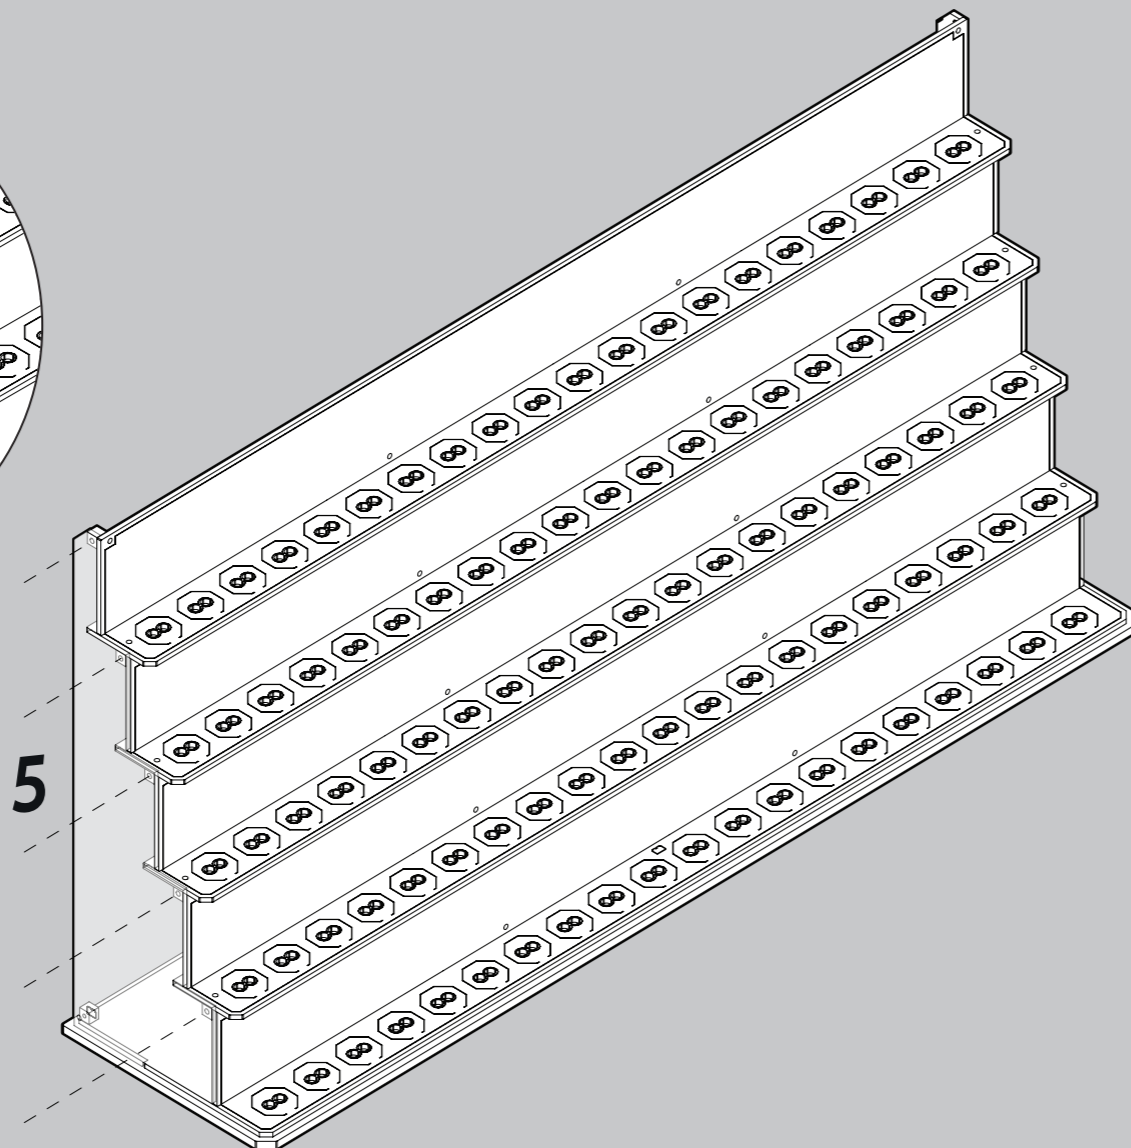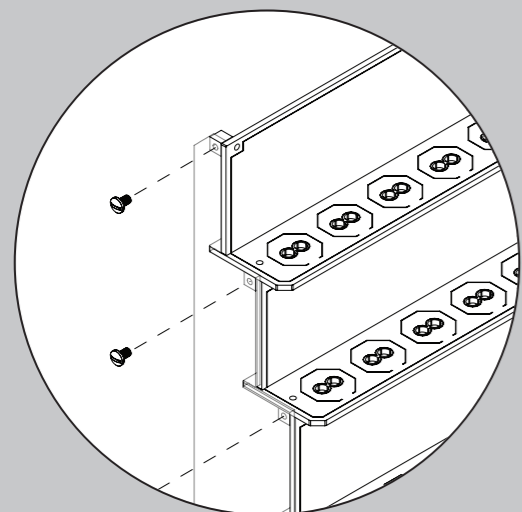

E

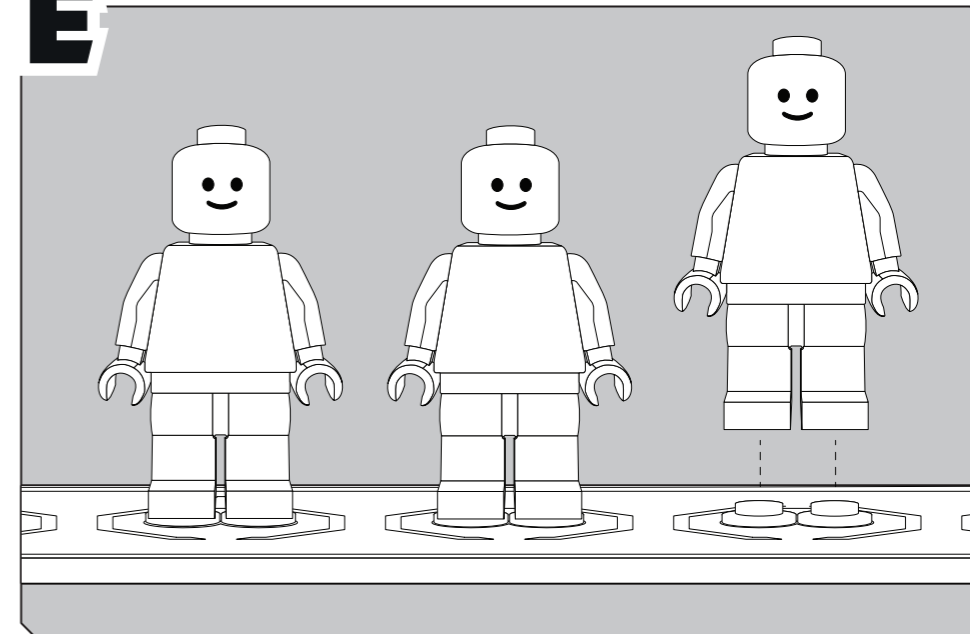

Once all the shelves are attached, tighten the screws on the side panels to secure the shelves in position.