### **PLEASE NOTE:**


All acrylic parts have protective film applied on both sides.

 
Some pieces appear with slightly translucent film, this will need to be removed before assembly.


> Ensure all engraved lines face outwards.


## INSTRUCTIONS FOR: LEGO® Technic Open Wall Mounted Display (.8)


These instructions cover the basic directions for the majority of our LEGO Technic Open Wall mounted Display products. More specific details will be found on your chosen products website listing.

 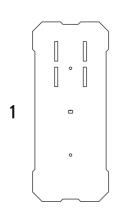




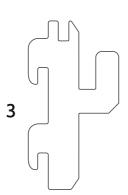

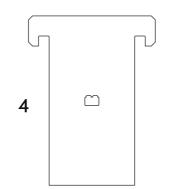

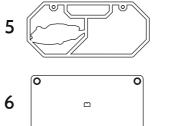





1 - Backplate 7 - Support stem 2 - Add-on 8 - WB plaque mount 3 - Hook stem 9 - Phillip screw & wall plug

4 - Back stem 10 - Felt pads 5 - Plaque 11 - Command strip


6 - LEGO plaque mount (if applicable)

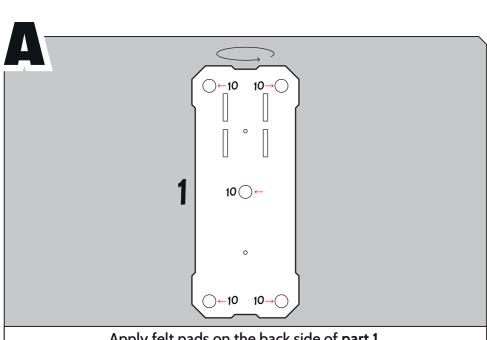




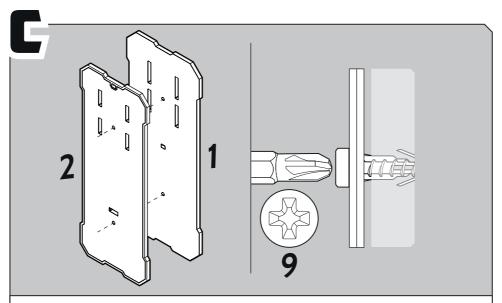

Put part 1 & 2 together and screw into the wall using marking made step B. Do not overtighten screws to avoid cracking of the acrylic.

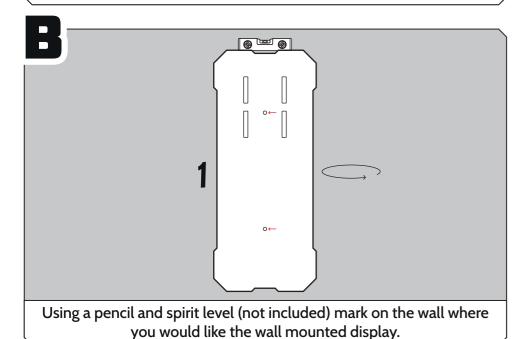

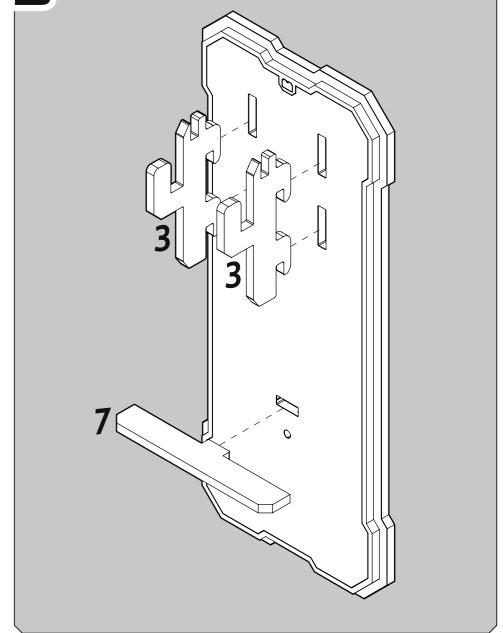

# WICKED BRICK

### PLEASE NOTE:

All acrylic parts have protective film applied on both sides.


Some pieces appear with slightly translucent film, this will need to be removed before assembly.

 
Ensure all engraved lines face outwards.


## INSTRUCTIONS FOR: LEGO® Technic Open Wall Mounted Display (.8)


These instructions cover the basic directions for the majority of our LEGO Technic Open Wall mounted Display products.


More specific details will be found on your chosen products website listing.

 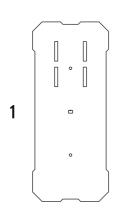




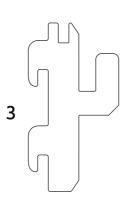

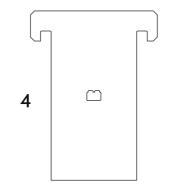

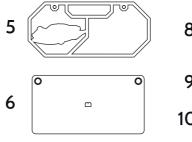





1 - Backplate
2 - Add-on
3 - Hook stem
4 - Back stem
7 - Support stem
8 - WB plaque mount
9 - Phillip screw & wall plug
10 - Felt pads

5 - Plaque 11 - Command strip6 - LEGO plaque mount (if applicable)

