



QS-TEMP-EXT

IMPORTANT:

When using the external temperature probe to monitor fridge temperatures, the probe installed inside fridge and the control housing should be installed outside the fridge.

Specifications

- QS-TEMP-EXT: External temperature sensor probe
- Powered by 2x AAA batteries (supplied)
- Probe cable length: 30cm minimum, 4m maximum (QS-TEMP-EXT only)
- Minimum temperature: -20°C
- Maximum temperature: +90°C
- Radio frequency: 868MHz
- Distance: 30m through walls and floors; 100m line-of-sight
- Measurements: 105mm (L) x 65mm (W) x 20mm (H)
- Transmits windows: 1 minute or 15 minutes (default is set to 15 minutes). Unit wakes up to transmit data.

Notes

- Maximum and minimum temperature thresholds can be set for email alerting
- Unit will check-in every 15 minutes
- Note the address on the unit starting with @, as this will be required for setup
- This product is intended for use in conjunction with the WiFi Bridge/Gateway for monitoring

Setup

- Once the Temperature Monitor is powered up, follow the WiFi Bridge/Gateway instructions for online setup.