



## Note

SWITCHED NEUTRAL AS PIR INPUT ONLY

## Linking

1. Hold LINK/TEST BUTTON in until LED flashes, then release.
2. Press the button on the transmitter....done
3. Repeat steps 1 & 2 for each additional transmitter button required to be linked.

### To unlink:

1. To Unlink a single transmitter button: Repeat steps 1 & 2 of the linking procedure.
2. To clear all links in receiver: Hold the LINK/TEST BUTTON in for approx.. 10 seconds until the LED is ON solid, then release.

## Setup

- Once the relay is powered up and connected to the load to be switched, follow the QS-GSM-CLOUD instructions for online setup.